

Smart
connections.

Operating manual

INVEOR Drive Controller

Legal notice

KOSTAL Industrie Elektrik GmbH
An der Bellmerei 10
58513 Lüdenscheid
Germany

Exclusion of liability

All names, trademarks, product names or other designations given in this manual may be legally protected even if this is not labelled as such (e.g. as a trademark). KOSTAL assumes no liability for their free usage.

The illustrations and texts have been compiled with great care. However, the possibility of errors cannot be ruled out. The compilation is made without any guarantee.

General note on gender equality

KOSTAL is aware of how language impacts on gender equality and always makes an effort to reflect this in documentation. Nevertheless, for the sake of readability we are unable to use non-gender-specific terms throughout and use the masculine form instead.

© 2017 KOSTAL Industrie Elektrik GmbH

All rights reserved by KOSTAL, including those of reproduction by photocopy and storage in electronic media. Commercial use or distribution of the texts, displayed models, diagrams and photographs appearing in this product is not permitted. This manual may not be reproduced, stored, transmitted or translated in any form or by means of any medium - in whole or in part - without prior written permission.

Contents

| | | |
|-----------|---|-----------|
| 1. | General information | 7 |
| 1.1 | Information about documentation | 8 |
| 1.1.1 | Other applicable documents..... | 8 |
| 1.1.2 | Storing the documentation | 9 |
| 1.2 | Notes in this manual..... | 9 |
| 1.2.1 | Warnings | 9 |
| 1.2.2 | Warning symbols used | 10 |
| 1.2.3 | Signal words | 10 |
| 1.2.4 | Information notes | 11 |
| 1.3 | Symbols used in this manual | 12 |
| 1.4 | Labels on the drive controller..... | 13 |
| 1.5 | Qualified staff | 14 |
| 1.6 | Proper use..... | 14 |
| 1.7 | Responsibility..... | 15 |
| 1.8 | CE marking..... | 15 |
| 1.9 | Safety instructions..... | 16 |
| 1.9.1 | General information | 16 |
| 1.9.2 | Transport & storage | 18 |
| 1.9.3 | Long-term storage | 18 |
| 1.9.4 | Information about commissioning | 19 |
| 1.9.5 | Instructions concerning operation | 20 |
| 1.9.6 | Maintenance and inspection | 22 |
| 1.9.7 | Repairs | 23 |
| 2. | Overview of the drive controller..... | 24 |
| 2.1 | Model description | 25 |
| 2.1.1 | Model description (valid until end of February 2016) | 25 |
| 2.1.2 | Model description (current) | 26 |
| 2.2 | Scope of delivery | 27 |
| 2.3 | MMI*/connecting cable PIN assignment..... | 28 |
| 2.4 | Description of the INVEOR drive controller | 28 |
| 3. | Installation | 29 |
| 3.1 | Safety instructions for installation | 30 |
| 3.2 | Recommended preliminary fuses / line protection..... | 30 |
| 3.3 | Installation requirements..... | 31 |
| 3.3.1 | Suitable ambient conditions..... | 31 |
| 3.3.2 | Suitable installation location for the motor-integrated drive controller..... | 32 |
| 3.3.3 | Basic connection versions | 33 |
| 3.3.4 | Short circuit and ground protection..... | 36 |
| 3.3.5 | Wiring instructions..... | 37 |
| 3.3.6 | Preventing electromagnetic interferences | 40 |

| | | |
|-----------|---|-----------|
| 3.4 | Installing the drive controller integrated in the motor | 40 |
| 3.4.1 | Mechanical installation..... | 40 |
| 3.4.2 | Power connection | 51 |
| 3.4.3 | Connections for brake resistor | 57 |
| 3.4.4 | Control connections X5, X6, X7 | 57 |
| 3.4.5 | Connection diagram..... | 64 |
| 3.5 | Installing the wall-mounted drive controller | 65 |
| 3.5.1 | Suitable installation location for wall mounting | 65 |
| 3.5.2 | Mechanical installation sizes A - C | 66 |
| 3.5.3 | Mechanical installation of size D..... | 71 |
| 3.5.4 | Power connection | 79 |
| 3.5.5 | Brake chopper | 80 |
| 3.5.6 | Control connections..... | 80 |
| 3.6 | Disassembly and assembly of the INVEOR fan, size "D" | 80 |
| 3.6.1 | Fan disassembly | 81 |
| 3.6.2 | Fan assembly..... | 83 |
| 4. | Commissioning | 86 |
| 4.1 | Safety instructions for commissioning | 87 |
| 4.2 | Communication..... | 88 |
| 4.3 | Block diagram..... | 90 |
| 4.4 | Commissioning steps..... | 91 |
| 4.4.1 | Commissioning using the PC:..... | 91 |
| 4.4.2 | Commissioning using PC, combined with MMI option | 92 |
| 5. | Parameters..... | 94 |
| 5.1 | Safety instructions for working with parameters..... | 95 |
| 5.2 | General information on parameters | 95 |
| 5.2.1 | Explanation of operating modes..... | 95 |
| 5.2.2 | Structure of the parameter tables..... | 99 |
| 5.3 | Application parameters..... | 100 |
| 5.3.1 | Basic parameter..... | 100 |
| 5.3.2 | Fixed frequency..... | 109 |
| 5.3.3 | Motor potentiometer | 110 |
| 5.3.4 | PID process controller | 112 |
| 5.3.5 | Analogue inputs | 117 |
| 5.3.6 | Digital inputs | 120 |
| 5.3.7 | Analogue output | 121 |
| 5.3.8 | Digital outputs..... | 122 |
| 5.3.9 | Relay | 124 |
| 5.3.10 | Virtual output | 127 |
| 5.3.11 | External fault | 130 |
| 5.3.12 | Motor current limit | 130 |
| 5.3.13 | Stall detection | 132 |
| 5.3.14 | Field bus | 135 |

| | | |
|------------|---|------------|
| 5.4 | Performance parameters..... | 137 |
| 5.4.1 | Motor data..... | 137 |
| 5.4.2 | I^2t | 141 |
| 5.4.3 | Switching frequency..... | 142 |
| 5.4.4 | Controller data | 142 |
| 5.4.5 | Quadratic characteristic curve | 145 |
| 5.4.6 | Synchronous motor controller data..... | 146 |
| 6. | <i>Error detection and troubleshooting.....</i> | 148 |
| 6.1 | List of the LED flash codes for error recognition | 150 |
| 6.2 | List of errors and system errors | 151 |
| 7. | <i>Disassembly and disposal.....</i> | 156 |
| 7.1 | Drive controller disassembly | 157 |
| 7.2 | Information on correct disposal..... | 157 |
| 8. | <i>Technical data</i> | 158 |
| 8.1 | General data | 159 |
| 8.1.1 | General technical data for 400V devices | 159 |
| 8.1.2 | General technical data for 230 V devices | 160 |
| 8.1.3 | Spezifikation der Schnittstellen | 161 |
| 8.2 | Derating of output power..... | 162 |
| 8.2.1 | Derating due to increased ambient temperature | 162 |
| 8.2.2 | Derating due to installation altitude | 164 |
| 8.2.3 | Derating due to switching frequency | 165 |
| 9. | <i>Optional accessories.....</i> | 166 |
| 9.1 | Adapter plates | 167 |
| 9.1.1 | Motor adapter plates..... | 167 |
| 9.1.2 | Motor adapter plates (specific)..... | 170 |
| 9.1.3 | Wand adapter plates (standard)..... | 171 |
| 9.2 | Foil keypad | 174 |
| 9.3 | MMI handheld controller including a 3 m RJ9 connection cable with M12 plug..... | 178 |
| 9.4 | PC communication cable USB on M12/RS485 plug (converter integrated)..... | 178 |
| 10. | <i>Approvals, standards and guidelines</i> | 179 |
| 10.1 | EMC limit classes | 180 |
| 10.2 | Classification acc. to IEC/EN 61800-3 | 180 |
| 10.3 | Standards and guidelines | 181 |
| 10.4 | UL approval | 182 |
| 10.4.1 | UL Specification (English version)..... | 182 |
| 10.4.2 | Homologation CL (Version en française)..... | 184 |

| | | |
|------------|--|------------|
| 11. | Quickstart guide | 186 |
| 11.1 | Quickstart guide..... | 187 |
| 11.2 | Quickstart guide for synchronous motors..... | 188 |
| 12. | Index | 189 |

1. General information

| | | |
|-------|---|----|
| 1.1 | Information about documentation | 8 |
| 1.1.1 | Other applicable documents..... | 8 |
| 1.1.2 | Storing the documentation | 9 |
| 1.2 | Notes in this manual..... | 9 |
| 1.2.1 | Warnings | 9 |
| 1.2.2 | Warning symbols used | 10 |
| 1.2.3 | Signal words..... | 10 |
| 1.2.4 | Information notes | 11 |
| 1.3 | Symbols used in this manual | 12 |
| 1.4 | Labels on the drive controller..... | 13 |
| 1.5 | Qualified staff | 14 |
| 1.6 | Proper use..... | 14 |
| 1.7 | Responsibility..... | 15 |
| 1.8 | CE marking..... | 15 |
| 1.9 | Safety instructions..... | 16 |
| 1.9.1 | General information | 16 |
| 1.9.2 | Transport & storage | 18 |
| 1.9.3 | Long-term storage | 18 |
| 1.9.4 | Information about commissioning | 19 |
| 1.9.5 | Instructions concerning operation | 20 |
| 1.9.6 | Maintenance and inspection | 22 |
| 1.9.7 | Repairs | 23 |

Thank you for choosing an INVEOR drive controller from KOSTAL Industrie Elektrik GmbH!
Our INVEOR drive controller platform is designed to be universally usable with all common motor types.

If you have any technical questions, please call our central service hotline:

Tel.: +49 (0)2331 80 40-848

Monday to Friday: 7 am to 5 pm (UTC/GMT +1)

Fax: +49 (0)2331 80 40-602

E-mail: INVEOR-service@kostal.com

Website address

www.kostal-industrie-elektrik.com

1.1 Information about documentation

The following information explains how to navigate through the documentation.

Read this manual carefully in its entirety. It contains important information for operating the INVEOR.

We assume no liability for any damage resulting from non-observance of this manual.

This manual is an integral part of the product and applies exclusively to the INVEOR from KOSTAL Industrie Elektrik GmbH.

Provide the operator of the system with this manual so it is available when needed.

1.1.1 Other applicable documents

This refers to all manuals that describe how to operate the drive controller system and any other manuals for the equipment used. Download the 3D files (.stp) for INVEOR and adapter plates from www.kostal-industrie-elektrik.com.

A description of parameters is available for download (www.kostal-industrie-elektrik.com) for parametrising the drive controller system. In the download, you will find all the information required for correct parameterisation.

1.1.2 Storing the documentation

Store this operating manual and all other applicable documents carefully so they are available when needed.

1.2 Notes in this manual

1.2.1 Warnings

The warnings refer to life-threatening dangers. Serious injuries possibly resulting in death may occur.

Each warning consists of the following elements:

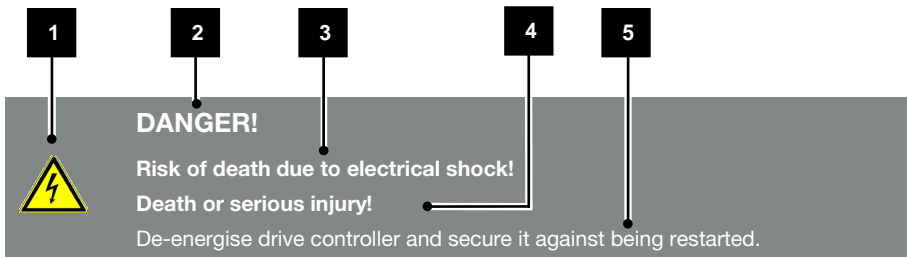





Fig. 1: Structure of the warnings

- 1 Warning symbol
- 2 Signal word
- 3 Type of danger and its source
- 4 Possible consequence(s) of failure to comply
- 5 Corrective actions

1.2.2 Warning symbols used

| Symbol | Meaning |
|---|--|
|  | Danger |
|  | Danger due to electrical shock and discharge |
|  | Danger due to electromagnetic fields |

1.2.3 Signal words

Signal words are used to identify the severity of the danger.

DANGER

Indicates a direct hazard with a high level of risk, which, if not avoided, will result in death or serious injury.

WARNING


Indicates a hazard with a moderate level of risk, which, if not avoided, will result in death or serious injury.

CAUTION

Indicates a hazard with a low level of risk, which, if not avoided, may result in minor or slight injury or property damage.

1.2.4 Information notes

Information notes contain important instructions for the installation and problem-free operation of the drive controller. These must be followed at all times. The information notes also point out that failure to observe can result in damage to property or financial damages.





IMPORTANT INFORMATION



The drive controller may only be assembled, operated, maintained and installed by trained and qualified staff.

Fig. 2: Example of an information note

Symbols within the information notes

| Symbol | Meaning |
|---|-----------------------------|
|  | Important information |
|  | Damage to property possible |

Other notes

| Symbol | Meaning |
|---|---------------|
|  | INFORMATION |
|  | Enlarged view |

1.3 Symbols used in this manual

| Symbol | Meaning |
|----------------|---|
| 1., 1., 3. ... | Consecutive steps in a handling instruction |
| ➔ | Effect of a handling instruction |
| ✓ | Final result of a handling instruction |
| ■ | List |

Fig. 3: Symbols and icons used

Abbreviations used

| Abbreviation | Explanation |
|--------------|-------------|
| Tab. | Table |
| Fig. | Figure |
| It. | Item |
| Ch. | Chapter |

1.4 Labels on the drive controller

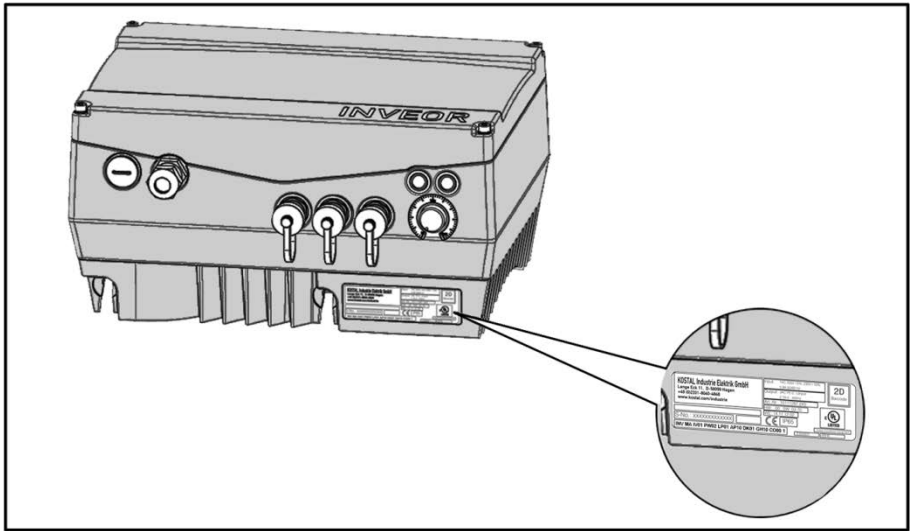


Fig. 4: Labels on the drive controller

Signs and labels are affixed to the drive controller. These may not be altered or removed.

| Symbol | Meaning |
|--------|--|
| | Danger due to electrical shock and discharge |
| | Danger due to electrical shock and discharge. Wait two minutes (discharge time of the capacitors) after shut-down |
| | Additional earth connection |
| | Observe and read operating manual |

1.5 Qualified staff

In the context of this operating manual, qualified staff refers to electronics specialists who are familiar with the installation, assembly, commissioning and operation of the drive controller and the dangers involved, and whose specialist training and knowledge of relevant standards and regulations provide them with the necessary abilities.

1.6 Proper use

If the device is installed in a machine, drive controllers may not be commissioned (i.e. intended operation may not begin) until it has been determined that the machine complies with the regulations of EC Directive 2006/42/EC (Machinery Directive); DIN EN 60204-1; VDE 0113-1 must be observed.

Commissioning (i.e. beginning intended operation) is only permitted if the EMC Directive (2014/30/EU) is complied with.

The harmonised standards of DIN EN 50178; VDE 0160 must be applied for this drive controller along with DIN EN 61439-1/DIN EN 61439-2; VDE 0660-600.

This drive controller may not be operated in areas where there is a danger of explosion!

Repairs may only be performed by authorised repair bodies. Independent and unauthorised intervention may result in death, injury or property damage. The warranty provided by KOSTAL will be invalidated in such cases.



IMPORTANT INFORMATION

External mechanical loads on the housing are not permitted!



IMPORTANT INFORMATION

Using drive controllers in equipment that is not fixed is considered as an exceptional environmental condition and is only permitted if allowed by the standards and guidelines applicable on site.

1.7 Responsibility

As a basic principle, electronic devices are not fail-safe. The operator and/or the contractor setting up the machine or system is responsible for ensuring that the drive switches to a safe state if the device fails.

The “Electrical equipment of machines” section in DIN EN 60204-1; VDE 0113-1, “Safety of machinery” describes the safety requirements for electrical control units. These are provided for the safety of people and machines and must be observed in order to retain the functional capability of the machine or system.

An emergency stop feature does not have to result in the voltage supply to the drive being switched off. To avoid dangerous situations, it may be useful for individual drives to remain operational or for specific safety procedures to be initiated. The effectiveness of emergency stop measures is evaluated by means of a risk assessment for the machine or system and its electrical equipment, and is determined by selecting a circuit category according to DIN EN 13849 “Safety of machinery – Safety-related parts of control systems”.

1.8 CE marking

KOSTAL Industrie Elektrik GmbH hereby declares that the drive controller described in this document complies with the basic requirements and other relevant conditions of the directives listed below.

- Directive 2014/30/EU
(on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC)).
- Directive 2014/35/EU
(on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits – for short: Low Voltage Directive).
- Directive 2011/65/EU
(to limit the use of certain hazardous substances in electrical and electronic equipment – in short: RoHS)

You will find a detailed EU Declaration of Conformity at:

<https://www.kostal-industrie-elektrik.com/en-gb/downloads/download-drives>

1.9 Safety instructions

The following warnings, precautionary measures and information are provided for your safety and serve to prevent damage to the drive controller and the components connected to it. This chapter contains warnings and information that are generally applicable when handling drive controls. They are split into general information, transport & storage and dismantling & disposal.

Specific warnings and comments that apply to specific activities can be found at the start of the appropriate chapters and are repeated or added to at various critical points in these chapters.

Please read this information carefully as it is provided for your personal safety and will also prolong the life of the drive controller and connected devices.

1.9.1 General information



IMPORTANT INFORMATION

Carefully read this operating manual and the warning signs affixed to the drive controller before installation and commissioning. Make sure that all warning signs on the drive controller are legible; replace any missing or damaged signs.

They contain important information on the installation and operation of the drive controller. In particular, note the information in the "Important information" chapter. KOSTAL Industrie Elektrik GmbH assumes no liability for damages arising from the non-observance of this operating manual.

This operating manual is an integral part of the product. It applies exclusively to the drive controller from KOSTAL Industrie Elektrik GmbH.

Keep the operating manual close to the drive controller so it is easily accessible to all users.

**IMPORTANT INFORMATION**

The drive controller can only be operated safely if the required environmental conditions listed in the “Suitable environmental conditions” chapter are met.

**DANGER!**

Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

**DANGER!**

Risk of death due to electrical shock!

Death or serious injury!

Always ground the device in accordance with DIN EN 61140; VDE 0140, NEC and other relevant standards.

The drive controller must be grounded with the motor according to relevant regulations. Non-compliance may result in death or serious injury.

If spring elements are not used when assembling the adapter plate, there must be an extra connection between the motor and drive controller to produce a correct protective conductor connection.

**DANGER!**

Risk of death due to revolving mechanical parts!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

**DANGER!**

Risk of death due to fire or electrical shock!

Death or serious injury!

Always use the drive controller as intended.

Do not modify the drive controller.

Only use spare parts and accessories sold or recommended by the manufacturer.

During assembly, ensure a sufficient distance from neighbouring parts.

CAUTION!

Risk of burns from hot surfaces!

Serious burns to the skin from hot surfaces!

Allow the drive controller's cooling elements to cool sufficiently.

1.9.2 Transport & storage

**Damage to property possible**

Risk of damage to drive controller!

Risk of damage to drive controller from improper transport, storage, installation and assembly!

Transport the drive controller properly in its original packaging on a pallet.

Always store the drive controller properly.

Only allow qualified staff to undertake installation and assembly.

1.9.3 Long-term storage

**IMPORTANT INFORMATION**

If devices with a single-phase feed-in have been in storage for more than 2 years, the following regeneration process is required before installation / use under the nominal conditions:

- The drive controller must be connected to supply voltage (+/- 3 %) for 30 minutes without the device being loaded. This applies to the motor connection as well as possible consumers and connections to the application.
- Perform this process once before commissioning.

In all cases, observe the general requirements for storing drive controllers!

1.9.4 Information about commissioning



DANGER!

Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

The following terminals may lead to dangerous currents even when the motor is not running:

- Supply terminals X1: L1, L2, L3
 - Motor connection terminals X2: U, V, W
 - Connecting terminals X6, X7: Relay contacts for relays 1 and 2
- PTC terminals T1/ T2



IMPORTANT INFORMATION

- Only use mains connections with hardwiring.
- Ground the drive controller in accordance with DIN EN 61140; VDE 0140-1.
- The INVEOR may have touch currents of $> 3.5 \text{ mA}$.
In accordance with DIN EN 61800-5-1, an extra protective grounding conductor of the same cross-section as the original protective grounding conductor should therefore be fitted. A second protective grounding conductor can be connected under the mains supply (position marked with a ground symbol) on the outside of the device. A suitable M6 x 12 screw (4.0 Nm torque) is provided with the adapter plate.
- If three-phase frequency inverters are used, it is not permitted to use standard type A FI protection switches, or RCDs (residual current-operated protective devices) to protect against direct or indirect contact. According to DIN VDE 0160 and EN 50178, the FI protection switch must be universal current sensitive (RCD type B).

**IMPORTANT INFORMATION**

- If different voltages are used (e.g. +24 V/230 V), crossing cable runs are not permitted under any circumstances. The operator must also ensure compliance with the applicable regulations (e.g. double or reinforced insulation acc. to DIN EN 61800-5-1).
- The drive controller contains components susceptible to electrical discharge. These may be destroyed through improper handling. Therefore, precautionary measures against electrostatic charges must be taken when work is performed on these components.

1.9.5 Instructions concerning operation**DANGER!**

Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

DANGER!

Risk of death due to revolving mechanical parts!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

**IMPORTANT INFORMATION**

Observe the following instructions during operation:

- The drive controller runs at high voltages.
- When electrical devices are operated, some of their parts are always subject to dangerous voltage.
- Emergency stop equipment according to DIN EN 60204-1; VDE 0113-1:2007-06 must function in all the control device's operating modes. Resetting the emergency stop equipment may not result in uncontrolled or undefined restarting.
- In order to ensure safe disconnection from the mains, the mains cable has to be fully disconnected from the drive controller in a synchronous manner.
- A pause of at least 1 to 2 mins must be observed between consecutive mains activations for devices with a single-phase feed and for size D (11 to 22 kW).
- A pause of at least 3 sec. must be observed between consecutive grid connections for devices with three-phase feed-in in sizes A - C (0.55 to 7.5 kW).
- Certain parameter settings may result in the drive controller restarting automatically after the supply voltage has failed.

**Damage to property possible**

If the information is not observed, the drive controller could be damaged and destroyed during subsequent commissioning.

Observe the following instructions during operation:

- The motor parameters, especially the I^2t settings, have to be configured properly to provide proper motor overload protection.
- The drive controller has internal motor overload protection. See parameters 33.010 and 33.011.
 I^2t is ON by default. Motor overload protection can also be ensured via an external PTC.

The drive controller may not be used as "Emergency stop equipment" (see DIN EN 60204-1; VDE 01131:2007-06).

1.9.6 Maintenance and inspection

The drive controllers may only be maintained and inspected by electricians with recognised training. Unless explicitly described in this operating manual, changes to hardware and software may only be undertaken by KOSTAL experts or persons authorised by KOSTAL.

Cleaning the drive controllers

Drive controllers are maintenance-free if operated as intended. If the air contains dust, the cooling fins of the motor and drive controller have to be cleaned regularly. If devices are fitted with integrated fans (optional for size C, standard for size D), we would recommend cleaning with compressed air.

Measurement of insulation resistance on control part

An insulation test on the control card's input terminals is not permitted.

Measurement of insulation resistance on power part

The power part of an INVEOR is tested with 2.02 kV in the course of series testing.

Should the insulation resistance have to be measured during a system test, this can be done under the following conditions:

- an insulation test can be undertaken for the power part alone,
- to avoid excessively high voltages, all the INVEOR's connection cables must be disconnected before testing,
- a 500 V DC insulation tester should be used.

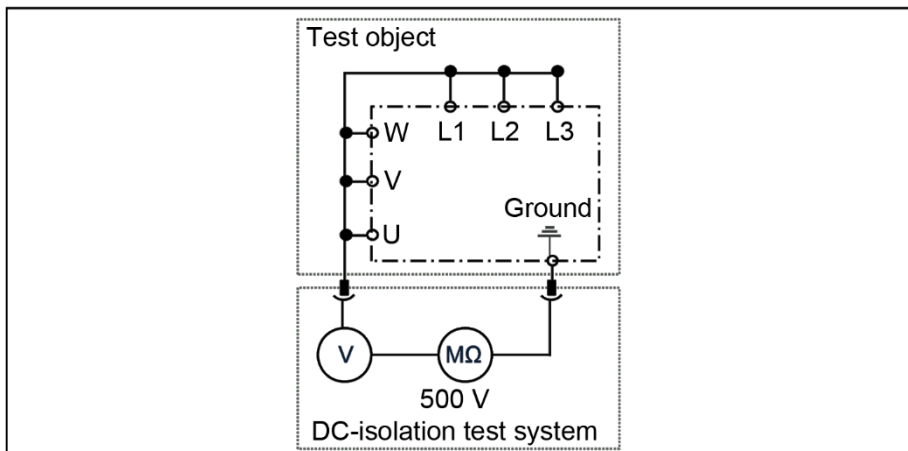


Fig. 5: Insulation test on the power board

Pressure test on an INVEOR**IMPORTANT INFORMATION**

A pressure test is not permitted on a standard INVEOR.

1.9.7 Repairs**Damage to property possible**

If the information is not observed, the drive controller could be damaged and destroyed during subsequent commissioning.

Repairs to the drive controller may only be performed by the KOSTAL Service department.

**DANGER!**

Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.



Danger due to electrical shock and discharge.

Wait two minutes (discharge time of the capacitors) after shut-down

2. Overview of the drive controller

| | | |
|-------|--|----|
| 2.1 | Model description | 25 |
| 2.1.1 | Model description (valid until end of February 2016) | 25 |
| 2.1.2 | Model description (current) | 26 |
| 2.2 | Scope of delivery | 27 |
| 2.3 | MMI*/connecting cable PIN assignment..... | 28 |
| 2.4 | Description of the INVEOR drive controller | 28 |

This chapter contains information on the scope of delivery for the drive controller and the function description.

2.1 Model description

2.1.1 Model description (valid until end of February 2016)

| | | | | | | | | |
|--|---|---|---|---|---|---|---|---|
| Article name KOSTAL "INVEOR" | | | | | | | | |
| INV MA 4 0,55 L00A00 G00000 S00 000 1 | | | | | | | | |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |

Fig. 6: Item description

| Key | | |
|-----|---|---|
| 1 | Drive controller series: INVEOR | 6 Housing: G0 – standard (black with inscription); 0 – standard (cooling elements); 0 – standard (with potentiometer); 00 – standard screw connections |
| 2 | Installation location/size: M-motor-integrated, size: A, B, C, D | 7 Firmware version: S00 – standard |
| 3 | Input voltage: 2 – 230 V, 4 – 400 V | 8 Model: 000 standard; 001 specific |
| 4 | Recommended motor rating: 0.55; 0.75; 1.1; 1.5; 2.2; 3.0; 4.0; 5.5; 7.5; 11; 15; 18.5; 22 kW | 9 Equipment generation: 1 – current version |
| 5 | Printed circuit boards: L00 – standard (without brake chopper); A00 – standard (without TTL evaluation); – standard (without field bus) | |

2.1.2 Model description (current)

| | | | | | | |
|----------|------|------|------|------|------|--|
| | | | | | | Drive controller type, size |
| INV M A | | | | | | Inverter, size A |
| INV M B | | | | | | Inverter, size B |
| INV M C | | | | | | Inverter, size C |
| INV M D | | | | | | Inverter, size D |
| | | | | | | Grid voltage |
| | | | | IV01 | | 400 V |
| | | | | IV02 | | 230 V |
| | | | | | | Recommended motor rating |
| | | | | PW02 | | 0.37 kW (1 x 230 VAC) |
| | | | | PW03 | | 0.55 kW (1 x 230 VAC / 3 x 400 VAC) |
| | | | | PW04 | | 0.75 kW (1 x 230 VAC / 3 x 400 VAC) |
| | | | | PW05 | | 1.10 kW (1 x 230 VAC / 3 x 400 VAC) |
| | | | | PW06 | | 1.50 kW (3 x 400 VAC) |
| | | | | PW07 | | 2.20 kW |
| | | | | PW08 | | 3.00 kW |
| | | | | PW09 | | 4.00 kW |
| | | | | PW10 | | 5.50 kW |
| | | | | PW11 | | 7.50 kW |
| | | | | PW12 | | 11.00 kW |
| | | | | PW13 | | 15.00 kW |
| | | | | PW14 | | 18.50 kW |
| | | | | PW15 | | 22.00 kW |
| | | | | | | Power-conducting plate |
| | | | | LP01 | | without brake chopper |
| | | | | LP02 | | with brake chopper |
| | | | | LP03 | | without brake chopper |
| | | | | LP04 | | with brake chopper |
| | | | | | | Application PCB |
| | | | | AP01 | | Standard |
| | | | | AP03 | | Basic |
| | | | | AP05 | | Standard + CANopen |
| | | | | AP06 | | Standard + EtherCAT |
| | | | | AP09 | | Standard + PROFINET |
| | | | | AP14 | | Standard + Sercos III |
| | | | | AP16 | | Standard + PROFIBUS |
| | | | | AP10 | | Functional safety |
| | | | | AP21 | | Functional safety + CANopen |
| | | | | AP22 | | Functional safety + EtherCAT |
| | | | | AP23 | | Functional safety + PROFINET |
| | | | | AP24 | | Functional safety + Sercos III |
| | | | | AP25 | | Functional safety + PROFIBUS |
| | | | | | | Housing type |
| | | | | GH01 | | Passive cooling type, potentiometer, standard screw conn. |
| | | | | GH02 | | Passive cooling, standard screw conn. |
| | | | | GH06 | | Active cooling, potentiometer, standard screw conn. |
| | | | | GH09 | | Active cooling, standard screw conn. |
| | | | | | | Cover type |
| | | | | DK01 | | Cover without foil keypad |
| | | | | DK02 | | Cover with foil keypad and potentiometer (only with GH02), (size D only with GH09) |
| | | | | DK05 | | Cover with integrated MMI |
| | | | | | | Model |
| | | | | | | CO00 |
| | | | | | | COxx |
| | | | | | | KOSTAL - standard |
| INV Mx | IVxx | PWxx | LPxx | APxx | GHxx | DKxx |

| | | | |
|---|---|---|---|
| A | B | C | D |
| x | x | x | x |
| x | | | |
| A | B | C | D |
| x | | | |
| x | | | |
| x | | | |
| x | | | |
| | x | | |
| | x | | |
| | x | | |
| | | x | |
| | | x | |
| | | | x |
| | | | x |
| | | | x |
| A | B | C | D |
| x | x | x | |
| x | x | | |
| | | | x |
| | | x | |
| A | B | C | D |
| x | x | x | x |
| x | x | x | |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| A | B | C | D |
| x | x | x | |
| x | x | x | |
| | | | x |
| A | B | C | D |
| x | x | x | x |
| x | x | x | x |
| x | x | x | x |
| A | B | C | D |
| x | x | x | x |

2.2 Scope of delivery

Compare the scope of delivery of your product with that provided below.

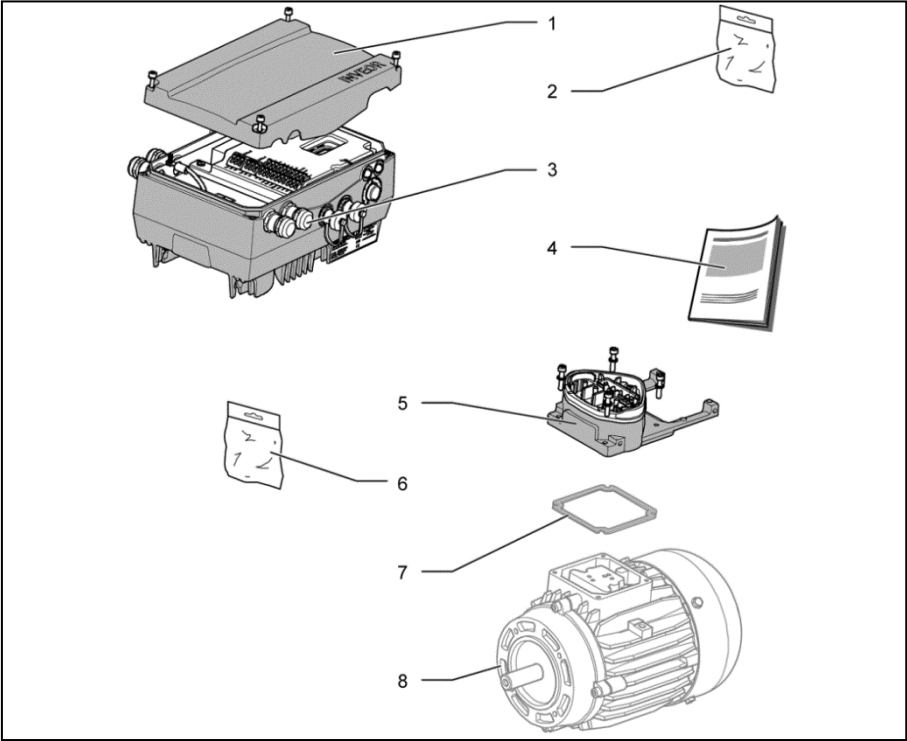


Fig. 7: Scope of delivery

| Key | | | |
|---------------------------------|-------------------------------------|------------------------------|---|
| Drive controller article number | | Adapter plate article number | |
| 1 | Drive controller (variant) | 5 | Adapter plate with terminal (not part of the scope of delivery) |
| 2 | Poly bag containing fastening bolts | 6 | Poly bag containing connecting material for terminal block |
| 3 | Cable screw connections | 7 | Seal (not part of the scope of delivery) |
| 4 | Operating manual | 8 | Motor (not part of the scope of delivery) |

2.3 MMI*/connecting cable PIN assignment

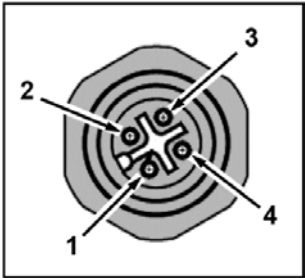


Fig. 8: M12 plug PIN assignment

Description: Round plug (plug)
4-pin M12 A-coded

| M12 plug assignment | Signal |
|---------------------|-----------|
| 1 | 24 V |
| 2 | RS485 - A |
| 3 | GND |
| 4 | RS485 - B |

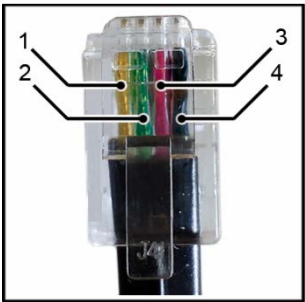


Fig. 9: RJ9 plug connector

Description: RJ9 plug connector

| Pin | Signal |
|----------------------------------|--------|
| 1 | yellow |
| 2 | green |
| 3 | Red |
| 4 | brown |
| Attention: The colours may vary! | |

2.4 Description of the INVEOR drive controller

The INVEOR drive controller is a device for speed control in three-phase AC motors.

The drive controller can be integrated in the motor (with the standard adapter plate) or fitted close to the motor (with the wall installation adapter plate).

The permitted ambient temperatures specified in the technical data refer to operation at nominal load.

In many cases, higher temperatures may be permitted after a detailed technical analysis. These have to be approved by KOSTAL on a case-by-case basis.

* Man-machine interface

3. Installation

| | | |
|-------|---|----|
| 3.1 | Safety instructions for installation | 30 |
| 3.2 | Recommended preliminary fuses / line protection..... | 30 |
| 3.3 | Installation requirements..... | 31 |
| 3.3.1 | Suitable ambient conditions..... | 31 |
| 3.3.2 | Suitable installation location for the motor-integrated drive controller..... | 32 |
| 3.3.3 | Basic connection versions | 33 |
| 3.3.4 | Short circuit and ground protection..... | 36 |
| 3.3.5 | Wiring instructions..... | 37 |
| 3.3.6 | Preventing electromagnetic interferences..... | 40 |
| 3.4 | Installing the drive controller integrated in the motor | 40 |
| 3.4.1 | Mechanical installation..... | 40 |
| 3.4.2 | Power connection | 51 |
| 3.4.3 | Connections for brake resistor..... | 57 |
| 3.4.4 | Control connections X5, X6, X7 | 57 |
| 3.4.5 | Connection diagram..... | 64 |
| 3.5 | Installing the wall-mounted drive controller | 65 |
| 3.5.1 | Suitable installation location for wall mounting | 65 |
| 3.5.2 | Mechanical installation sizes A - C | 66 |
| 3.5.3 | Mechanical installation of size D..... | 71 |
| 3.5.4 | Power connection | 79 |
| 3.5.5 | Brake chopper..... | 80 |
| 3.5.6 | Control connections..... | 80 |
| 3.6 | Disassembly and assembly of the INVEOR fan, size "D" | 80 |
| 3.6.1 | Fan disassembly | 81 |
| 3.6.2 | Fan assembly..... | 83 |

3.1 Safety instructions for installation



DANGER!

Risk of death due to revolving mechanical parts!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

Only allow appropriately qualified staff to install the drive controller.

Only use staff who are trained in mounting, installation, commissioning and handling.

Always ground the device in accordance with DIN EN 61140; VDE 0140, NEC and other relevant standards.

The drive controller must be grounded with the motor according to relevant regulations. Non-compliance may result in death or serious injury.


If spring elements are not used when assembling the adapter plate, there must be an extra connection between the motor and drive controller to produce a correct protective conductor connection

Unused open cable ends in the motor terminal box must be insulated.

Use suitable line circuit breakers with the prescribed nominal current between the mains and drive controller.

Mains connections must be hardwired..

3.2 Recommended preliminary fuses / line protection

| INVEOR M | Size A 1 x 230 V AC | Size A 3 x 400 V AC | Size B 3 x 400 V AC | Size C 3 x 400 V AC | Size D 3 x 400 V AC | Size D 3 x 400 V AC |
|---|--|---------------------------|---------------------------|---------------------------|---------------------------|---------------------------|
| Nominal motor rating | up to 1.1 kW | up to 1.5 kW | up to 4.0 kW | up to 7.5 kW | up to 15 kW | up to 22 kW |
| Mains current | 9.2 A | 3.3 A | 7.9 A | 14.8 A | 28.2 A | 39.9 A |
| Mains current 150% (overload 60 s) | 13.8 A | 4.95 A | 11.85 A | 22.2 A | 42.3 A | 51.87 A |
| Line circuit breaker – recommendation | C 16 | C 10 | C 16 | C 25 | C 50 | C 63 |
| | Characteristics C = line circuit breaker tripping between 6 - 10 times I _n | | | | | |
|  | The cross-section of the supply line must be designed according to the transfer category and maximum permitted current. The contractor commissioning the device must ensure protection for the power line. | | | | | |

3.3 Installation requirements

3.3.1 Suitable ambient conditions

| Conditions | Values |
|--|---|
| Altitude of the installation location: | up to 1000 m above sea level / over 1000 m with reduced performance (1 % per 100 m) (max. 2000 m), see chapter 8.2 |
| Ambient temperature: | - 25° C to + 50° C (different ambient temperatures may be possible in individual cases), see chapter 8.2 |
| Relative air humidity | ≤ 96 %, condensation not permitted. |
| Resistance to vibration and shock: | DIN EN 60068-2-6 severity 2 (vibration from transport) DIN EN 60068-2-27 (vertical impact test) 2...200 Hz for sinusoidal vibrations. |
| Electromagnetic compatibility: | Immune to interference acc. to DIN EN 61800-3 |
| Cooling: | Surface cooling: sizes A to C: free convection; size C: optionally with integrated fan; size D: with integrated fans. |

Tab. 1: Ambient conditions

- Ensure that the housing type (protection class) is suitable for the operating environment:
 - Ensure that the seal between the motor and the adapter plate is inserted correctly.
 - All unused cable screw connections must be sealed.
 - Check that the cover of the drive controller is closed and bolted down tightly.
 - Size A – C (4 x M4 x 28) 2 Nm,
 - Size D (4 x M6 x 28) 4 Nm.



Damage to property possible

Failure to comply with the information may result in damage to the drive controller!

When attaching a cover with integrated foil keypad, be absolutely sure that the flat ribbon cable is not pinched.

Continues on next page

Continuation

Although the drive control can, in principle, be painted later on, the user must nevertheless check the material compatibility of the intended paint.



Damage to property possible

Failure to comply with this requirement may eventually result in the loss of the protection class (particularly in respect to seals and fibre-optic elements).

The INVEOR is supplied in black RAL 9005 (black) as standard.

Disassembling the circuit boards (even for the purpose of painting the housing sections) renders the warranty void!

Mounting points and sealing surfaces must be kept free of paint for purposes of EMC and grounding!

3.3.2 Suitable installation location for the motor-integrated drive controller

Ensure that the motor with a motor-integrated drive controller is only installed and operated if aligned as shown in the following diagram.

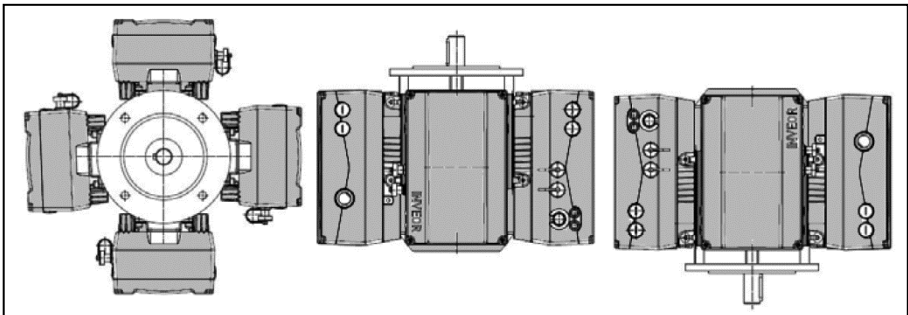


Fig. 10: Motor installation location/permited alignments



IMPORTANT INFORMATION

Ensure that no condensate from the motor can enter the drive controller during and after installation.

3.3.3 Basic connection versions


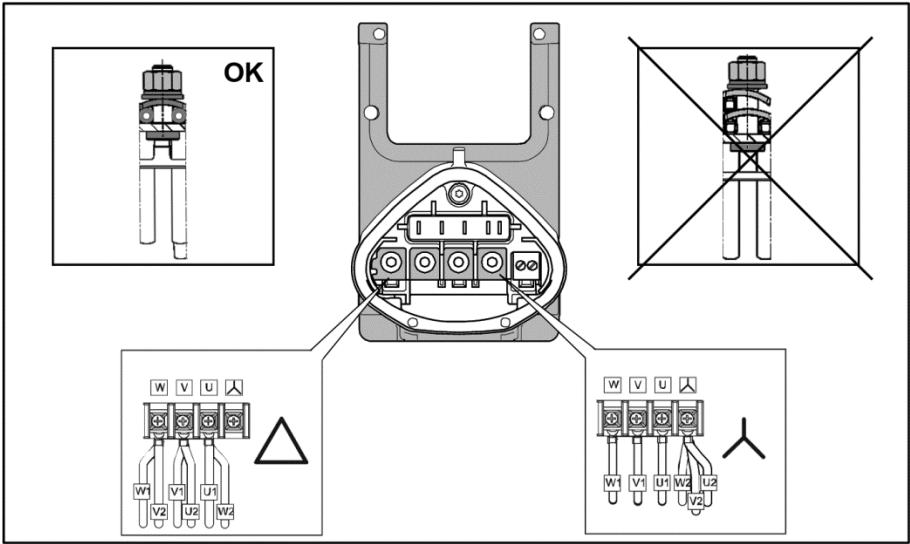


Fig. 11: Star or triangle connection for drive controllers integrated in the motor

Triangle connection variant

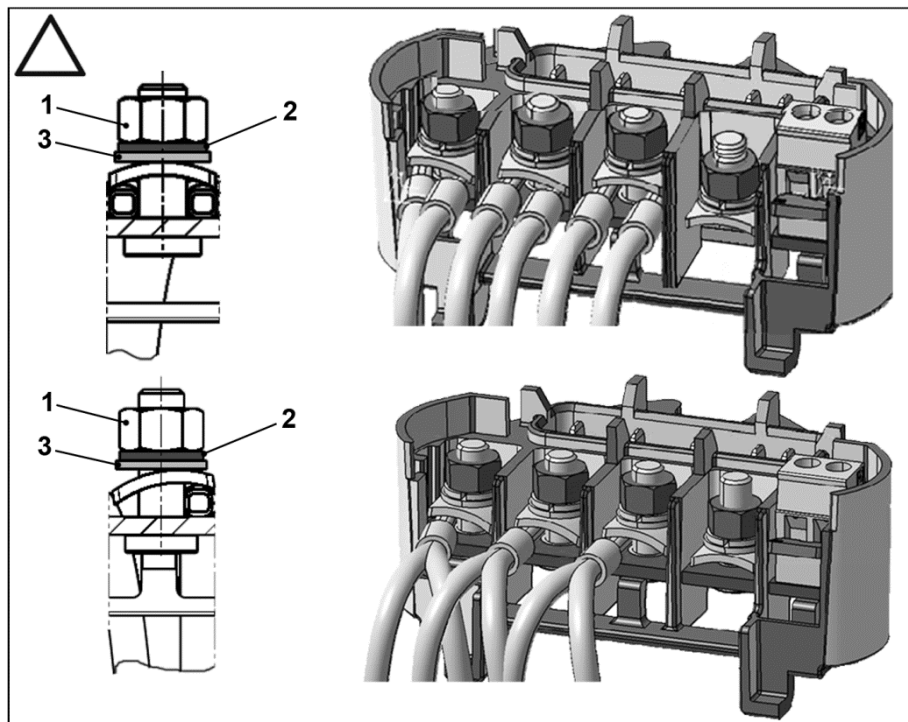

1. Nut $M_A = 5 \text{ Nm}$
2. Circlip

3. Plain washer

DANGER!


Risk of death due to electrical shock!
Death or serious injury!

De-energise drive controller and secure it against being restarted.

**IMPORTANT INFORMATION**

Regularly check that the nuts (1) are secure!

Star connection variant

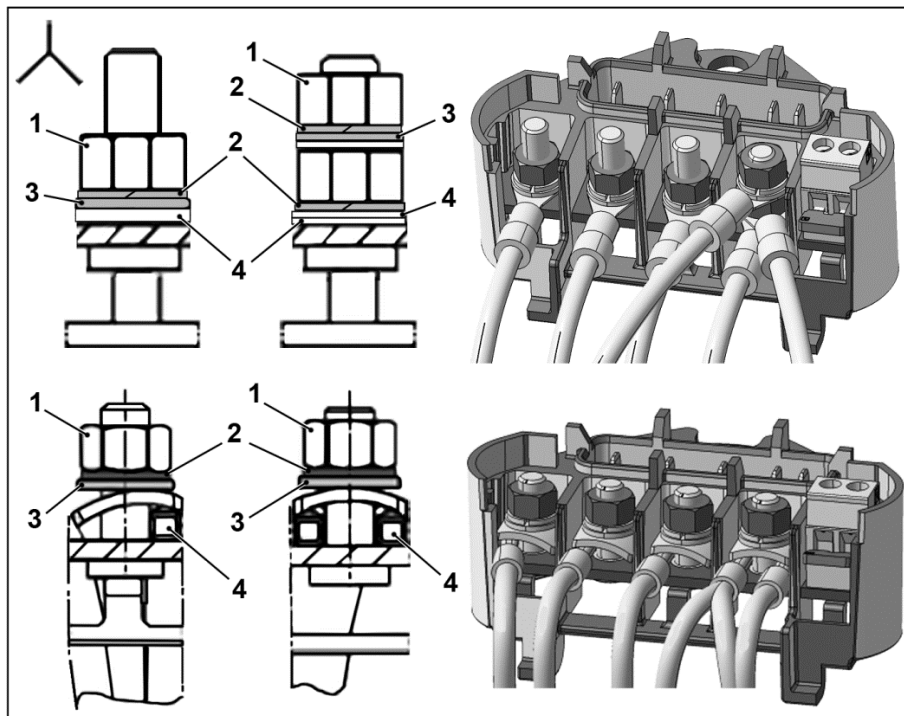

1. Nut $M_A = 5 \text{ Nm}$
2. Circlip

3. Plain washer
4. Cable shoe

DANGER!

Risk of death due to electrical shock!
Death or serious injury!

De-energise drive controller and secure it against being restarted.

**IMPORTANT INFORMATION**

Regularly check that the nuts (1) are secure!

**Damage to property possible**

Risk of damage to the drive controller.

Correct phase assignment must be observed when connecting the drive controller, otherwise the motor may be overloaded.

The supplied assembly material can be used to connect core end sleeves and cable shoes. Fig. 5 shows the different connection options.

**DANGER!**

Risk of death due to electrical shock!
Death or serious injury!

De-energise device and secure it against being switched back on.
Unused open cable ends in the motor terminal box must be insulated.

**IMPORTANT INFORMATION**

If a thermal resistor (PTC or Klixon) is used, the bridging contact fitted on the connection terminal for the PTC in the delivery state has to be removed.

The cross-section of the supply line must be designed according to the transfer category and maximum permitted current. The contractor commissioning the device must ensure protection for the power line.


3.3.4 Short circuit and ground protection

The drive controller contains an internal short circuit and ground protection.

3.3.5 Wiring instructions


The control connections of the application card are located inside the drive controller.
The configuration may vary depending on the version.

Control terminals (sizes A - D)

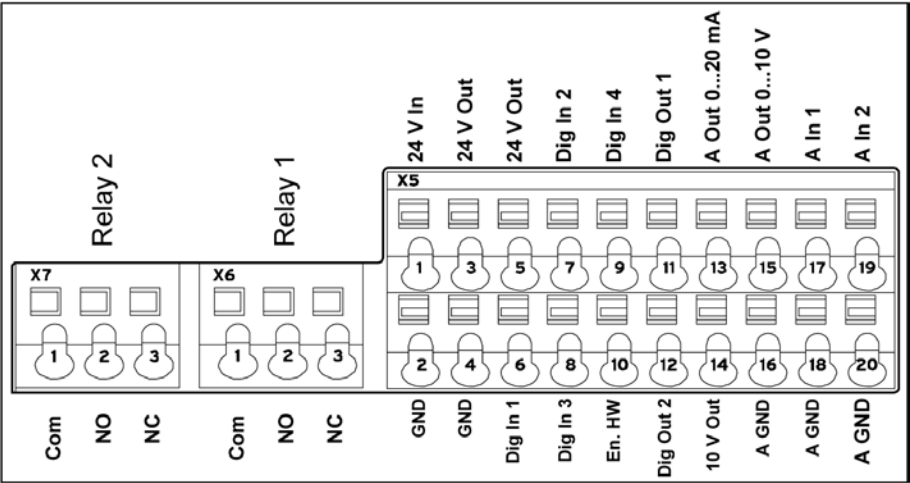


| Sizes A - D | | |
|-------------|--------------------------------|--|
| X5 - X7 | Terminals: | Plug terminal clamp with activation button (slot screwdriver, max. width 2.5 mm) |
| | Connection cross-section: | 0.5 to 1.5 mm ² , single-wire, AWG 20 to AWG 14 |
| | Connection cross-section: | 0.75 to 1.5 mm ² , fine-wired, AWG 18 to AWG 14 |
| | Connection cross-section: | 0.5 to 1.0 mm ² , fine-wired (core end sleeves with and without plastic collars) |
| | Length of stripped insulation: | 9 to 10 mm |

Power connections (sizes A – C)

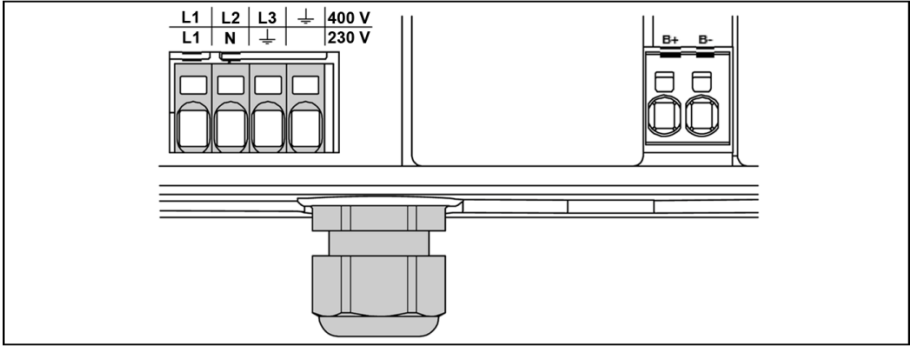

| Sizes A - C | |
|----------------------------------|--|
| X1 mains + B - brake resistor | The terminals for the mains cable are located inside the drive controller. The INVEOR also has the option of being equipped with terminals for connecting a brake resistor. The configuration may vary depending on the version. |
| | Core end sleeves with plastic collars and lugs are recommended. |
| | Terminals: Spring force connection (slot screwdriver, max. width 2.5 mm) |
| | Conductor cross-section, rigid min. 0.2 mm ² max. 10 mm ² |
| | Conductor cross-section, flexible min. 0.2 mm ² max. 6 mm ² |
| | Conductor cross-section, flexible with core end sleeve without plastic sleeve min. 0.25 mm ² max. 6 mm ² |
| | Conductor cross-section, flexible with core end sleeve with plastic sleeve min. 0.25 mm ² max. 4 mm ² |
| | 2 conductors of the same cross-section, flexible with TWIN-AEH with plastic sleeve min. 0.25 mm ² max. 1.5 mm ² |
| | AWG/kcmil conductor cross-section according to UL/CUL min. 24 max. 8 |
| | Length of stripped insulation: 15 mm |
| | Mounting temperature: -5°C to +100°C |

Power connections (size D)

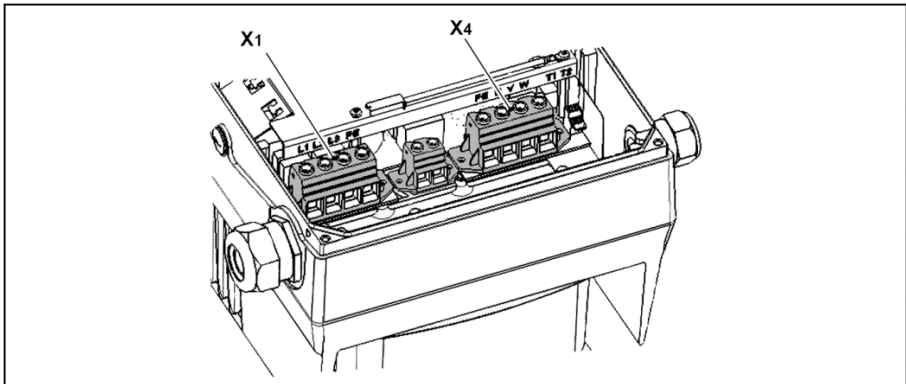

| Size D | |
|---|--|
| X1 mains / X4 motor + B - brake resistor | The terminals for the mains cable are located inside the drive controller. The INVEOR also has the option of being equipped with terminals for connecting a brake resistor. The configuration may vary depending on the version. |
| | Core end sleeves with plastic collars and lugs are recommended. |
| | Torque min. 2.5 Nm / max. 4.5 Nm |
| | Conductor cross-section: rigid min. 0.5 mm ² / rigid max. 35 mm ² |
| | Conductor cross-section, flexible: min. 0.5 mm ² / max. 25 mm ² |
| | Conductor cross-section, flexible with core end sleeve without plastic collar min. 1 mm ² max. 25 mm ² |
| | Conductor cross-section, flexible with core end sleeves with plastic sleeve min. 1.5 mm ² max. 25 mm ² |
| | AWG / kcmil conductor cross-section according to UL/CUL min 20 max. 2 |
| | 2 conductors of the same cross-section, rigid min. 0.5 mm ² max. 6 mm ² |
| | 2 conductors of the same cross-section, flexible min. 0.5 mm ² max. 6 mm ² |
| | 2 conductors of the same cross-section, flexible with AEH without plastic sleeve min. 0.5 mm ² max. 4 mm ² |
| | 2 conductors of the same cross-section, flexible with TWIN-AEH with plastic sleeve min. 0.5 mm ² max. 6 mm ² |
| | AWG according to UL/CUL min. 20 max. 2 |

3.3.6 Preventing electromagnetic interferences

Where possible use shielded lines for control circuits.

The shielding should be applied to the line end with special care and without laying the leads across longer stretches without shielding.

Ensure that no parasitic currents (compensating currents etc.) can flow via the analogue cable's shielding.

Route the control lines as far away as possible from the power lines. Under certain circumstances, separate power ducts should be used.

If lines do cross, an angle of 90° should be observed.

Upstream circuit elements, such as protector switches and brake coils, or circuit elements that are operated via the outputs of the drive controller have to be interference-suppressed. RC circuits are suitable as AC voltage protector switches, while free-wheeling diodes or varistors are usually used as DC voltage protector switches. These interference suppression devices are attached directly to the protector switch coils.



IMPORTANT INFORMATION

Where possible, the power for a mechanical brake should be supplied in a separate cable.

Power connections between the drive controller and motor should always be shielded or reinforced, and the shielding must have large-scale grounding at both ends! The use of EMC cable screw connections is recommended. These are not part of the scope of delivery.

Wiring suitable for EMC must be ensured.

3.4 Installing the drive controller integrated in the motor

3.4.1 Mechanical installation

Mechanical installation of sizes A - C

Proceed as follows to mechanically install the drive controller:

1. Open the standard motor connection box.
2. Disconnect the wires from the connection terminals. Memorise or write down the connection sequence.

Continues on next page

Continuation

3. Remove the motor terminal block if necessary.
4. Remove the connection housing's retaining bolts and take the housing off. Be careful not to damage the seal.

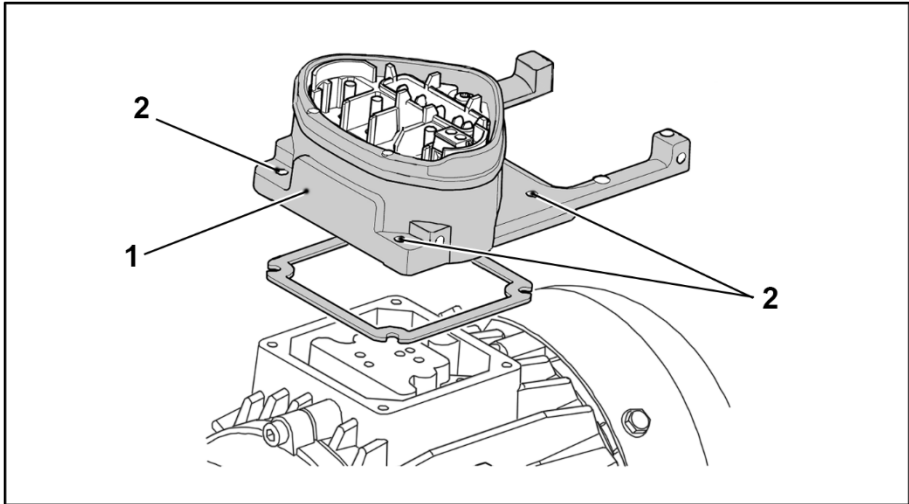


Fig. 12: Assembly sequence: Connection box – adapter plate (sizes A - C)



INFORMATION

The standard adapter plate is a plate the underside of which is not reworked; i.e. no holes have been produced yet.

You can order individually modified adapter plates from KOSTAL for selected motors.

5. Modify the adapter plate (1) by producing the necessary holes (2) for mounting on the motor.


Continues on next page

Continuation

**INFORMATION**

The commissioning technician is responsible for protection class compliance when sealing the adapter plate on the motor.

If you have any questions, please ask your KOSTAL contact.

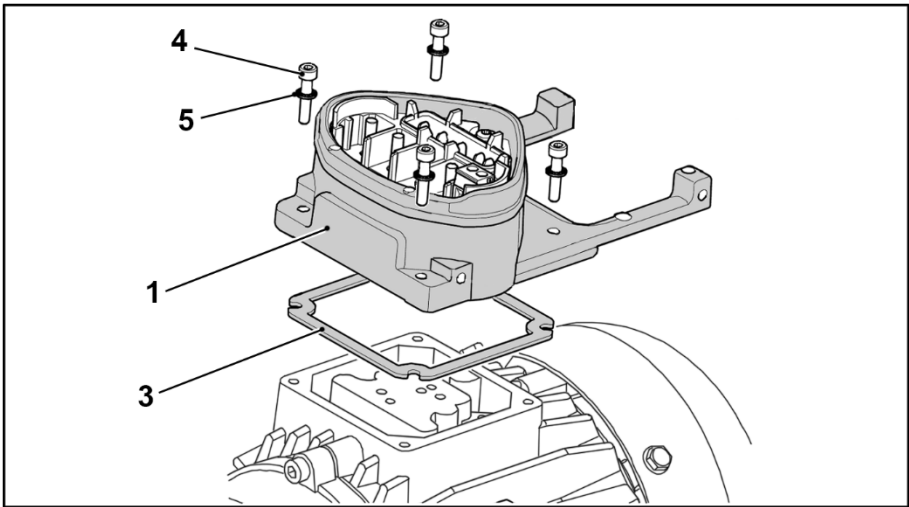

6. Fit the seal (3).
7. Lead the motor connection line past the connection terminal and through the adapter plate (1) and screw down to the motor with the four retaining bolts (4) and the four spring elements (torque: 2.0 Nm).

DANGER!

**Risk of death due to electrical shock!
Death or serious injury!**

The drive controller must be grounded with the motor according to relevant regulations. Non-compliance may result in death or serious injury.

If spring elements (5) are not used when assembling the adapter plate, there must be an extra connection between the motor and drive controller to produce a correct protective conductor connection.

Continues on next page

Continuation



IMPORTANT INFORMATION

When mounting the adapter plates, ensure that all four screws, including the spring elements, are tightened to the necessary torque (2 Nm)!

All contact points must be free of dirt/paint because otherwise a correct protective conductor connection is not ensured!

8. Attach the motor wires in the correct circuit, see also Fig. 11 (Torque: 5.0 Nm). We would recommend using insulated M5 annular cable sockets with a connection cross-section of 4 to 6 mm².



IMPORTANT INFORMATION

When installing the motor wires, ensure that all bolts on the terminal board are fitted with the nuts provided even if the star point is not connected!

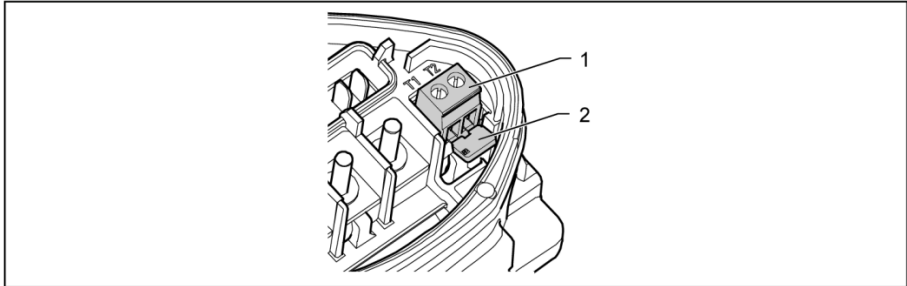


Fig. 13: Bridging contact

9. If present, wire the connection cable of the motor PTC/Klirxion to the T1 and T2 terminals (1) (torque: 0.6 Nm).


Continues on next page

Continuation



IMPORTANT INFORMATION

During assembly, ensure that the connection cable is not crushed!

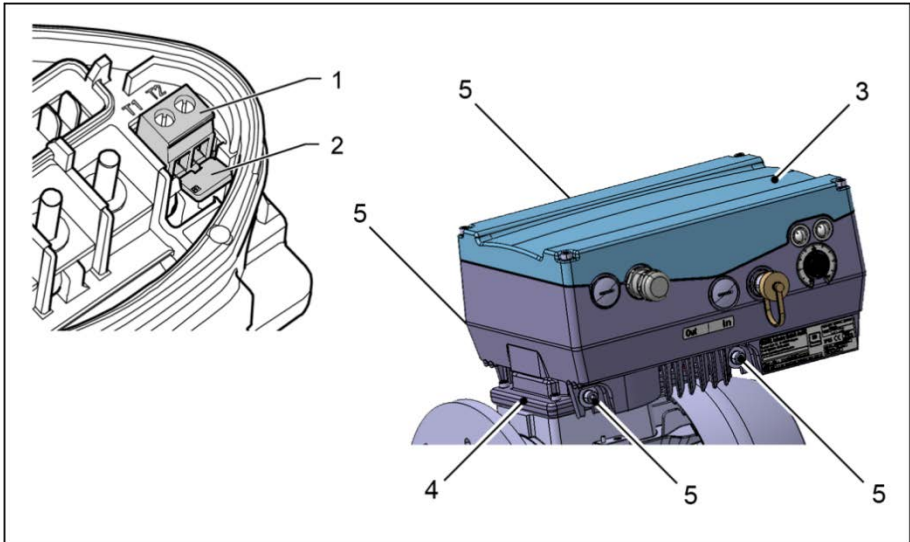

IMPORTANT INFORMATION

If the motor is fitted with a temperature sensor, this is connected to the T1 and T2 terminals (1).

Remove the bridging contact (2) inserted for delivery for this purpose.

When the bridge is in place, the temperature of the motor is not monitored!

Only motor PTCs corresponding to DIN 44081/44082 may be connected!



DANGER!

Risk of death due to electrical shock!

Death or serious injury!

The drive controller must be grounded with the motor according to relevant regulations. Non-compliance may result in death or serious injury.

10. Plug the drive controller (3) onto the adapter plate (4) and fasten it evenly using the four lateral bolts (5) (sizes A – C) (torque: 4.0 Nm).

Mechanical installation of size D

Proceed as follows to mechanically install the drive controller:

- 1. Open the standard motor connection box.
- 2. Remove the connection housing's retaining bolts and take the housing off.



Damage to property possible

Be careful not to damage the seal.

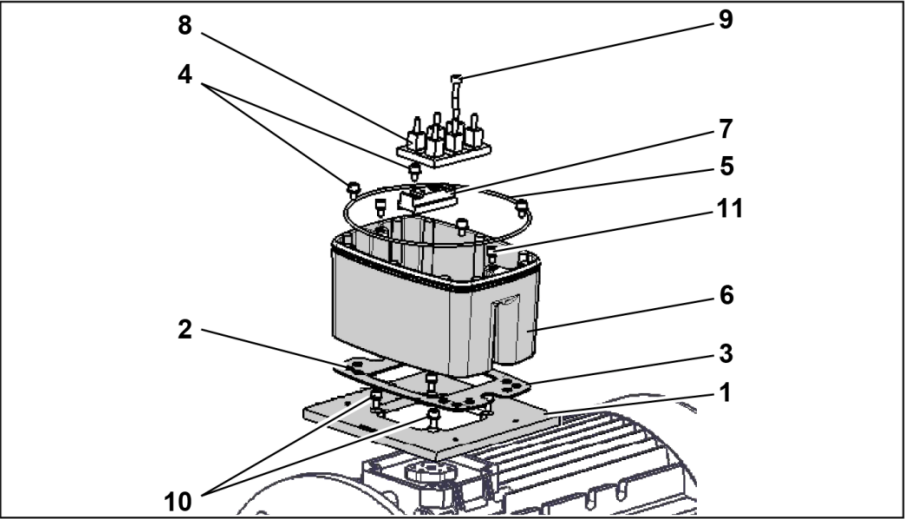


Fig. 14 Assembly sequence: Connection box – adapter plate, size D

| Key | | | |
|-----|--------------------------------------|----|---|
| 1 | Adapter plate option (variant) | 7 | Junction plate heightening option |
| 2 | Holes depending on motor | 8 | Original junction plate (not included) |
| 3 | Seal | 9 | Extended screw option (for lt. 7) |
| 4 | Retaining bolts with spring elements | 10 | Retaining bolts with spring elements option |
| 5 | O-ring seal | 11 | INVEOR/support retaining bolts |
| 6 | INVEOR/adapter plate support | | |


Continues on next page

Continuation

**IMPORTANT INFORMATION**

The standard adapter plate is a plate the underside of which is not reworked; i.e. no holes have been produced yet.

You can order individually modified adapter plates from KOSTAL for selected motors.

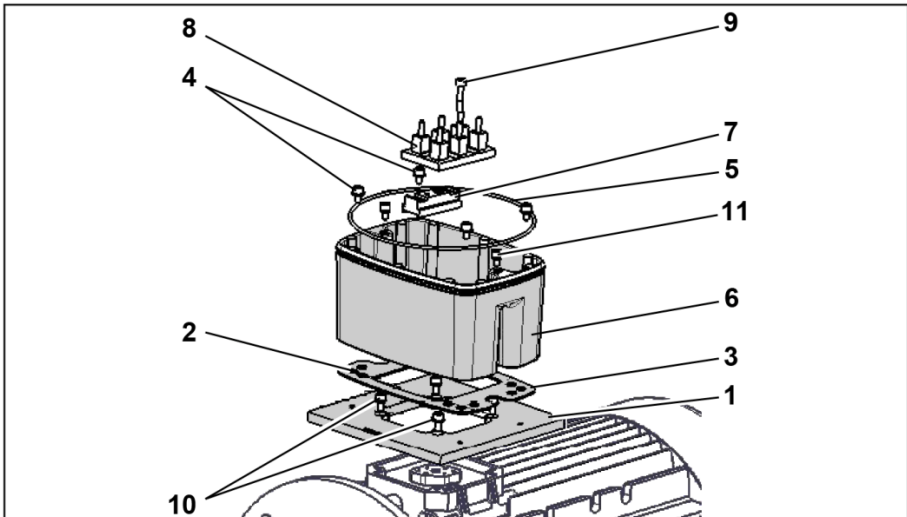

3. Modify the adapter plate (1) by producing the necessary holes (2) for mounting on the motor.

**IMPORTANT INFORMATION**


Correct sealing between the adapter plate and motor is of vital importance to compliance with the protection class.

The commissioning technician alone is responsible for this.

If you have any questions, please ask your KOSTAL contact.

Continues on next page

Continuation

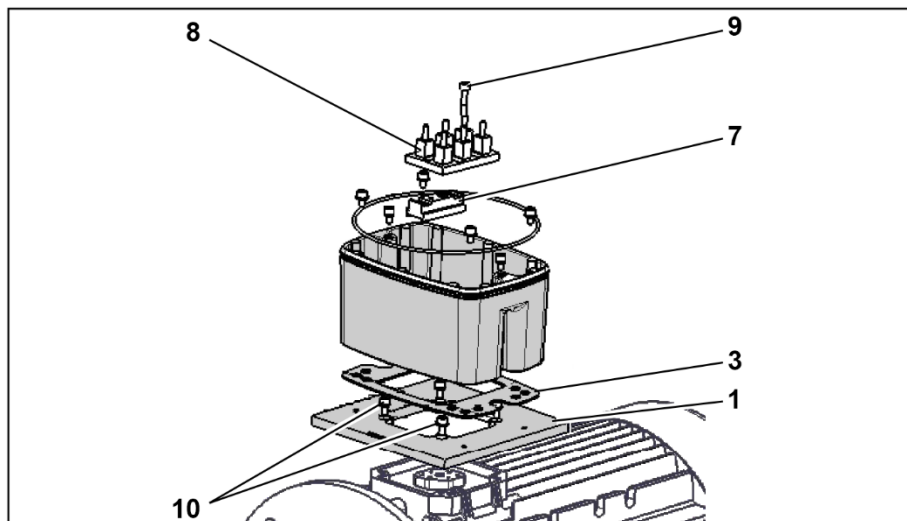

4. Fit the seal (3).
5. Screw the adapter plate (1) on to the motor with the four retaining bolts (10) and four spring elements (torques: M4 to 2.4 Nm, M5 to 5.0 Nm, M6 to 8.5 Nm).

**IMPORTANT INFORMATION**


When mounting the adapter plate (1), ensure that all four retaining bolts (10), including the spring elements, are tightened to the necessary torque!

All contact points must be free of dirt/paint because otherwise a correct protective conductor connection is not ensured!

6. Secure the original junction plate (8), if necessary using the optional junction plate heightening part (7) and the optional extended screws (9), on the motor.

Continues on next page

Continuation

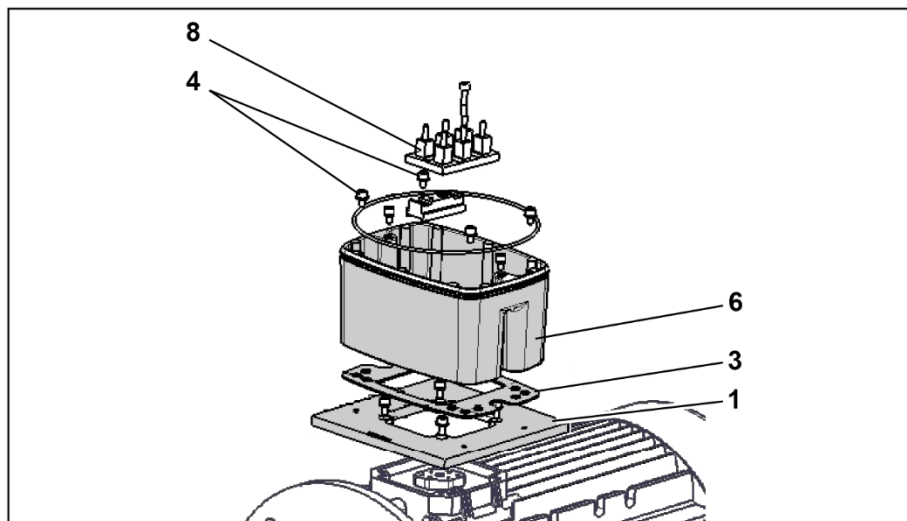

7. Connect the four lines (PE, U, V, W) of the corresponding cross-section (depending on rating of INVEOR used) to the original junction plate (8).

**INFORMATION**

The connecting lines (approx. 30 cm) needed to wire the motor junction plate/INVEOR are not included in the scope of supply!


**IMPORTANT INFORMATION**

Please ensure that the seal (3) sits perfectly!

8. Screw the support (6) to the adapter plate (1) with four retaining bolts (4) incl. the spring elements (torque: 8.5 Nm).

Continues on next page

Continuation

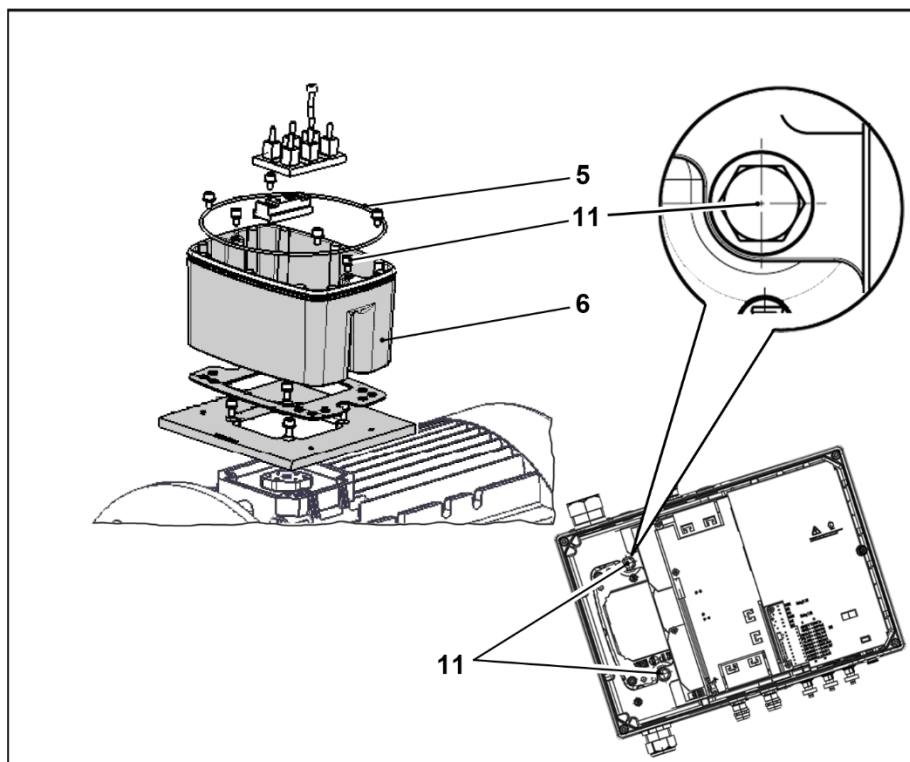

9. Guide the four lines (PE, U, V, W) through the INVEOR's support.



IMPORTANT INFORMATION

Please ensure that the O-ring seal (5) sits perfectly!

10. Carefully attach the drive controller to the support (6) and secure it evenly with two M8 screws (11) (torque: max. 25.0 Nm).

Continues on next page

Continuation

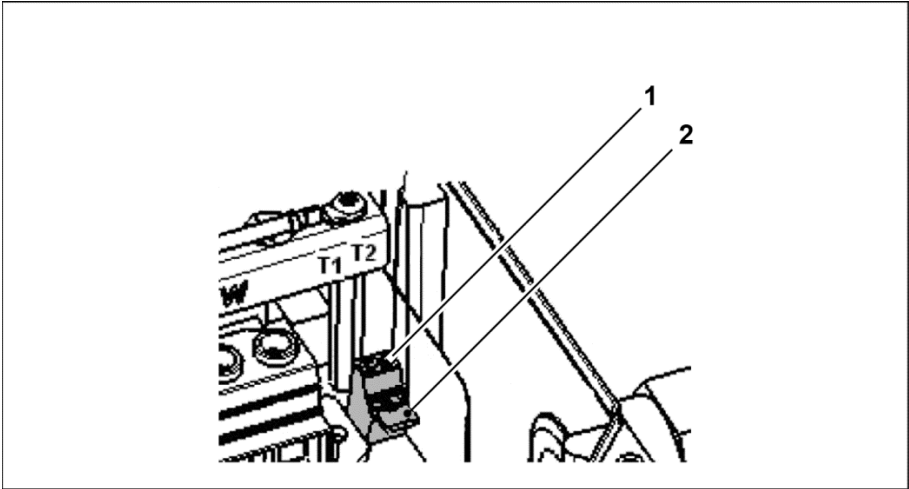


Fig. 15: Bridging contact

**IMPORTANT INFORMATION**

During assembly, ensure that the connection cable is not crushed!

11. If present, wire the connection cable of the motor PTC/Klixon to the T1 and T2 terminals (1) (torque: 0.6 Nm).

**IMPORTANT INFORMATION**

If the motor is fitted with a temperature sensor, this is connected to the T1 and T2 terminals (1).

Remove the bridging contact (2) inserted for delivery for this purpose.

When the bridge is in place, the temperature of the motor is not monitored!

3.4.2 Power connection

Power connection for sizes A - C

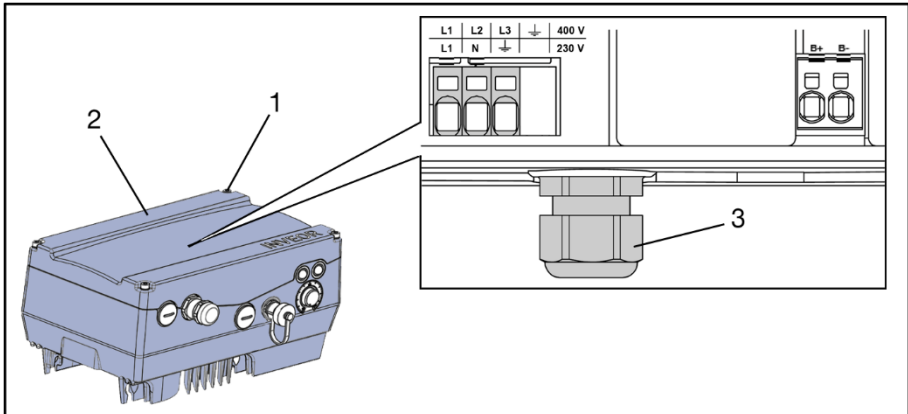


Fig. 16: Power connection sizes A – C



IMPORTANT INFORMATION

When connecting a brake resistor to an optional braking module, cables with shielding and double insulation must be used!



DANGER!

Risk of death due to electrical shock!


Death or serious injury!

De-energise drive controller and secure it against being restarted.

1. Unscrew the four screws (1) from the drive controller's housing cover (2) and then take it off.
2. Guide the mains connection cable through the cable glands (3).

Continues on next page

Continuation

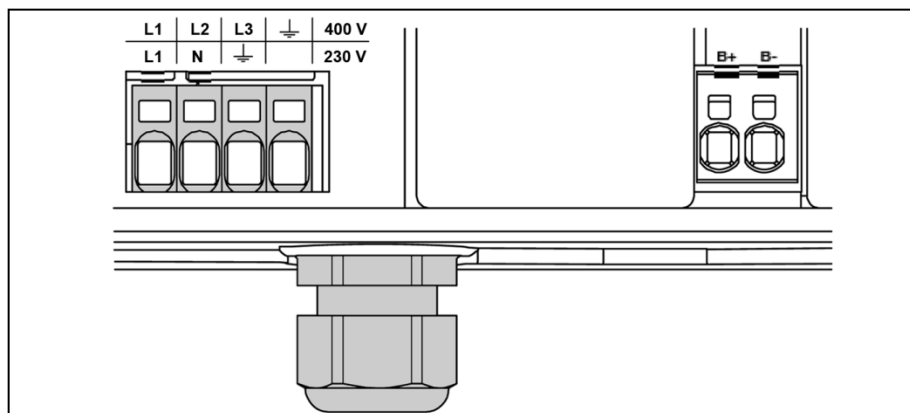

3. Connect the cables with the terminals as follows:

| 230 V connection | | |
|------------------|---|----|
| L1 | N | PE |


| 400 V connection | | | |
|------------------|----|----|----|
| L1 | L2 | L3 | PE |

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | Mains phase 1 |
| 2 | L2 | Mains phase 2 |
| 3 | L3 | Mains phase 3 |
| 4 | PE | Protective conductor |

Tab. 2: 3 x 400 VAC terminal assignment X1

Continues on next page

Continuation

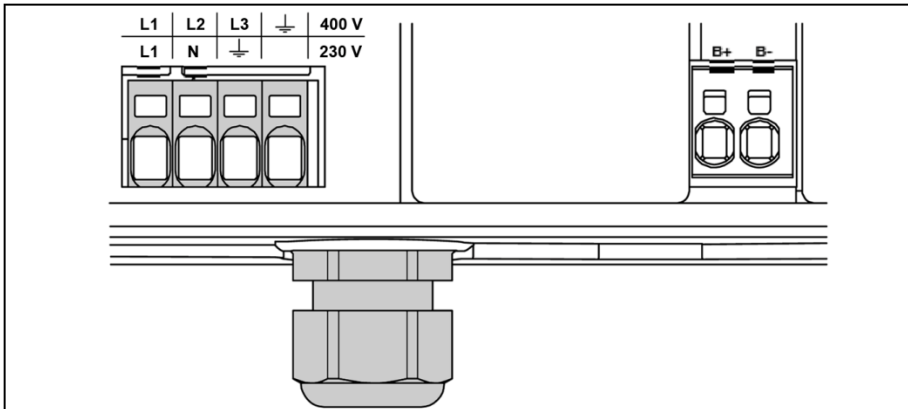

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | DC mains (+) |
| 2 | L2 | Not assigned |
| 3 | L3 | DC mains (-) |
| 4 | PE | Protective conductor |

Tab. 3: DC feed 565 V terminal assignment X1

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | Mains phase 1 |
| 2 | N | Neutral wire |
| 3 | PE | Protective conductor |

Tab. 4: 1 x 230 VAC terminal assignment X1

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | DC mains (+) |
| 2 | N | DC mains (-) |
| 3 | PE | Protective conductor |

Tab. 5: DC feed 325 V terminal assignment X1

Power connection for size D

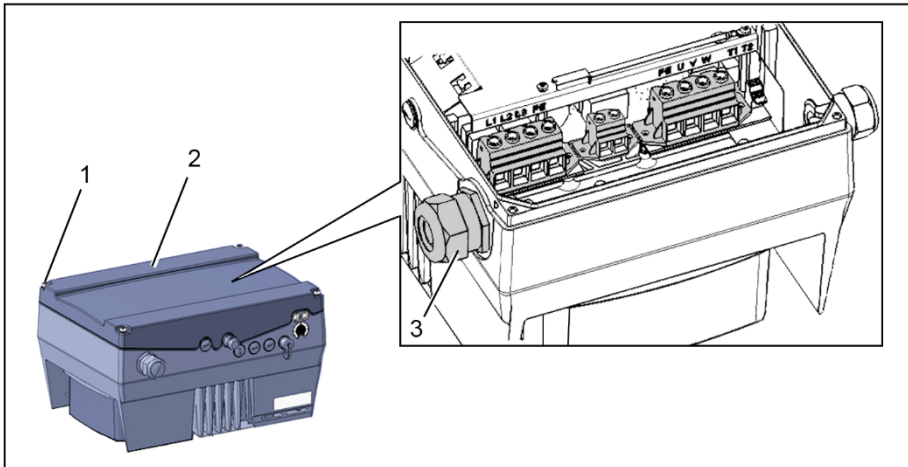


Fig. 17: Power connection for size D

**IMPORTANT INFORMATION**

When connecting a brake resistor to an optional braking module, cables with shielding and double insulation must be used!

**DANGER!**

Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.


1. Unscrew the four screws (1) from the drive controller's housing cover (2) and then take it off.
2. Guide the mains connection cable through the cable screw connection.

**IMPORTANT INFORMATION**

The cable screw connection provides strain relief, and the PE connection cable must be connected in a leading fashion (considerably longer).

Continues on next page

Continuation

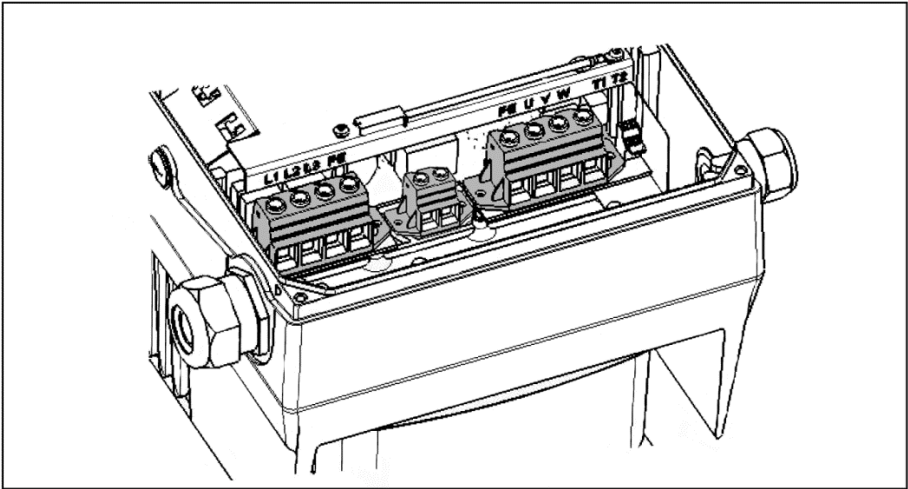

3. Connect the cables with the terminals as follows:

| 400 V connection | | | |
|------------------|----|----|----|
| L1 | L2 | L3 | PE |


| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | Mains phase 1 |
| 2 | L2 | Mains phase 2 |
| 3 | L3 | Mains phase 3 |
| 4 | PE | Protective conductor |

Tab. 6: 3 x 400 VAC terminal assignment X1

The protective conductor must be connected to the "PE" contact.

Continues on next page

Continuation

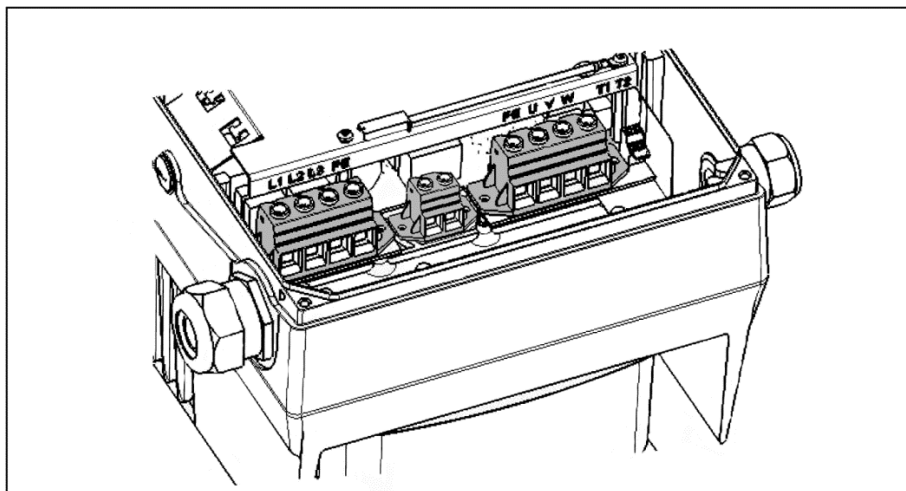

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | DC mains (+) |
| 2 | L2 | Not assigned |
| 3 | L3 | DC mains (-) |
| 4 | PE | Protective conductor |

Tab. 7: DC feed 565 V terminal assignment X1

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | PE | Protective conductor |
| 2 | U | Motor phase 1 |
| 3 | V | Motor phase 2 |
| 4 | W | Motor phase 3 |

Tab. 8: Motor connection assignment X4

3.4.3 Connections for brake resistor

| Terminal no. | Designation | Assignment |
|--------------|-------------|-----------------------------------|
| 1 | B+ | Connection for brake resistor (+) |
| 2 | B - | Connection for brake resistor (-) |

Tab. 9 Optional terminal assignment for brake chopper

3.4.4 Control connections X5, X6, X7

Control connections of the standard application board

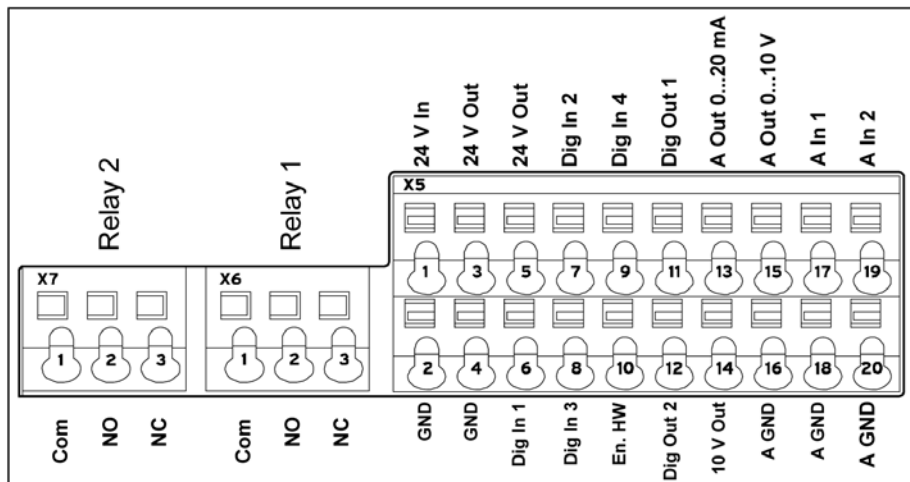


Fig. 18: Control connections of the standard application board




IMPORTANT INFORMATION

Danger of external signals being coupled in.
Use only shielded control line!

1. Guide the required control cable into the housing through the cable screw connections.
2. Connect the control cables according to the figure and/or table. Use shielded control cables.
3. Place the cover on the housing of the drive controller and bolt it tight to the following torque.


| Size | Torque | |
|--------------|--------|---------------|
| A - C | 2 Nm | (4 x M4 x 28) |
| D | 4 Nm | (4 x M6 x 28) |

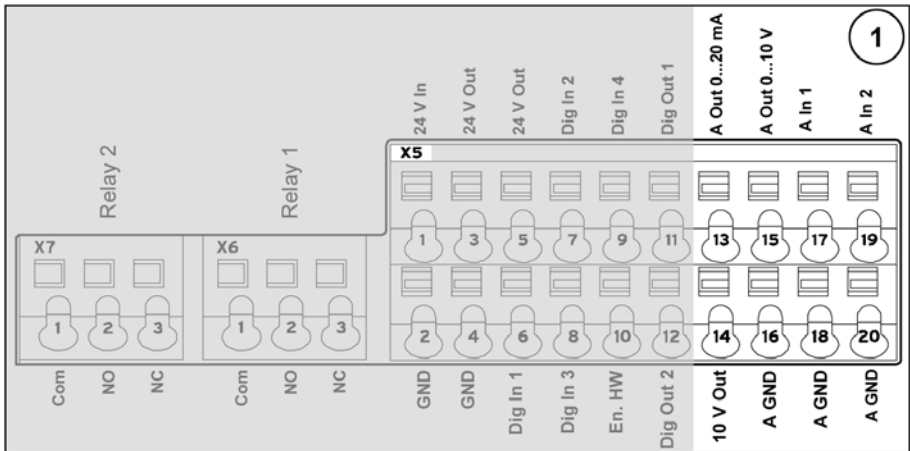

(also see 3.4.5 connection diagram)


| Terminal no. | Designation | Assignment |
|--------------|---------------------|------------------------------------|
| 13 | A. Out 0 ... 20 mA | Actual frequency (parameter 4.100) |
| 14 | 10 V Out | For ext. voltage divider |
| 15 | A. Out 0 ... 10 V | Actual frequency (parameter 4.100) |
| 16 | A GND (ground 10 V) | Ground |
| 17 | A. In 1 | PID actual value (parameter 3.060) |
| 18 | A GND (Ground 10 V) | Ground |
| 19 | A. In 2 | Free (not assigned) |
| 20 | A GND (ground 10 V) | Ground |

Tab. 10: Terminal assignment X5 of the standard application board

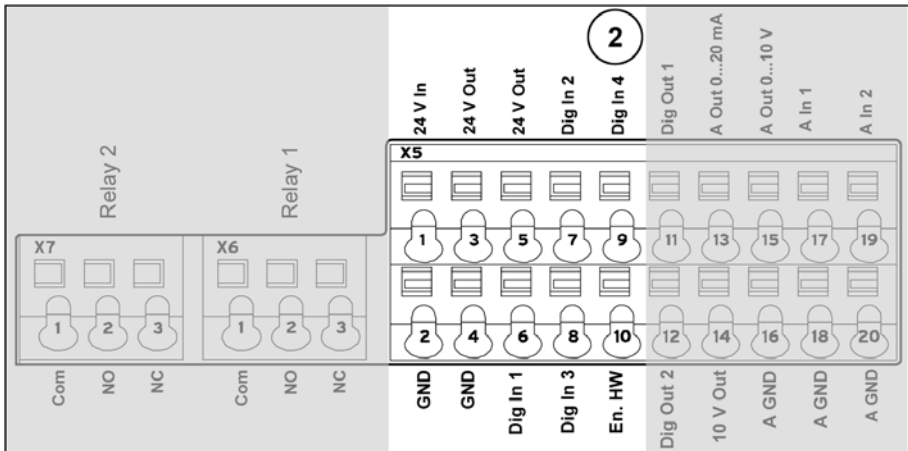

(also see 3.4.5 connection diagram)

| Terminal no. | Designation | Assignment |
|--------------|----------------|---------------------------------------|
| 1 | 24 V In | Ext. power supply |
| 2 | GND (ground) | Ground |
| 3 | 24 V Out | Int. power supply |
| 4 | GND (ground) | Ground |
| 5 | 24 V Out | Int. power supply |
| 6 | Dig. In 1 | Target value enable (parameter 1.131) |
| 7 | Dig. In 2 | Free (not assigned) |
| 8 | Dig. In 3 | Free (not assigned) |
| 9 | Dig. In 4 | Error reset (parameter 1.180) |
| 10 | En HW (enable) | Enable hardware |

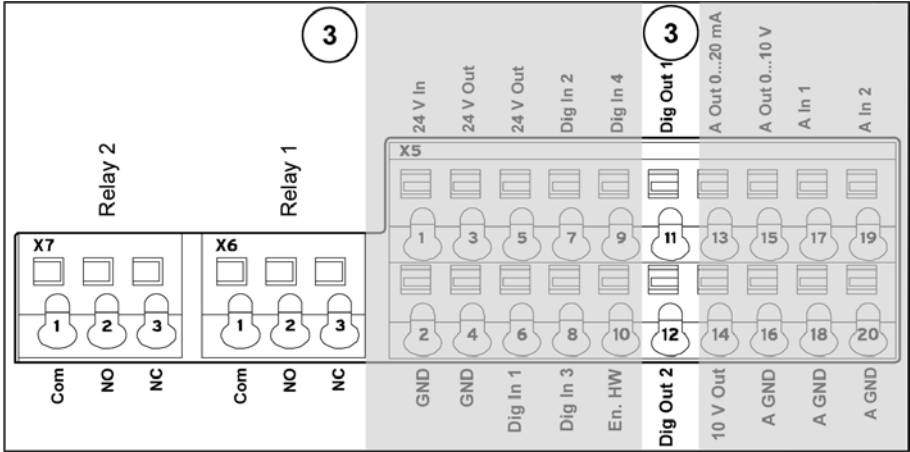

(also see 3.4.5 connection diagram)

| Terminal no. | Designation | Assignment |
|--------------|-------------|---------------------------------|
| 11 | Dig. Out 1 | Fault message (parameter 4.150) |
| 12 | Dig. Out 2 | Free (not assigned) |

X6 relay 1


| Terminal no. | Designation | Assignment |
|--------------|-------------|-------------------------|
| 1 | COM | Centre contact relay 1 |
| 2 | NO | Normally open relay 1 |
| 3 | NC | Normally closed relay 1 |

Tab. 11: Terminal assignment X6 (relay 1)



INFORMATION

In the factory setting, relay 1 is programmed as “relay error” (parameter 4.190).

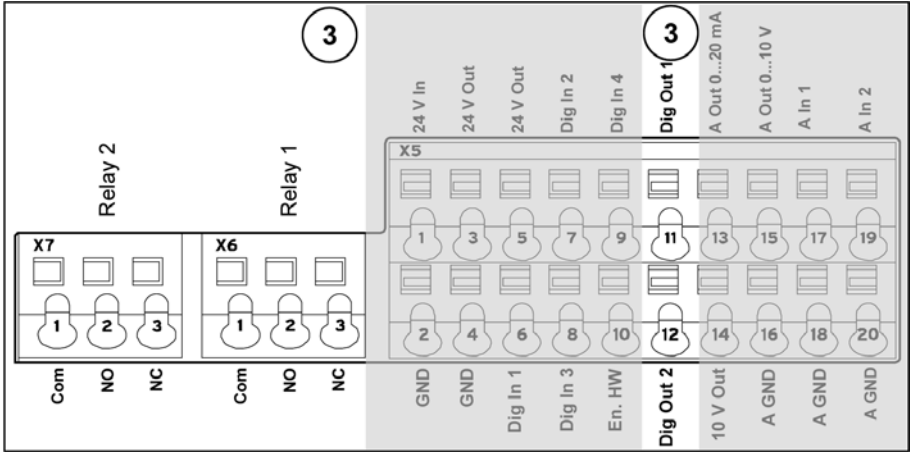

(also see 3.4.5 connection diagram)

X7 relay

| Terminal no. | Designation | Assignment |
|--------------|-------------|-------------------------|
| 1 | COM | Centre contact relay 2 |
| 2 | NO | Normally open relay 2 |
| 3 | NC | Normally closed relay 2 |

Tab. 12: Terminal assignment X7 (relay 2)



INFORMATION

In the factory setting, “no function” is assigned to relay 2 (parameter 4.210).

Control connections of the basic application board

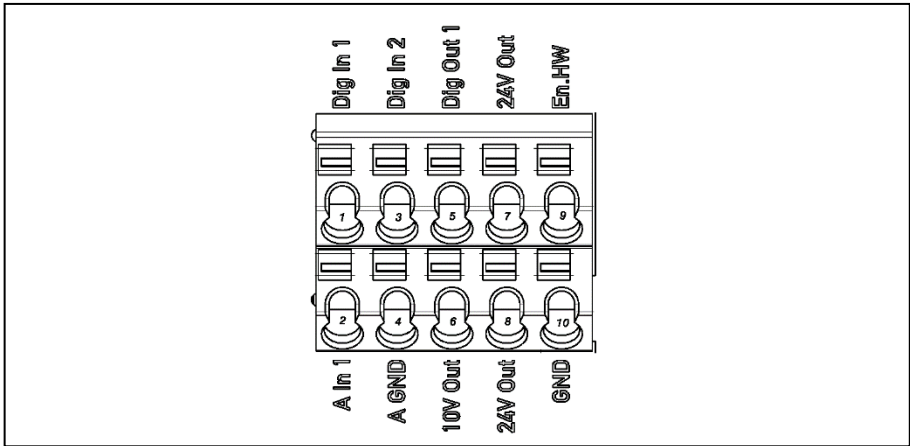


Fig. 19: Control connections of the basic application board

| Terminal no. | Designation | Assignment |
|--------------|---------------------|---------------------------------------|
| 1 | Dig. In 1 | Target value enable (parameter 1.131) |
| 2 | A. In 1 | Free (not assigned) |
| 3 | Dig. In 2 | Free (not assigned) |
| 4 | A GND (ground 10 V) | Ground |
| 5 | Dig. Out | Fault message (parameter 4.150) |
| 6 | 10 V Out | For ext. voltage divider |
| 7 | 24 V Out | Int. power supply |
| 8 | 24 V Out | Int. power supply |
| 9 | En HW (enable) | Enable hardware |
| 10 | GND (ground) | Ground |

3.4.5 Connection diagram

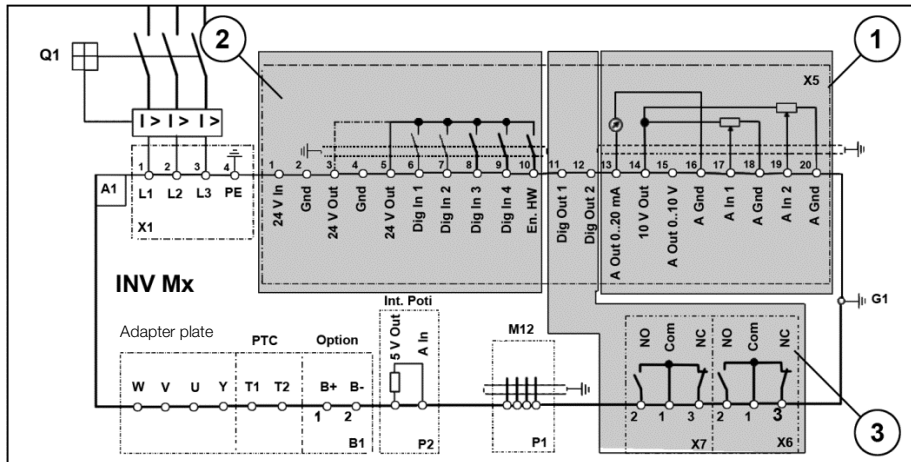


Fig. 20: Control connections

| Characters | Explanation |
|----------------|--|
| A1 | Drive controller type: INV Mx IV01 (3 x 400 VAC) |
| B1 | Connection for external brake resistor (option) |
| G1 | M6 grounding screw (connection for residual currents > 3.5 mA) |
| P1 | RS485 programming interface (M12 plug) |
| P2 | Internal potentiometer |
| Q1 | Motor protection switch or load break switch (optional) |
| X1 | Mains terminals |
| X5 – X7 | Digital/analogue inputs and outputs |

The drive controller is ready once a 3 x 400 VAC mains supply has been activated (on terminals L1 to L3) or a 565 V DC mains supply has been activated (on terminals L1 and L3).

The drive controller can also be started up by connecting an external 24 V voltage.

3.5 Installing the wall-mounted drive controller

3.5.1 Suitable installation location for wall mounting

Ensure that the installation location for an INVEOR wall mounting meets the following conditions:

- The drive controller has to be mounted on an even and fixed surface.
- The drive controller may only be mounted on non-flammable bases.
- There must be clearance of 200 mm around the drive controller to ensure free convection.

The following figure shows the assembly dimensions and the free spaces required for installing the drive controller.

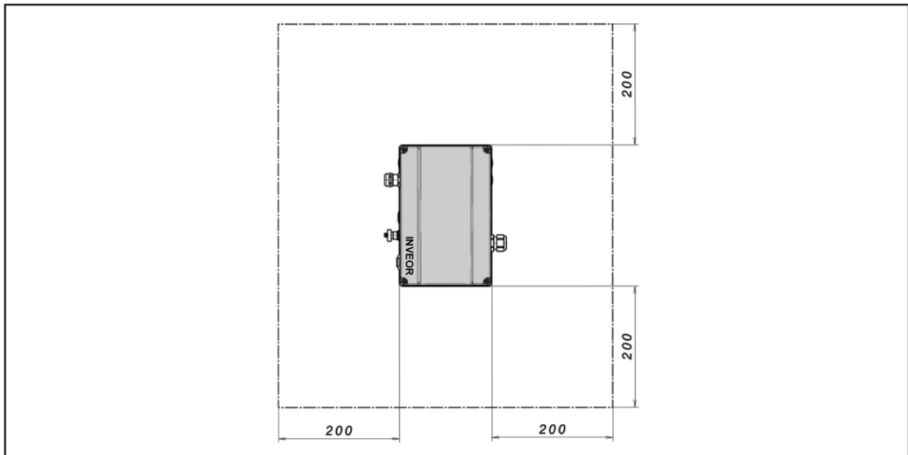


Fig. 21: Minimum clearances

For the "wall mounting" version, the line length between the motor and INVEOR may not exceed 5 m (for exception, see Chapter [10.1 EMC limit classes](#)). Only use a shielded cable with the required cross-section. There must be a PE connection (underneath the wall mounting's terminal board)!

3.5.2 Mechanical installation sizes A - C

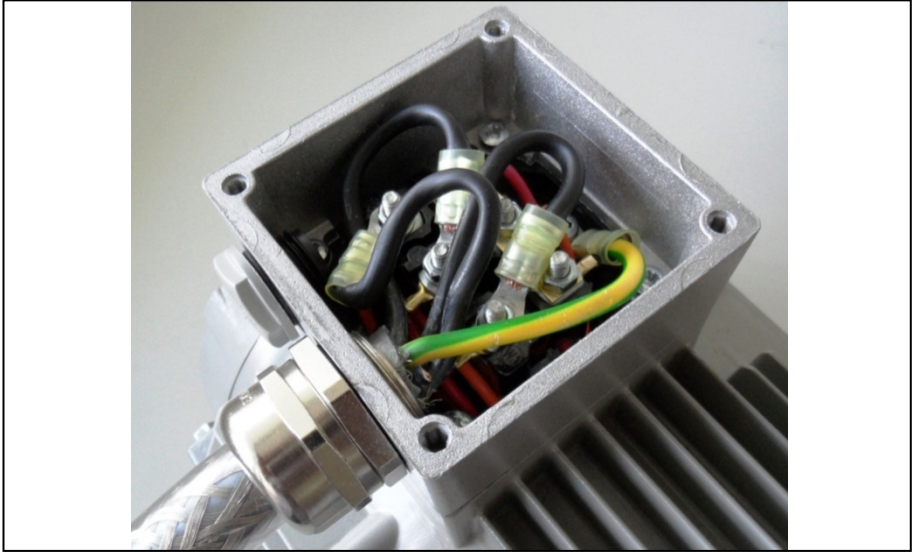


Fig. 22: Wiring on the motor connection box

1. Open the motor connection box.



IMPORTANT INFORMATION

Depending on the required motor voltage, the star or triangle connection must be made in the motor connection box!

2. Use a suitable EMC screw connection to attach the shielded cable to the motor connection box!
Ensure that the shielding contact is in order (large surface)!
3. Connect the prescribed PE connection in the motor connection box!
4. Close the motor connection box.

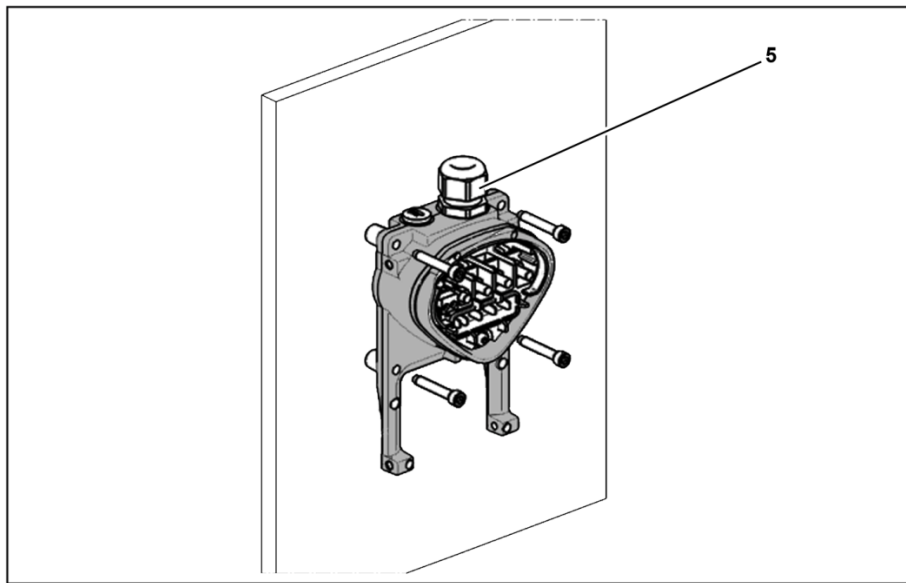


Fig. 23: Fastening the adapter plate to the wall



IMPORTANT INFORMATION

The drive controller may not be installed without an adapter plate!

- Find a position that meets the required ambient conditions described in the "[Installation requirements](#)" section.
- To achieve optimum self-convection of the drive controller, ensure that the (EMC) screw connection (5) is facing upwards during installation.
- If there is no additional ventilation for the INVEOR (optional for size C), only vertical installation is permitted.

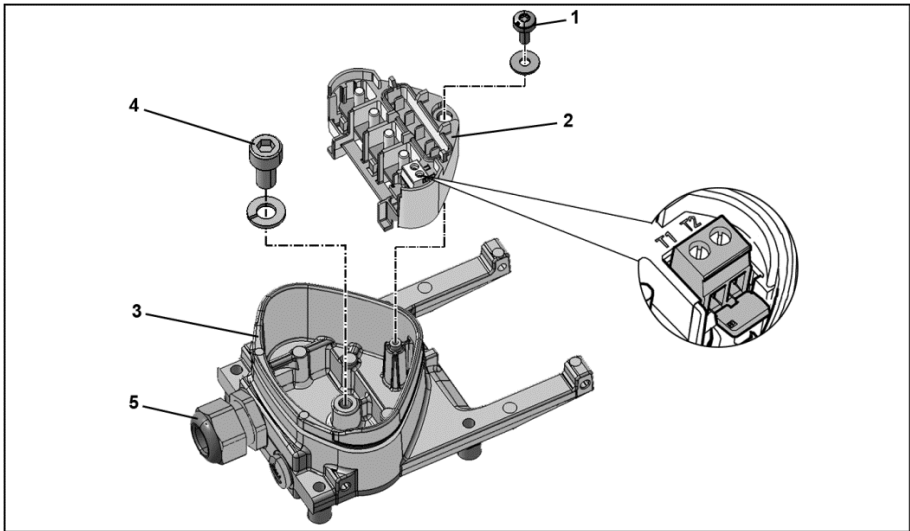


Fig. 24: Wiring

1. Release the screw (1) to remove the contact plate (2) from the adapter plate (3). The (M6 x 12) PE connection (4) is underneath the contact plate.
2. Guide the connection cable from the motor to the adapter plate (3) through the integrated EMC screw connection (5).
3. This PE connection (torque: 4.0 Nm) must be made to the same ground potential as the motor. The cross-section of the equipotential bonding line must correspond to at least the cross-section of the power cable.

! DANGER!



Risk of death due to electrical shock!

Death or serious injury!

The drive controller must be grounded with the motor according to relevant regulations.

The PE connection between the motor and drive controller should be established using the hexagon socket screw (4) and the spring ring included in the scope of supply for the adapter plate (3).

4. Refit the contact plate (2) in the adapter plate (3).
5. Fasten the contact plate (2) using the screw (1) (torque: 1.2 Nm).




INFORMATION

After fastening the contact plate (2), ensure that it is mounted floating.

Continues on next page

Continuation

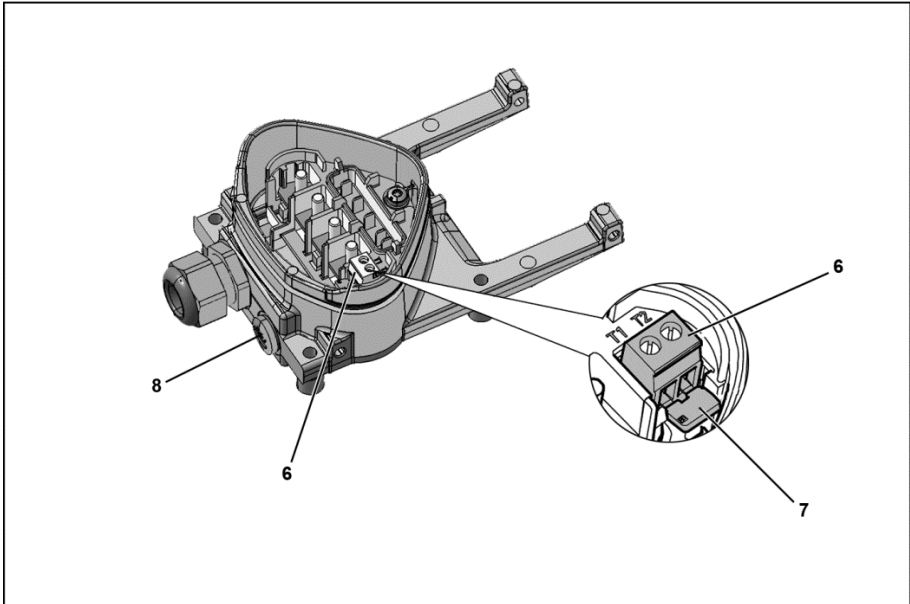

6. Wire the motor cable to contacts U, V, W (and the star point in some cases) in the connection terminal, as described in the "[Basic connection versions](#)" chapter. Use cable shoes (M5) to do this.
7. Before connecting an existing motor PTC to the T1 and T2 terminals (6), remove the pre-assembled short-circuit bridge (7).

DANGER!



**Risk of death due to electrical shock!
Death or serious injury!**

The motor PTC is energised once the INVEOR is connected, therefore it must be connected using a separate insulated motor lead.

Only motor PTCs corresponding to DIN 44081/44082 may be connected!

Replace the dummy screw (8) with a suitable standard screw connection and guide both ends to T1 and T2 (6).

Continues on next page

Continuation

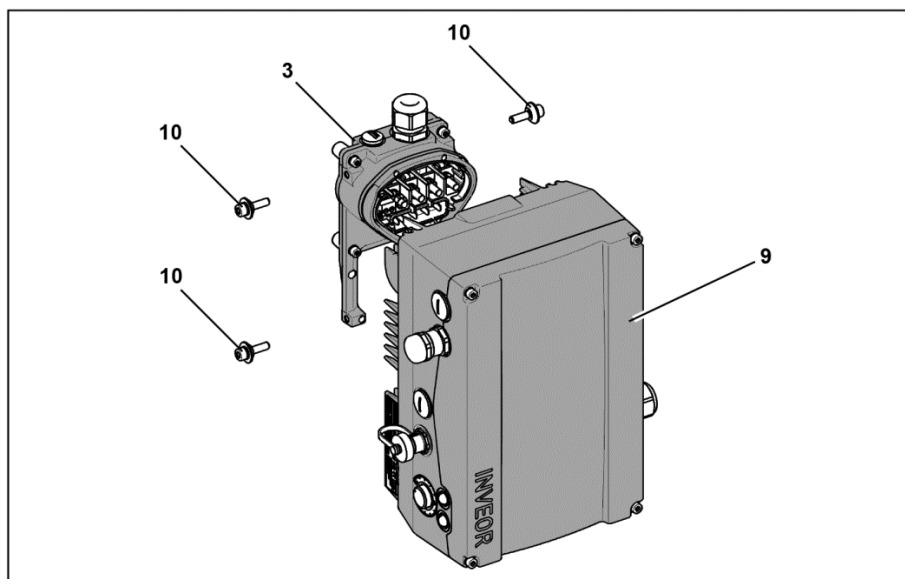


Fig. 25: Attaching the drive controller

8. Position the drive controller (9) on the adapter plate (3) so that the collar of the adapter dips into the opening on the floor of the cooling element.
9. Fasten the drive controller (9) to the adapter plate (3) with the help of the screws (10) provided (torque: 4.0 Nm).

3.5.3 Mechanical installation of size D

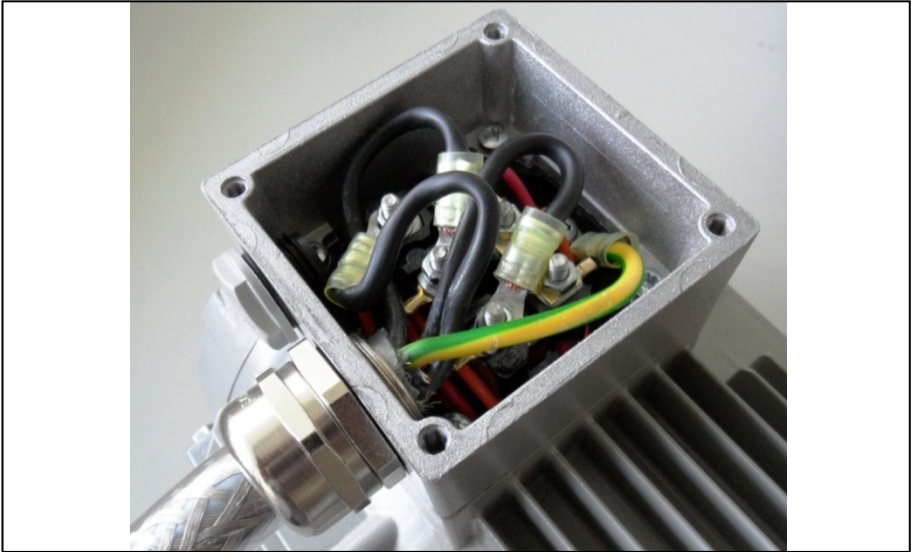


Fig. 26: Wiring on the motor connection box

1. Open the motor connection box.



IMPORTANT INFORMATION

Depending on the required motor voltage, the star or triangle connection must be made in the motor connection box!

2. Use a suitable EMC screw connection to attach the shielded cable to the motor connection box!
Ensure that the shielding contact is in order (large surface)!
3. Connect the prescribed PE connection in the motor connection box!
4. Close the motor connection box.

Continues on next page

Continuation

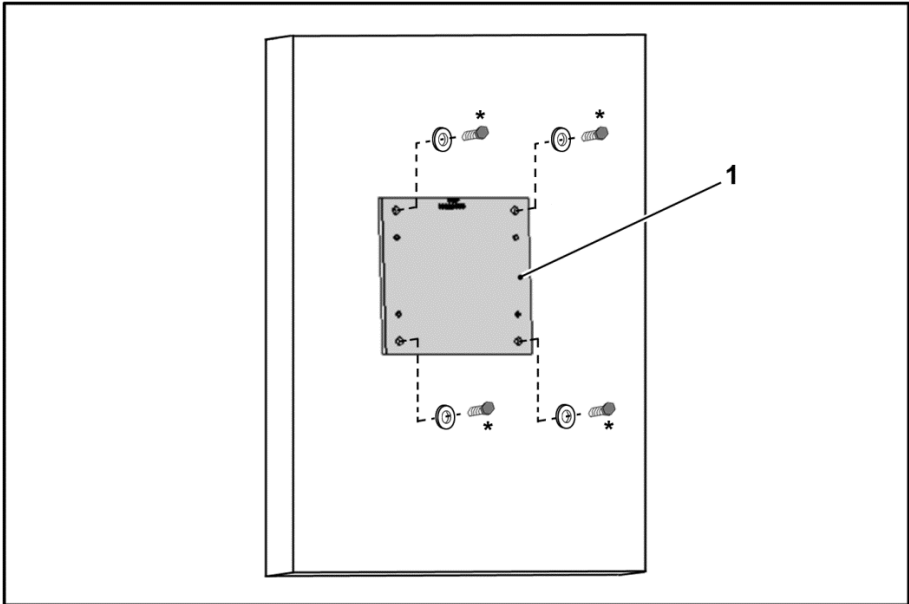


Fig. 27: Fastening adapter plate size D to the wall

**IMPORTANT INFORMATION**

The drive controller may not be installed without an adapter plate (1)!

- Find a position that meets the required ambient conditions described in the "Installation requirements" section.
- 5. Mount the adapter plate (1) on the wall with four screws*.

Continues on next page

*** The screws are not part of the scope of delivery.**

Continuation

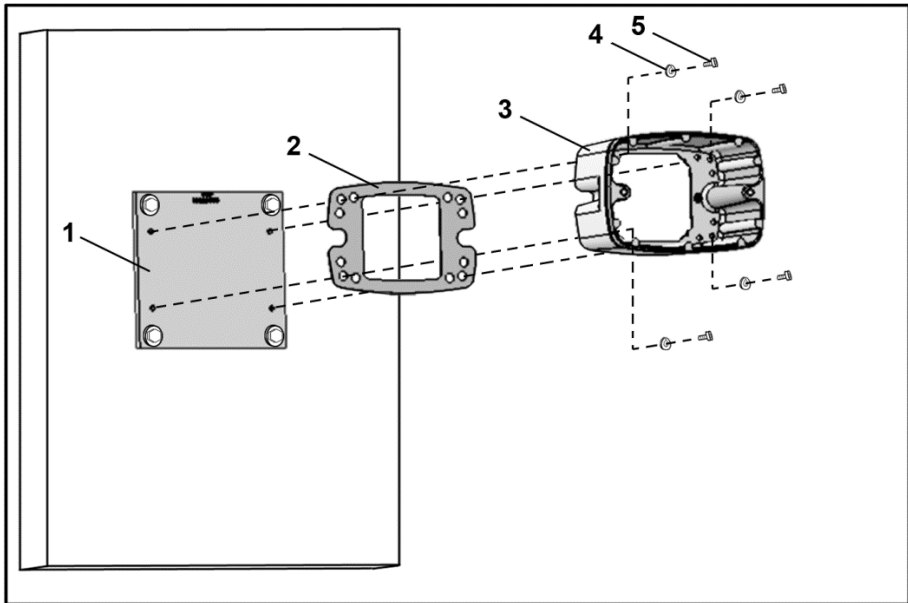


Fig. 28: Fastening support size D to the adapter plate

6. Mount seal (2), along with support (3), on adapter plate (1).
Use the retaining bolts (5) and spring elements (4) provided (torque 8.5 Nm).

**IMPORTANT INFORMATION**

Please ensure that the seal (2) sits perfectly!

Continues on next page

Continuation

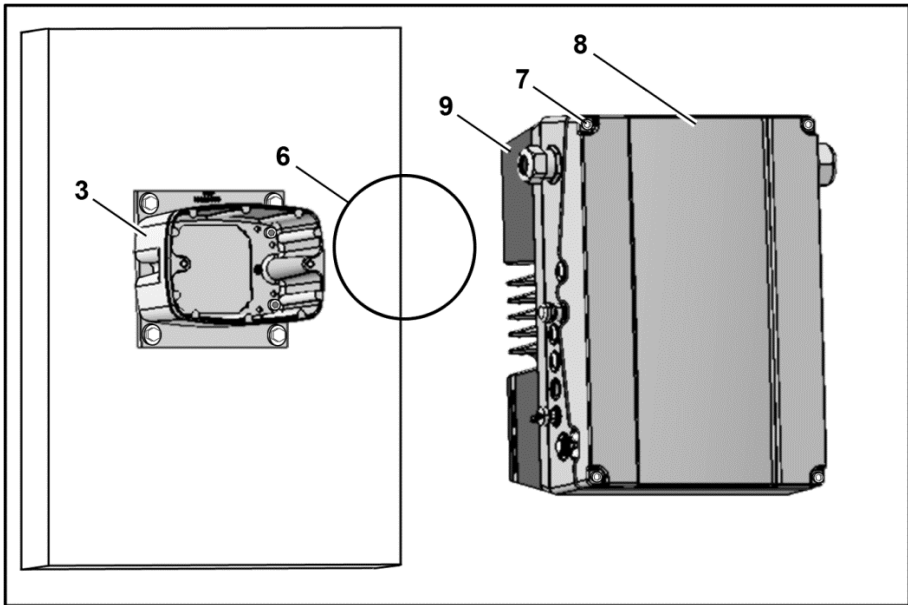


Fig. 29: Inserting O-ring seal size D

7. Insert O-ring seal (6) in groove of support (3).



IMPORTANT INFORMATION

Please ensure that the O-ring seal (6) sits perfectly!

8. Unscrew the four screws (7) from the cover (8) of the drive controller (9).
9. Take off the cover (8).

Continues on next page

Continuation

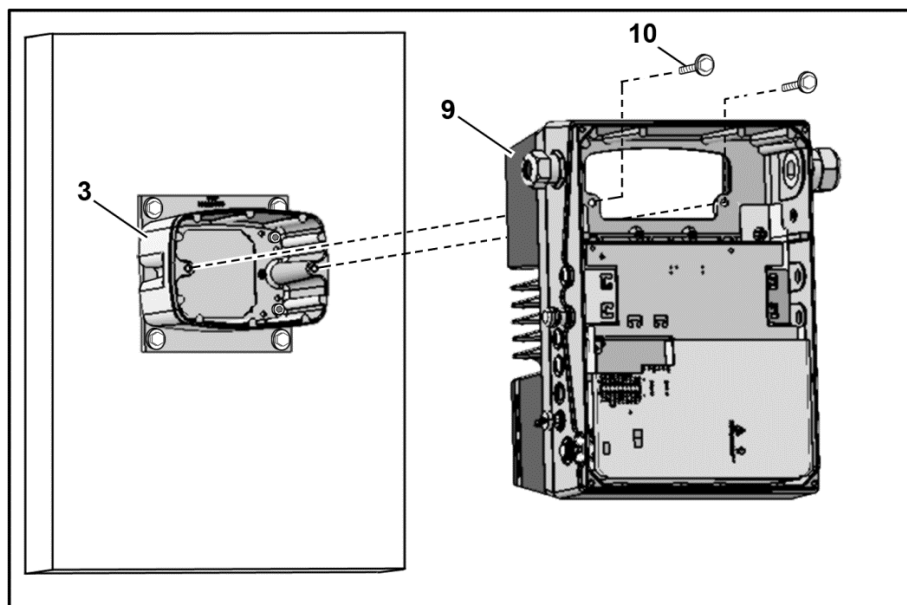


Fig. 30: Fastening drive controller to support size D

10. Carefully place drive controller (9) on support (3).
11. Evenly screw down both parts with the two M8 screws (10) (torque: max. 25 Nm).

Continues on next page

Continuation

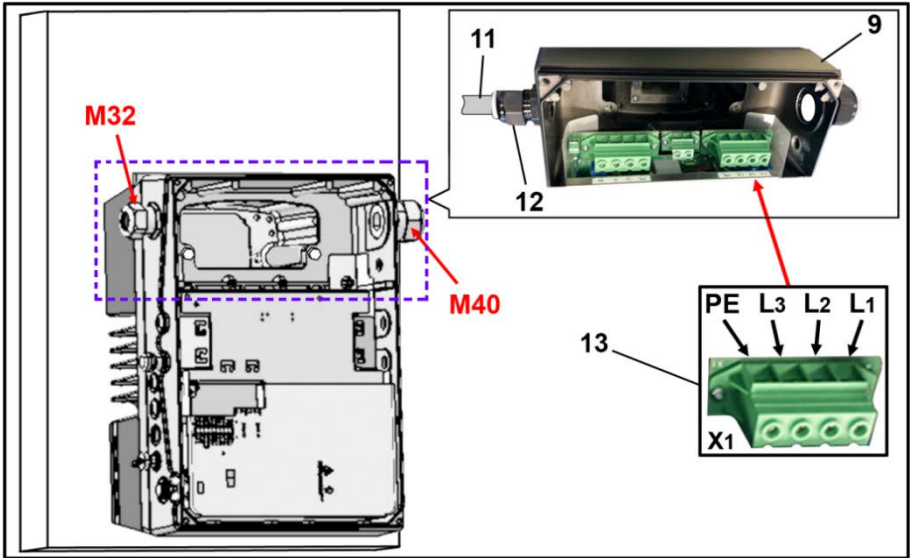


Fig. 31: Mains connection size D

12. Guide mains connection cable (11) through cable screw connection (12) [M32] into drive controller (9).



IMPORTANT INFORMATION

The cable screw connection provides strain relief, and the PE connection cable must be connected in a leading fashion (considerably longer).


13. Connect the cables with the terminals [X1] (13) as follows:

| 400 V connection | | | |
|------------------|----|----|----|
| L1 | L2 | L3 | PE |

The protective conductor must be connected to the "PE" contact.

Continues on next page

Continuation

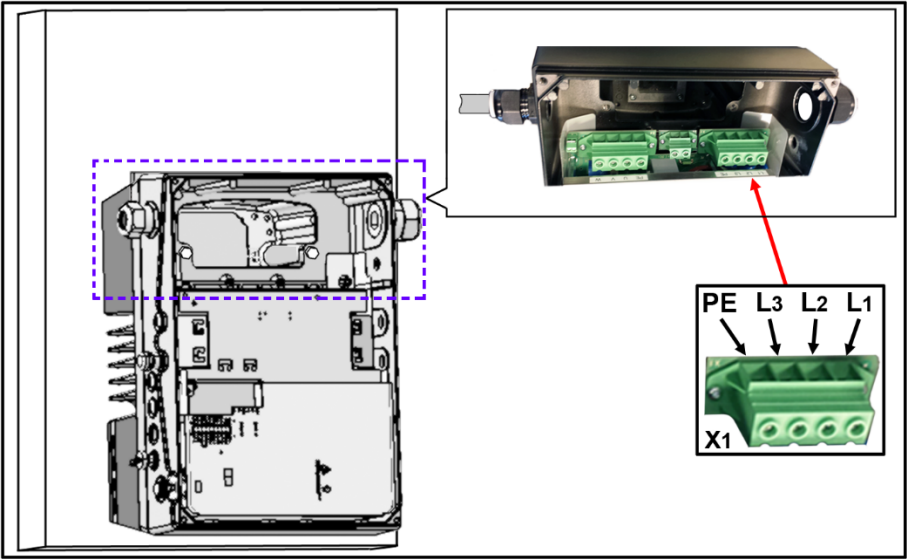

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | Mains phase 1 |
| 2 | L2 | Mains phase 2 |
| 3 | L3 | Mains phase 3 |
| 4 | PE | Protective conductor |

Tab. 13: 3~ 400 V terminal assignment X1

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | L1 | DC mains (+) |
| 2 | L2 | Not assigned |
| 3 | L3 | DC mains (-) |
| 4 | PE | Protective conductor |

Tab. 14: DC feed 565 V terminal assignment X1

Continues on next page

Continuation

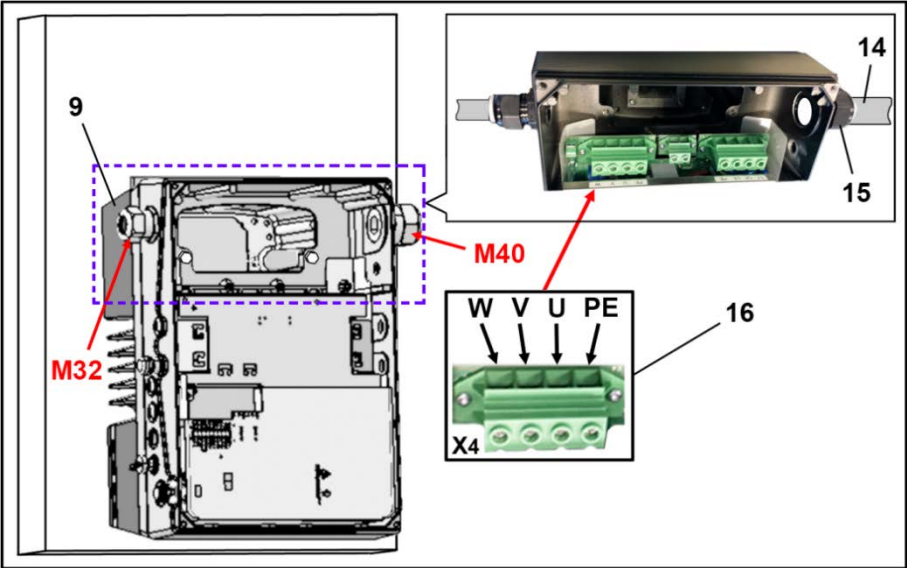


Fig. 32: Motor connection size D

14. Guide motor connection cable (14) through cable screw connection (15) [M40] into drive controller (9).



IMPORTANT INFORMATION

The cable screw connection provides strain relief, and the PE connection cable must be connected in a leading fashion (considerably longer).

15. Connect the cables with the terminals [X4] (16) as follows:

| Terminal no. | Designation | Assignment |
|--------------|-------------|----------------------|
| 1 | PE | Protective conductor |
| 2 | U | Motor phase 1 |
| 3 | V | Motor phase 2 |
| 4 | W | Motor phase 3 |

Tab. 15: Motor connection assignment X4

Continues on next page

Continuation

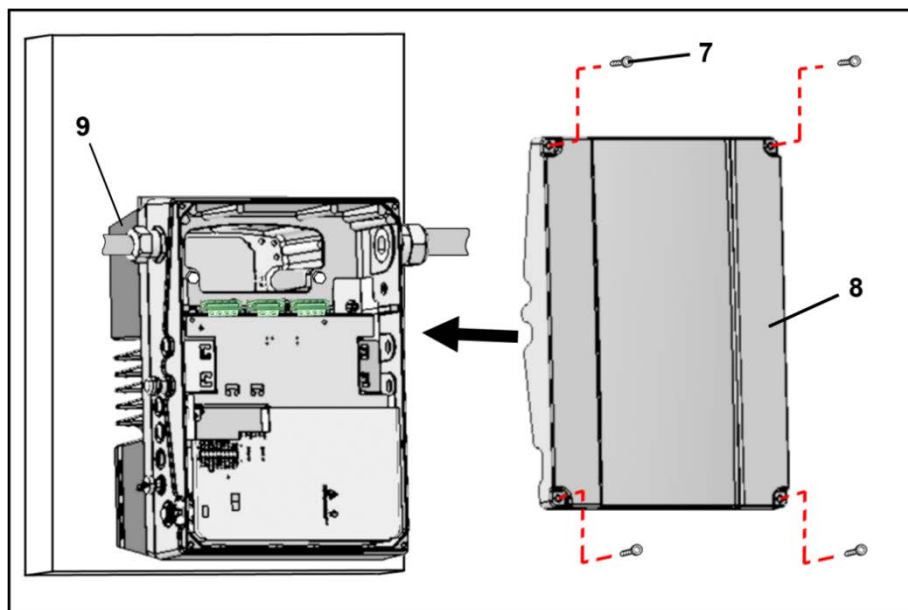


Fig. 33: Closing housing size D

16. Place cover (8) on housing of drive controller (9).
17. Screw down both parts with the four screws (7) (torque 4 Nm).

3.5.4 Power connection

The power connections should be designed as described in section 3.4 ff.

"Installing the drive controller integrated in the motor".

3.5.5 Brake chopper

The brake connections should be designed as described in section 3.4. 3 ff.
"Connections for brake resistor".

3.5.6 Control connections

The control connections should be designed as described in section 3.4 ff.
"Installing the drive controller integrated in the motor".

3.6 Disassembly and assembly of the INVEOR fan, size "D"

Below you will find a description of how to replace the size "D" fan on the INVEOR. For your own safety, be sure to observe the safety notices and information provided.

DANGER!



Risk of death due to fire or electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

Only allow appropriately qualified staff to undertake disassembly and assembly.

Only use staff who are trained in mounting, installation, commissioning and handling.

Always ground the device in accordance with DIN EN 61140; VDE 0140, NEC and other relevant standards.

Continues on next page

3.6.1 Fan disassembly



DANGER!

Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.



Danger due to electrical shock and discharge.

Wait two minutes (discharge time of the capacitors) after shut-down


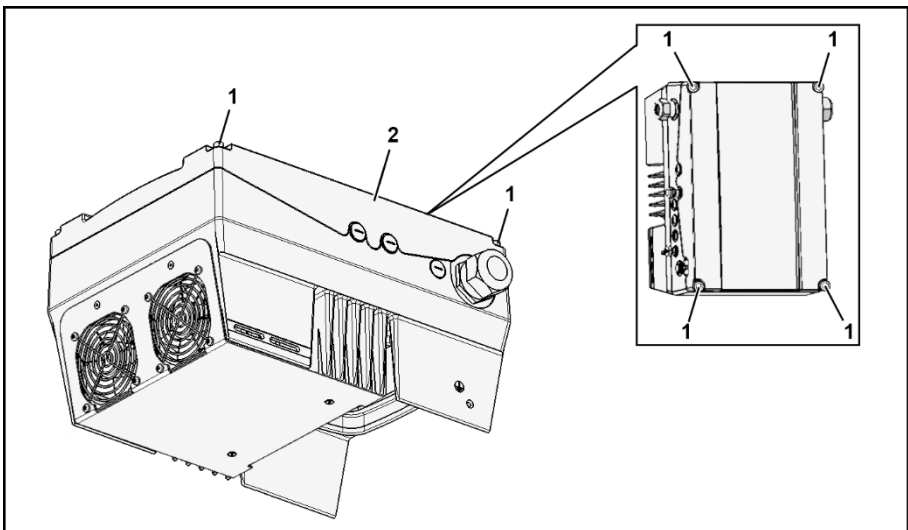


Fig. 34: Disassembly of fan, size D

1. Unscrew the four screws (1) from the cover (2) of the drive controller.
2. Take off the cover (2) of the drive controller.

Continues on next page

Continuation

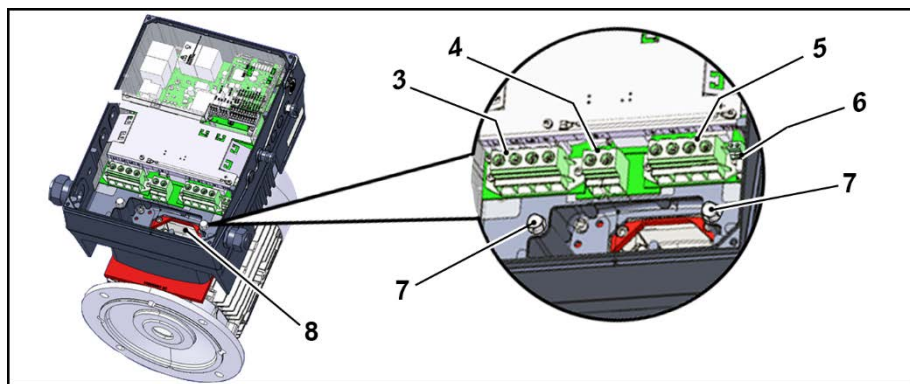

DANGER!



Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

3. Disconnect the wires from the following connections:
 - (3) "Mains terminal [X1]",
 - (4) "Brake resistor [X2] (optional)",
 - (5) "Motor terminal [X4]",
 - (6) "Motor PTC/Klixon [X11]".
4. Unscrew both screws (7).
5. Carefully lift drive controller off support (8) and deposit on a clean, level surface.

Continues on next page

Continuation

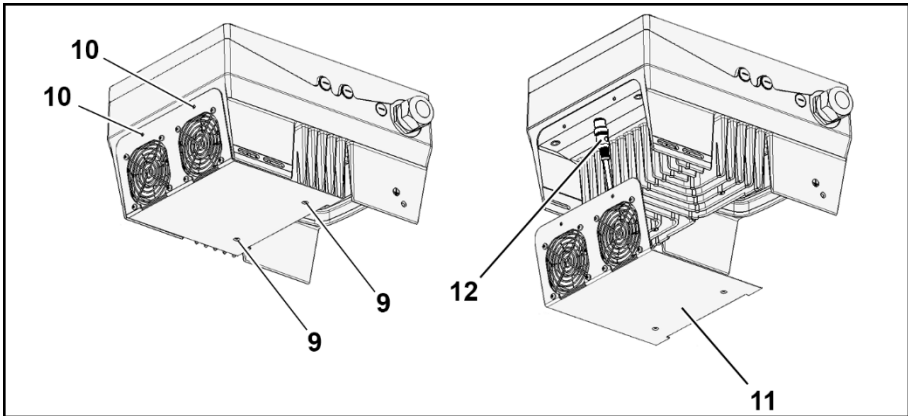


Fig. 35: Disassembly/assembly of fan, size D


6. Unscrews the screws (9) and (10).
7. Carefully release fan unit (11) from drive controller.
8. Disconnect the M12 plug (12).

3.6.2 Fan assembly

1. Plug M12 plug (12) of new fan unit (11) onto socket on drive controller.
2. Insert new fan unit (11) in drive controller and screw together with screws (9) and (10).

Continues on next page

Continuation

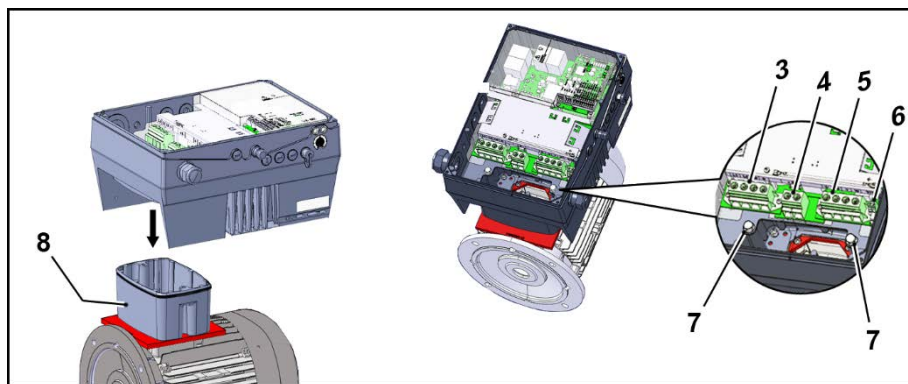**IMPORTANT INFORMATION**

When placing drive controller on support (8) ensure that seal (13) sits perfectly!

3. Carefully attach drive controller to support (8) and secure it evenly with both M8 screws (7) (torque: max. 25.0 Nm).

DANGER!


Risk of death due to electrical shock!
Death or serious injury!

De-energise drive controller and secure it against being restarted.

4. Connect all cables to the following connections:
 - (3) "Mains terminal [X1]"
(see chapter 3.3.2 "Power connection/size D")
 - (4) "Brake resistor [X2] (optional)"
(see chapter 3.3.3)
 - (5) "Motor terminal [X4]"
(see chapter 3.3.2 "Power connection/size D")
 - (6) "Motor PTC/Klixon [X11]" (optional)

Continues on next page

Continuation

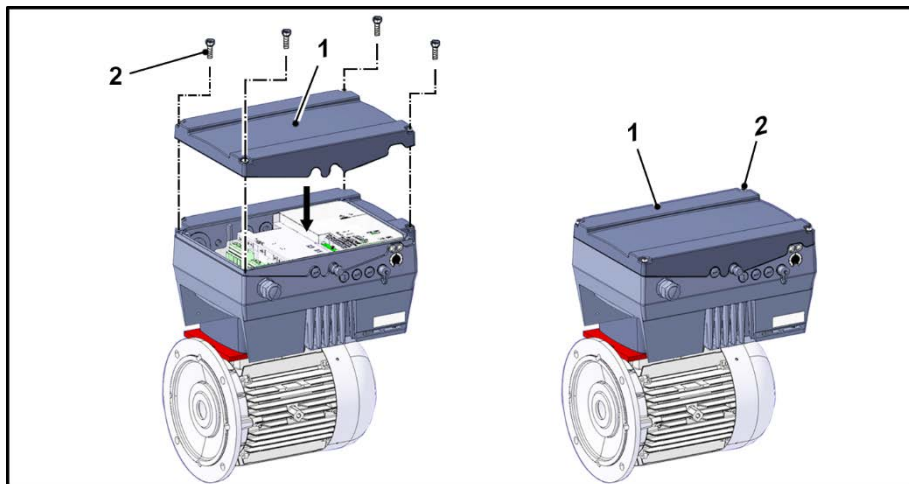

5. Place cover (1) on housing of drive controller.
6. Screw down both parts with the four screws (2) (torque: 4 Nm).

4. Commissioning

| | | |
|-------|--|----|
| 4.1 | Safety instructions for commissioning | 87 |
| 4.2 | Communication..... | 88 |
| 4.3 | Block diagram..... | 90 |
| 4.4 | Commissioning steps..... | 91 |
| 4.4.1 | Commissioning using the PC:..... | 91 |
| 4.4.2 | Commissioning using PC, combined with MMI option | 92 |

4.1 Safety instructions for commissioning



Damage to property possible

If the information is not observed, the drive controller could be damaged and destroyed during subsequent commissioning.

Commissioning may only be performed by qualified staff. Safety precautions and warnings must always be observed.



DANGER!

Risk of death due to electrical shock! Death or serious injury!

Be sure that the power supply provides the correct voltage and is designed for the required current.

Use suitable circuit breakers with the prescribed nominal current between the mains and drive controller.

Use suitable fuses with appropriate current values between the mains and drive controller (see technical data).

The drive controller must be grounded with the motor according to relevant regulations. Non-compliance may result in serious injury.

4.2 Communication

The drive controller can be commissioned in the following ways:

- using the INVEORpc PC software



Fig. 36: PC software – start screen

- using the INVEOR MMI handheld controller*



Fig. 37: MMI handheld controller

* Man-machine interface

- using the MMI* in the cover (option)

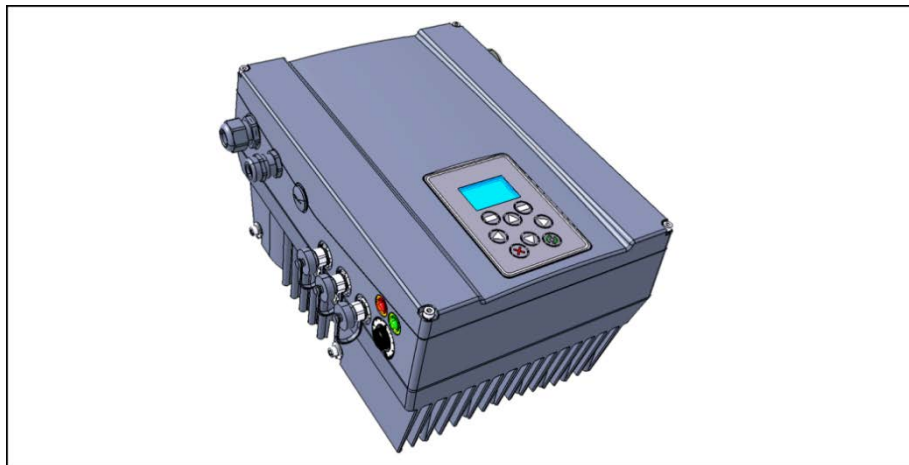


Fig. 38: MMI option

* Man-machine interface

4.3 Block diagram

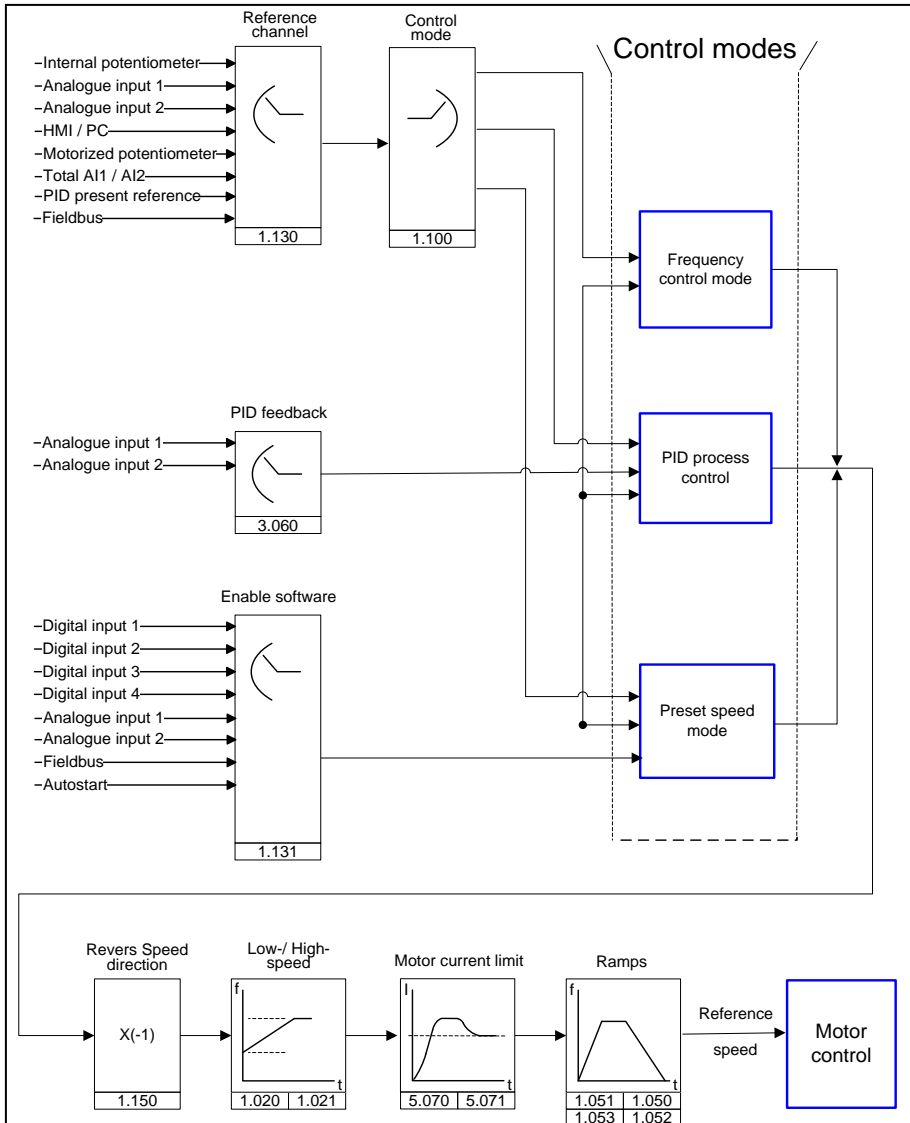


Fig. 39: General structure of target value generation

4.4 Commissioning steps



INFORMATION

Parameterisation is possible prior to device installation!

Parameterisation can be performed before the drive controller is installed in the motor.

The drive controller has a 24 V low-voltage input for this purpose, which can supply the electric system without requiring mains power.

The commissioning can be performed using a PC communication cable USB at M12 plug with integrated interface converter RS485/RS232 (part no. 10023950) or using the INVEOR handheld controller MMI with connection cable RJ9 at M12 plug (part no. 10004768).

4.4.1 Commissioning using the PC:

1. Install the INVEORpc software (you can obtain programming software from KOSTAL free of charge). Operating system required: Windows XP or Windows 7 [32 / 64 bit]). We recommend undertaking the installation process as an administrator.
2. Connect the PC to the M12 plug M1 with the optional connection cable.
3. Load or determine the motor data record (parameters 33.030 to 33.050); it may be necessary to optimise the speed control (parameters 34.090 to 34.091).
4. Perform the application settings (ramps, inputs, outputs, target values etc.).
5. Optional: Define an access level (1 – MMI, 2 – user, 3 – manufacturer).

See Fig. of block diagram in chapter [Quickstart guide 11](#)

In order to ensure an ideal operating structure for the PC software, the parameters are classified into different access levels.

The following levels exist:

1. handheld controller: – the drive controller is programmed using the handheld controller.
2. user: – the basic parameters can be programmed into the drive controller using the PC software.
3. Manufacturer: – an extended selection of parameters can be programmed into the drive controller using the PC software.

4.4.2 Commissioning using PC, combined with MMI option

1. Install the INVEORpc software (you can obtain programming software from KOSTAL free of charge). Operating system required: Windows XP or Windows 7 [32 / 64 bit]. We recommend undertaking the installation process as an administrator.
2. Connect the PC to the M12 plug M1 with the optional connection cable.



IMPORTANT INFORMATION

After the power on the drive controller has been switched on, the diagnosis interface (M12 PC/MMI) is initially inactive.

To activate this interface, the "MMI option" has to be put into standby mode.

To do this, simultaneously press buttons (1) and (2) for approx. 1.5 sec.

"Standby" appears in the MMI display and internal communication is interrupted for 25 sec.

Continues on next page



If communication for the INVEORpc tool is established within 25 sec., the "MMI option" remains in standby mode.

Data can now be exchanged with the PC and/or an external MMI.

If communication is aborted or cannot be established within 25 sec., the "MMI option" switches from standby mode to normal mode.

Turning the display 180°

Depending on how the INVEOR is installed within the system, the display may have to be turned 180°.

You can turn the display 180° using parameter 5.200

by setting the parameter value to "1"



INFORMATION

The display is only turned 180° once the "Disconnect" button has been pressed in the "INVEORpc tool".

Alternatively, the display can also be turned 180° in "normal mode".

To do this, simultaneously press buttons (3) and (4) for approx. 1.5 sec.

The display and functional button assignment are turned 180°.



5. Parameters

| | | |
|--------|--|-----|
| 5.1 | Safety instructions for working with parameters..... | 95 |
| 5.2 | General information on parameters..... | 95 |
| 5.2.1 | Explanation of operating modes..... | 95 |
| 5.2.2 | Structure of the parameter tables..... | 99 |
| 5.3 | Application parameters..... | 100 |
| 5.3.1 | Basic parameter..... | 100 |
| 5.3.2 | Fixed frequency..... | 109 |
| 5.3.3 | Motor potentiometer | 110 |
| 5.3.4 | PID process controller..... | 112 |
| 5.3.5 | Analogue inputs | 117 |
| 5.3.6 | Digital inputs | 120 |
| 5.3.7 | Analogue output | 121 |
| 5.3.8 | Digital outputs..... | 122 |
| 5.3.9 | Relay | 124 |
| 5.3.10 | Virtual output | 127 |
| 5.3.11 | External fault | 130 |
| 5.3.12 | Motor current limit..... | 130 |
| 5.3.13 | Stall detection | 132 |
| 5.3.14 | Field bus..... | 135 |
| 5.4 | Performance parameters..... | 137 |
| 5.4.1 | Motor data..... | 137 |
| 5.4.2 | I^2t | 141 |
| 5.4.3 | Switching frequency..... | 142 |
| 5.4.4 | Controller data | 142 |
| 5.4.5 | Quadratic characteristic curve | 145 |
| 5.4.6 | Synchronous motor controller data..... | 146 |

This chapter contains the following:

- an introduction to the parameters
- an overview of the most important commissioning and operation parameters

5.1 Safety instructions for working with parameters



DANGER!

**Risk of death due to restarting motors!
Death or serious injury!**

Non-observance may result in death, serious injury or damage.

Certain parameter settings and changing parameter settings during operation may result in the INVEOR drive controller restarting automatically after the supply voltage has failed, or in undesirable changes in the operating behaviour.



INFORMATION

If parameters are changed while the device is in operation, it may take a few seconds for the effect to become noticeable.

5.2 General information on parameters

5.2.1 Explanation of operating modes

The operating mode is the instance in which the target value is generated.

In the case of frequency setting mode, this is a simple conversion of the raw input target value into a rotation speed target value. In the case of PID process control, the target value and actual value are compared and the system then regulates to a specific process variable.

Frequency setting mode:

The target values from the "target value source" (1.130) are rescaled into frequency target values.

0 % is the "minimum frequency" (1.020).

100 % is the "maximum frequency" (1.021).

The target value's plus or minus sign is the decisive factor in rescaling.

PID process control:

The target value for the PID process controller is read in percentage steps as in the “frequency setting mode”. 100 % corresponds to the working range of the connected sensor, which is read in via the actual value input (selected by the “PID actual value”).

Depending on the control difference, a rotation speed value is output to the control output with the help of the amplification factors for the proportional gain (3.050), integral gain (3.051) and derivative gain (3.052).

In order to prevent the integral share from increasing infinitely in the case of uncontrollable control differences, this value is limited to a specific set value (corresponding to the “maximum frequency” (1.021)).

PID inverted:

The PID actual value can be inverted using parameter 3.061. The actual value is imported inversely, i.e. 0 V...10 V correspond internally to 100%...0%.

Please note that the target value must also be defined inversely.

An example:

A sensor with an analogue output signal (0 V...10 V) is to operate as the source of the actual value (at Alx). At an output variable of 7 V (70 %), this is to be regulated inversely. The internal actual value then corresponds to $100\% - 70\% = 30\%$.

In other words, the target value to be specified is 30 %.

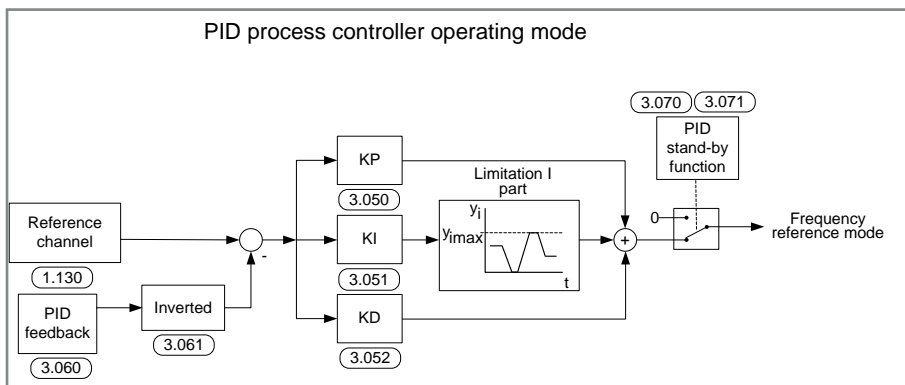


Fig. 40: PID process control

Stand-by function in PID process control

This function can provide energy savings in applications such as booster stations where PID process control is used to control to a specific process value and the pump has to run at a “minimum frequency” (1.020). As the drive controller can reduce the rotation speed of the pump in normal operation when the process variable is reducing, but it can never fall below the “minimum frequency” (1.020), this provides an opportunity for stopping the motor if it is running during a waiting time, the “PID stand-by time” (3.070) with the “minimum frequency” (1.020).

Once the actual value deviates from the target value by the set % value, the “PID stand-by hysteresis” (3.071), the control (the motor) is started again.

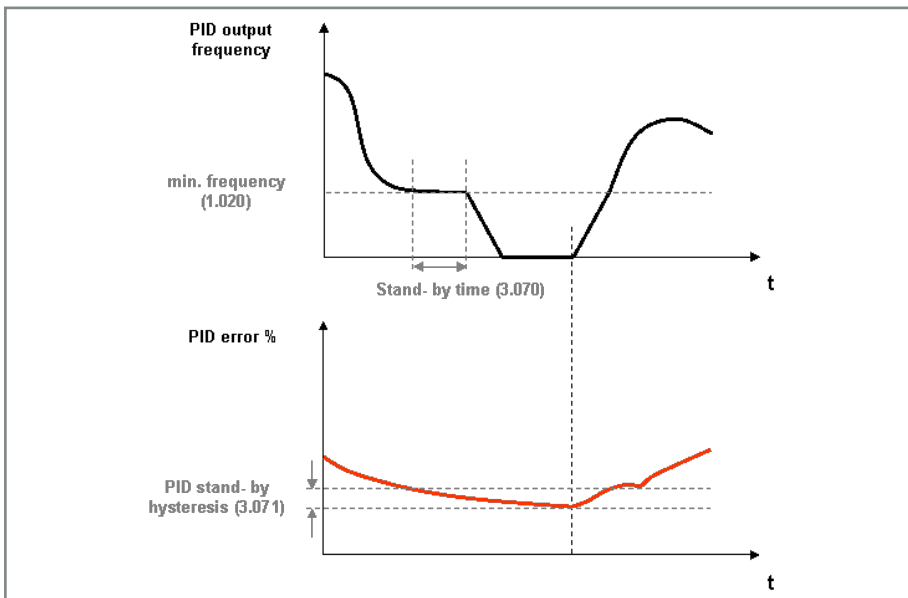


Fig. 41: Stand-by function in PID process control

Fixed frequency

This operating mode controls the drive controller with up to 7 fixed target values.

These are selected under parameter 2.050, where you can select how many fixed frequencies are to be used.

| Parameter | Name | Selection options | Function | Number of digital inputs needed |
|--------------|----------------------|-------------------|-------------------|---------------------------------|
| 2.050 | Fixed freq./mode | 0 | 1 fixed frequency | 1 |
| | | 1 | 3 fixed freq. | 2 |
| | | 2 | 7 fixed freq. | 3 |
| | | 3 | 2 fixed freq. | - |
| | Foil keypad (option) | 4 | 2 fixed freq. | - |
| | Foil keypad (option) | | | |

Depending on the number of fixed frequencies required, up to 3 digital inputs are permanently assigned in the table.

| Parameter | Name | Presetting | DI 3 | DI2 | DI1 |
|-----------------------|-------------------|------------|------|-----|-----|
| 1.020 | Min. frequency | 0 Hz | 0 | 0 | 0 |
| 2.051 to 2.057 | Fixed frequency 1 | 10 Hz | 0 | 0 | 1 |
| 2.051 to 2.057 | Fixed frequency 2 | 20 Hz | 0 | 1 | 0 |
| 2.051 to 2.057 | Fixed frequency 3 | 30 Hz | 0 | 1 | 1 |
| 2.051 to 2.057 | Fixed frequency 4 | 35 Hz | 1 | 0 | 0 |
| 2.051 to 2.057 | Fixed frequency 5 | 40 Hz | 1 | 0 | 1 |
| 2.051 to 2.057 | Fixed frequency 6 | 45 Hz | 1 | 1 | 0 |
| 2.051 to 2.057 | Fixed frequency 7 | 50 Hz | 1 | 1 | 1 |

Tab. 16: Logic table for fixed frequencies

5.2.2 Structure of the parameter tables

| | | | | | |
|----------------------------|--|-----------------------|-------|---------------|-------------------------------|
| 1 | 2 | 3 | 4 | 5 | 6 |
| 1.100 | Operating mode | | | Unit: integer | |
| Relationship to parameter: | Parameter manual S. xy | Transfer status: 2 | min: | 0 | Own value (to be entered!) |
| | | | max: | 4 | |
| | | | def.: | 0 | |
| | Selection of operating mode, see page ??? (reference to explanation in advance) Following successful software enabling (1.131) and hardware enabling, the drive controller runs as follows 0 = frequency setting mode, with the target value of the selected target value source (1.130), 1 = PID process controller, with the target value of the PID process controller, 2 = fixed frequencies, with the frequencies defined in parameters 2.051 – 2.057 | | | | |
| 9 | 8 | 7 | | | |

Fig. 42 Example of a parameter table

| Key | |
|-----|---|
| 1 | Parameter number |
| 2 | Description in the parameter manual on page |
| 3 | Parameter name |
| 4 | Transfer status 0 = switch drive controller off and on for transfer 1 = at speed of 0 2 = during operation |
| 5 | Value range (from – to factory setting) |
| 6 | Unit |
| 7 | Field for entering an own value |
| 8 | Explanation of the parameter |
| 9 | Other parameters related to this parameter. |

5.3 Application parameters

5.3.1 Basic parameter

| 1.020 | Minimum frequency | | Unit: Hz | |
|---|-------------------|------------------|-----------|----------------------------|
| Relationship to parameter: 1.150 3.070 3.080 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 400 | |
| | S.xy | | def.: 0 | |
| <p>The minimum frequency is the frequency which is supplied by the drive controller as soon as it is enabled and there is no additional target value. The frequency falls below this level if:</p> <p>a) the drive accelerates from stationary</p> <p>b) the frequency converter is blocked. The frequency then falls to 0 Hz before it is blocked.</p> <p>c) the frequency converter reverses (1.150). The field of rotation reverses at 0 Hz.</p> <p>d) the standby function (3.070) is active.</p> | | | | |

| 1.021 | Maximum frequency | | Unit: Hz | |
|---|--|------------------|-----------|----------------------------|
| Relationship to parameter: 1.050 1.051 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 400 | |
| | S.xy | | def.: 50 | |
| | The maximum frequency is the highest frequency produced by the inverter depending on the target value. | | | |

| 1.050 | Deceleration time 1 | | Unit: s | |
|---|---|------------------|------------|----------------------------|
| Relationship to parameter: 1.021 1.054 | Parameter manual: | Transfer status: | min.: 0.1 | Own value (to be entered!) |
| | | 2 | max.: 1000 | |
| | S.xy | | def.: 5 | |
| | Deceleration time 1 is the time that the drive controller needs to brake to 0 Hz from the max. frequency (1.021). If the set deceleration time cannot be reached, the fastest possible deceleration time is implemented. | | | |

| 1.051 | Run up time 1 | | Unit: s | |
|--|-------------------|------------------|------------|----------------------------|
| Relationship to parameter: 1.021 1.054 | Parameter manual: | Transfer status: | min.: 0.1 | Own value (to be entered!) |
| | S.xy | 2 | max.: 1000 | |
| | | | def.: 5 | |
| Run up time 1 is the time that the drive controller needs to accelerate from 0 Hz to the max. frequency. The run up time can be increased as a result of certain circumstances, e.g. if the drive controller is overloaded. | | | | |

| 1.052 | Deceleration time 2 | | Unit: s | |
|---|---------------------|------------------|------------|----------------------------|
| Relationship to parameter: 1.021 1.054 | Parameter manual: | Transfer status: | min.: 0.1 | Own value (to be entered!) |
| | S.xy | 2 | max.: 1000 | |
| | | | def.: 10 | |
| Deceleration time 2 is the time that the drive controller needs to brake to 0 Hz from the max. frequency (1.021). If the set deceleration time cannot be reached, the fastest possible deceleration time is implemented. | | | | |

| 1.053 | Run up time 2 | | Unit: s | |
|--|-------------------|------------------|------------|----------------------------|
| Relationship to parameter: 1.021 1.054 | Parameter manual: | Transfer status: | min.: 0.1 | Own value (to be entered!) |
| | S.xy | 2 | max.: 1000 | |
| | | | def.: 10 | |
| Run up time 2 is the time that the drive controller needs to accelerate from 0 Hz to the max. frequency. The acceleration time can be increased as a result of certain circumstances, e.g. if the drive controller is overloaded. | | | | |


| 1.054 | Ramp selection | | Unit: integer | |
|---|--|------------------|---------------|-------------------------------|
| Relationship to parameter: 1.050 - 1.053 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 9 | |
| | P. xy | | def.: 0 | |
| | Selection of used ramp pair 0 = deceleration time 1 (1.050) / run up time 1 (1.051) 1 = deceleration time 2 (1.052) / run up time 2 (1.053) 2 = digital input 1 (false = ramp pair 1 / true = ramp pair 2) 3 = digital input 2 (false = ramp pair 1 / true = ramp pair 2) 4 = digital input 3 (false = ramp pair 1 / true = ramp pair 2) 5 = digital input 4 (false = ramp pair 1 / true = ramp pair 2) 6 = customer PLC 7 = analogue input 1 (must be selected in parameter 4.030) (V 03.70 and higher) 8 = analogue input 2 (must be selected in parameter 4.060) (V 03.70 and higher) 9 = virtual output (4.230) (V 03.70 and higher) | | | |

| 1.088 | Rapid stop | | Unit: s | |
|----------------------------|---|------------------|------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0.1 | Own value (to be entered!) |
| | | 2 | max.: 1000 | |
| | P. xy | | def.: 10 | |
| | Only for variant with functional safety The rapid stop parameter prescribes the time that the inverter requires to brake to 0 Hz from the max. speed (1.021). If the set rapid stop time cannot be achieved, the fastest possible deceleration time is implemented. | | | |

| 1.100 | Operating mode | | Unit: integer | |
|--|--|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 3 | |
| | P. xy | | def.: 0 | |
| 1.130 1.131 2.051 to 2.057 3.050 to 3.071 | Selecting the operating mode Following software enabling (1.131) and hardware enabling, the drive controller runs as follows: 0 = frequency setting mode, with the target value of the selected target value source (1.130) 1 = PID process controller, with the target value of the PID process controller (3.050 – 3.071), 2 = fixed frequencies, with the frequencies defined in parameters 2.051 – 2.057. 3 = selection via INVEOR soft PLC | | | |

| 1.130 | Target value source | | Unit: integer | |
|---|---|------------------|---------------|----------------------------|
| Relationship to parameter: 3.062 to 3.069 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 10 | |
| | P. xy | | def.: 0 | |
| | Determines the source from which the target value is to be read. 0 = internal potentiometer 1 = analogue input 1 2 = analogue input 2 3 = MMI/PC 4 = SAS 6 = motor potentiometer 7 = sum of analogue inputs 1 and 2 8 = PID fixed target values (3.062 to 3.069) 9 = field bus 10 = INVEOR soft PLC | | | |

| 1.131 | Enable software | | Unit: integer | |
|----------------------------|-------------------|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 16 | |
| | | | def.: 0 | |

 **DANGER!**

The motor may start immediately, depending on the change made.
Selection of the source for the control release.
0 = digital input 1
1 = digital input 2
2 = digital input 3
3 = digital input 4
4 = analogue input 1 (must be selected in parameter 4.030)
5 = analogue input 2 (must be selected in parameter 4.060)
6 = field bus
7 = SAS / Modbus (V 03.080 and higher)
8 = digital input 1 on right / digital input 2 on left
 1.150 must be set to "0"
9 = autostart
 The motor may start immediately if hardware is enabled and a target value has been provided.
 This cannot be prevented even with parameter 1.132.

10 = INVEOR soft PLC
11 = fixed frequency inputs (all inputs which were selected in parameter 2.050)
12 = internal potentiometer
13 = foil keypad (Start & Stop keys)
14 = MMI/PC
15 = virtual output (4.230) (V 03.70 and higher)
16 = foil keypad storing (V 03.70 and higher)

| 1.132 | Start protection | | Unit: integer | |
|---|--|------------------|---------------|----------------------------|
| Relationship to parameter: 1.131 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 8 | |
| | P. xy | | def.: 1 | |
| | Selection of behaviour in response to enabling software (parameter 1.131). No effect if autostart was selected. 0 = immediate start with high signal at input of control enable 1 = start only with rising edge at input of control enable 2 = digital input 1 (function active with high signal) 3 = digital input 2 (function active with high signal) 4 = digital input 3 (function active with high signal) 5 = digital input 4 (function active with high signal) 6 = INVEOR soft PLC 7 = analogue input 1 (must be selected in parameter 4.030) (V 03.70 and higher) 8 = analogue input 2 (must be selected in parameter 4.060) (V 03.70 and higher) | | | |

| 1.150 | Rotation direction | | Unit: integer | |
|---------------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 16 | |
| | P. xy | | def.: 0 | |
| 1.131 4.030 4.030 / 4.060 | Selection of direction of rotation specification | | | |
| | 0 = dependent on target value (depending on the plus or minus sign of the target value: positive: forwards; negative: backwards) | | | |
| | 1 = forwards only (no change in direction of rotation possible) | | | |
| | 2 = backwards only (no change in direction of rotation possible) | | | |
| | 3 = digital input 1 (0 V = forwards, 24 V = backwards) | | | |
| | 4 = digital input 2 (0 V = forwards, 24 V = backwards) | | | |
| | 5 = digital input 3 (0 V = forwards, 24 V = backwards) | | | |
| | 6 = digital input 4 (0 V = forwards, 24 V = backwards) | | | |
| | 7 = INVEOR soft PLC | | | |
| | 8 = analogue input 1 (must be selected in parameter 4.030) | | | |
| | 9 = analogue input 2 (must be selected in parameter 4.060) | | | |
| | 10 = foil keypad key for reversing direction of rotation (only when motor is running) | | | |
| | 11 = foil keypad key I forwards / 2 backwards (reversal always possible) | | | |
| | 12 = foil keypad key I forwards / 2 backwards (reversal only possible when motor stationary) | | | |
| | 13 = virtual output (4.230) (V 03.70 and higher) | | | |
| | 14 = foil keypad key for reversing direction of rotation (only in operational status) storing (V 03.70 and higher) | | | |
| | 15 = foil keypad key I + II storing (V 03.70 and higher) | | | |
| | 16 = foil keypad key I + II (only if motor is stationary) stores the last active direction of rotation (V 03.70 and higher) | | | |

| 1.180 | Acknowledge function | | Unit: integer | |
|---|----------------------|------------------|---------------|----------------------------|
| Relationship to parameter: 1.181 1.182 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 7 | |
| | P. xy | | def.: 4 | |
| <p>Selection of the source for error confirmation.</p> <p>Errors can only be acknowledged once the error is no longer present.</p> <p>Certain errors can only be acknowledged by switching the controller off and on, see list of errors.</p> <p>Auto acknowledgement via parameter 1.181.</p> <p>0 = manual acknowledgement not possible</p> <p>1 = rising flank at digital input 1</p> <p>2 = rising flank at digital input 2</p> <p>3 = rising flank at digital input 3</p> <p>4 = rising flank at digital input 4</p> <p>5 = foil keypad (Ackn key)</p> <p>6 = analogue input 1 (must be selected in parameter 4.030) (V 03.70 and higher)</p> <p>7 = analogue input 2 (must be selected in parameter 4.060) (V 03.70 and higher)</p> | | | | |

| 1.181 | Automatic acknowledgement function | | Unit: s | |
|---|--|------------------|---------------|----------------------------|
| Relationship to parameter: 1.180 1.182 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1000000 | |
| | P. xy | | def.: 0 | |
| | In addition to the acknowledgement function (1.180), an automatic fault acknowledgement can be selected. 0 = no automatic acknowledgement > 0 = time for automatic resetting of error in seconds | | | |

| 1.182 | Number of automatic acknowledgements | | Unit: | |
|--|---|------------------|-----------|----------------------------|
| Relationship to parameter: 1.180 1.181 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 500 | |
| | P. xy | | def.: 5 | |
| | In addition to the automatic acknowledgement function (1.181), it is possible to limit the maximum number of automatic acknowledgements here. 0 = no restriction on automatic acknowledgements > 0 = maximum number of automatic acknowledgements permitted | | | |



INFORMATION

The internal counter for automatic acknowledgements already undertaken is reset if the motor is operated for the "maximum number of acknowledgements x auto acknowledgement time" period without any errors occurring (motor current > 0.2 A).

Example of resetting the auto acknowledgement counter

max. number of acknowledgements = 8

auto acknowledgement time = 20 sec.

}

8 x 20 sec. = 160 sec.

After 160 sec. of motor operation without errors, the internal counter for "auto acknowledgements" undertaken is reset to "0".

In this example, 8 "auto acknowledgements" were accepted.

If an error occurs within the 160 sec., "error 22" is triggered on the 9th acknowledgement attempt.

This error has to be acknowledged manually by switching off the mains.

5.3.2 Fixed frequency

This mode has to be selected in parameter 1.100, see also the section on selecting the operating mode.

| 2.050 | Fixed frequency mode | | Unit: integer | |
|---|--|--|---------------|----------------------------|
| Relationship to parameter: 1.100 2.051 to 2.057 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 4 | |
| | | | def.: 2 | |
| | Selection of the digital inputs used for fixed frequencies | | | |
| 0 = Digital In 1 | | (Fixed frequency 1) (2.051) | | |
| 1 = Digital In 1, 2 | | (Fixed frequencies 1 - 3) (2.051 to 2.053) | | |
| 2 = Digital In 1, 2, 3 | | (Fixed frequencies 1 - 7) (2.051 to 2.057) | | |
| 3 = foil keypad (key I = fixed frequency 1 / key II = fixed frequency 2) | | | | |
| 4 = fixed frequency (key I = fixed frequency 1 / key II = fixed frequency 2) storing (V 03.70 and higher) | | | | |

| 2.051 to 2.057 | Fixed frequency | | Unit: Hz | |
|--|--|------------------|-------------|----------------------------|
| Relationship to parameter: 1.020 1.021 1.100 1.150 2.050 | Parameter manual: | Transfer status: | min.: - 400 | Own value (to be entered!) |
| | P. xy | 2 | max.: + 400 | |
| | | | def.: 0 | |
| | The frequencies that are to be output at the digital inputs 1 - 3 specified in parameter 2.050 depending on the switching patterns. See chapter 5.2.1 Explanation of operating modes / fixed frequency. | | | |

5.3.3 Motor potentiometer

This mode must be selected in parameter 1.130.

The function can be used as a target value source for frequency mode and for the PID process controller.

The motor potentiometer can be used to gradually increase / decrease the target value (PID/frequency). Use parameters 2.150 to 2.154 for this purpose.

| 2.150 | MOP digital Input | | Unit: integer | |
|--|-------------------|------------------|--|----------------------------|
| Relationship to parameter: 1.130 4.030 4.050 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 8 | |
| | | | def.: 3 | |
| | | | Selection of the source for increasing and reducing the target value 0 = digital input 1 + / digital input 2 - 1 = digital input 1 + / digital input 3 - 2 = digital input 1 + / digital input 4 - 3 = digital input 2 + / digital input 3 - 4 = digital input 2 + / digital input 4 - 5 = digital input 3 + / digital input 4 - 6 = analogue input 1 + / analogue input 2 - (must be selected in parameters 4.030 / 4.050) 7 = INVEOR soft PLC 8 = foil keypad (key 1 - / key 2 +) | |

| 2.151 | MOP step range | | Unit: % | |
|---|---|------------------|-----------|-------------------------------|
| Relationship to parameter: 1.020 1.021 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 1 | |
| | Increments at which the target value changes per keystroke. | | | |

| 2.152 | MOP step time | | Unit: s | |
|----------------------------|---|------------------|------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0.02 | Own value (to be entered!) |
| | | 2 | max.: 1000 | |
| | P. xy | | def.: 0.04 | |
| | Indicates the time during which the target value is totalled with a permanent signal. | | | |

| 2.153 | MOP response time | | Unit: s | |
|----------------------------|--|------------------|------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0.02 | Own value (to be entered!) |
| | | 2 | max.: 1000 | |
| | P. xy | | def.: 0.3 | |
| | Indicates the time for which the signal is considered permanent. | | | |

| 2.154 | MOP reference memory | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 0 | |
| | Defines whether the target value of the motor potentiometer is retained even after power outage. 0 = disable 1 = enable | | | |

5.3.4 PID process controller

This mode must be selected in parameter 1.100,
the target value source must be selected in parameter 1.130,
see also chapter 5.2.1 Explanation of operating modes / fixed frequency.

| | | | | |
|---|----------------------------|------------------|-----------|-------------------------------|
| 3.050 | PID-P amplification factor | | Unit: | |
| Relationship to parameter: 1.100 1.130 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 1 | |
| Proportional share of PID controller amplification factor | | | | |

| 3.051 | PID-I amplification factor | | Unit: 1/s | |
|---|----------------------------|------------------|-----------|-------------------------------|
| Relationship to parameter: 1.100 1.130 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 1 | |
| Integral share of PID controller amplification factor | | | | |

| 3.052 | PID-D amplification factor | | Unit: s | |
|---|----------------------------|------------------|-----------|-------------------------------|
| Relationship to parameter: 1.100 1.130 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 0 | |
| Differential share of PID controller amplification factor | | | | |

| 3.055 | PID mode | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | | | def.: 0 | |
| | (V 03.84 and higher) Switches can be made between PID modes here: 0: Standard (no consideration of actual frequency) 1: with consideration of actual frequency | | | |

| 3.060 | PID actual value | | Unit: integer | |
|--|---|------------------|---------------|----------------------------|
| Relationship to parameter: 1.100 1.130 3.061 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 3 | |
| | P. xy | | def.: 0 | |
| | Selection of the input source from which the actual value for the PID process controller is imported: 0 = analogue input 1 1 = analogue input 2 2 = INVEOR soft PLC 3 = field bus (fixed customer-specific input variable 2) (V 03.72 and higher) | | | |

| 3.061 | PID inverted | | Unit: integer | |
|--|--|------------------|---------------|-------------------------------|
| Relationship to parameter: 3.060 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 0 | |
| | The actual value source (parameter 3.060) is inverted 0 = disable 1 = enable | | | |

| 3.062 to 3.068 | PID fixed target values | | Unit: % | |
|--|-------------------------|------------------|-----------|----------------------------|
| Relationship to parameter: 1.130 3.069 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 100 | |
| | P. xy | | def.: 0 | |
| The PID fixed target values which are to be issued depending on the switching patterns at the digital inputs 1 – 3 specified in parameter 3.069 (has to be selected in parameter 1.130). | | | | |

| 3.069 | PID fixed target mode | | Unit: integer | |
|--|--|------------------|--|-------------------------------|
| Relationship to parameter: 1.100 3.062 to 3.068 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 2 | |
| | | | def.: 0 | |
| | Selection of the digital inputs used for fixed frequencies | | | |
| | 0 = Digital In 1 | | (PID fixed target value 1) (3.064) | |
| | 1 = Digital In 1, 2 | | (PID fixed target values 1 - 3) (3.062 to 3.064) | |
| | 2 = Digital In 1, 2, 3 | | (PID fixed target values 1 - 7) (3.062 to 3.068) | |

| 3.070 | PID standby time | | Unit: s | |
|--|---|------------------|-------------|----------------------------|
| Relationship to parameter: 1.020 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 10000 | |
| | P. xy | | def.: 0 | |
| | If the drive controller runs for the set time at its minimum frequency (parameter 1.020), the motor is stopped (0 Hz), see also Chapter 5.2.1 Explanation of operating modes / fixed frequency. 0 = disable > 0 = waiting time until stand-by function is enabled | | | |

| 3.071 | PID stand-by hysteresis | | Unit: % | |
|---|-------------------------|------------------|----------|----------------------------|
| Relationship to parameter: 3.060 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 50 | |
| | | | def.: 0 | |
| | P. xy | | | |
| Condition for waking up the PID controller from stand-by. Once the control difference exceeds the set value as %, the control begins again, see also PID controller operating modes. | | | | |

| 3.072 | PID dry run time | | Unit: s | |
|----------------------------|---|------------------|-------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 32767 | |
| | P. xy | | def.: 0 | |
| | (V 03.70 and higher) After this set time, if the PID actual value has not reached at least 5 % and the controller is running at the max. limit, the INVEOR switches off with error no. 16 PID dry run. | | | |

| 3.073 | PID nominal value min | | Unit: % | |
|---|--|------------------|-----------|----------------------------|
| Relationship to parameter: 3.074 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 0 | |
| | (V 03.70 and higher) The PID nominal value can be limited using 2 parameters. Example: 0 -10 V nominal value potentiometer Read Min PID nominal value = 20 % Read Max PID nominal value = 80 % (3.074) Nominal value at < 2 V = 20 % Nominal value at 2 V – 8 V = 20 % - 80 % Nominal value at > 8 V = 80 % | | | |

| 3.074 | PID nominal value max | | Unit: % | |
|---|--|------------------|-----------|----------------------------|
| Relationship to parameter: 3.073 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 100 | |
| | P. xy | | def.: 100 | |
| | (V 03.70 and higher) The PID nominal value can be limited using 2 parameters. Example: 0 -10 V nominal value potentiometer Read Min PID nominal value = 20 % Read Max PID nominal value = 80 % (3.073) Nominal value at < 2 V = 20 % Nominal value at 2 V – 8 V = 20 % - 80 % Nominal value at > 8 V = 80 % | | | |

| 3.080 | PID minimum frequency 2 | | Unit: Hz | |
|--|--|------------------|-----------|----------------------------|
| Relationship to parameter: 1.020 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 400 | |
| | | | def.: 0 | |
| | (V 03.80 and higher) The minimum frequency is calculated depending on the PID target value Example: 1.020 minimum frequency = 10 Hz 3.080 PID minimum frequency 2 = 20 Hz Minimum frequency when PID target value is 0 % = 10 Hz Minimum frequency when PID target value is 50 % = 15 Hz Minimum frequency when PID target value is 100 % = 20 Hz | | | |

5.3.5 Analogue inputs

For analogue inputs 1 and 2 (Alx display AI1/AI2)

| 4.020 / 4.050 | Alx input type | | Unit: integer | |
|----------------------------|--|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 1 | Own value (to be entered!) |
| | P. xy | 2 | max.: 2 | |
| | | | def.: 1 | |
| | Function of analogue inputs 1 / 2. 1 = voltage input 2 = current input | | | |

| 4.021 / 4.051 | Alx standard Low | | Unit: % | |
|----------------------------|---|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 100 | |
| | P. xy | | def.: 0 | |
| | Specifies the minimum value of the analogue inputs as a percentage of the range Example: 0...10 V and/or 0...20 mA = 0 %...100 % 2...10 V and/or 4...20 mA = 20 %...100 % | | | |

| 4.022 / 4.052 | Alx standard High | | Unit: % | |
|----------------------------|--|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 100 | |
| | P. xy | | def.: 100 | |
| | Specifies the maximum value of the analogue inputs as a percentage of the range. Example: 0...10 V and/or 0...20 mA = 0 %...100 % 2...10 V and/or 4...20 mA = 20 %...100 % | | | |

| 4.023 / 4.053 | Alx dead time | | Unit: % | |
|----------------------------|--|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 0 | |
| | Dead time as percentage of the range of the analogue inputs. | | | |

| 4.024 / 4.054 | Alx filter time | | Unit: s | |
|----------------------------|--|------------------|------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0.02 | Own value (to be entered!) |
| | | 2 | max.: 1.00 | |
| | P. xy | | def.: 0 | |
| | Filter time of analogue inputs in seconds. | | | |

| 4.030 / 4.060 | Alx function | | Unit: integer | |
|----------------------------|--|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 0 | |
| | Function of analogue inputs 1/2 0 = analogue input 1 = digital input | | | |

| 4.033 / 4.063 | Alx physical unit | | Unit: | |
|--|---|------------------|----------|-------------------------------|
| Relationship to parameter: 4.034 / 4.064 4.035 / 4.065 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 10 | |
| | | | def.: 0 | |
| | Selection of different physical values to be displayed. | | | |
| | 0 | = | % | |
| | 1 | = | bar | |
| | 2 | = | mbar | |
| | 3 | = | psi | |
| | 4 | = | Pa | |
| | 5 | = | m³/h | |
| | 6 | = | l/min | |
| | 7 | = | ° C | |
| | 8 | = | ° F | |
| | 9 | = | m | |
| | 10 | = | mm | |

| 4.034 / 4.064 | Alx physical minimum | | Unit: | |
|---|---|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.033 / 4.063 4.035 / 4.065 | Parameter manual: | Transfer status: | min.: - 10000 | Own value (to be entered!) |
| | P. xy | 2 | max.: + 10000 | |
| | | | def.: 0 | |
| | Selection of the lower limit of a physical value to be displayed. | | | |

| 4.035 / 4.065 | Alx physical maximum | | Unit: | |
|---|----------------------|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.033 / 4.063 4.034 / 4.064 | Parameter manual: | Transfer status: | min.: - 10000 | Own value (to be entered!) |
| | P. xy | 2 | max.:+ 10000 | |
| | | | def.: 100 | |
| Selection of the upper limit of a physical value to be displayed. | | | | |

| 4.036 / 4.066 | Alx wire break time | | Unit: | |
|----------------------------|---|------------------|-------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 32767 | |
| | | | def.: 0.5 | |
| | (V 03.70 and higher) Once the mains is activated, wire break detection is only activated after this set time | | | |

| 4.037 / 4.067 | Alx inversely | | Unit: integer | |
|--|----------------------|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 0 | |
| | (V 03.80 and higher) | | | |
| The signal of the analogue input can be inverted here. | | | | |
| 0 = disable (example: 0 V = 0 % 10 V = 100 %) | | | | |
| 1 = enable (example: 0 V = 100 % 10 V = 0 %) | | | | |

5.3.6 Digital inputs

| 4.110 to 4.113 | Dlx inverted | | Unit: integer | |
|----------------------------|--|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 1 | |
| | | | def.: 0 | |
| | This parameter can be used to invert the digital input. 0 = disable 1 = enable | | | |

5.3.7 Analogue output

| 4.100 | AO1 function | | Unit: integer | |
|--|--|------------------|--|----------------------------|
| Relationship to parameter: 4.101 4.102 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 40 | |
| | | | def.: 0 | |
| | Selection of the process value that is output at the analogue output. Depending on the process value selected, the standardisation (4.101 / 4.102) must be adapted. | | | |
| | 0 | = | Not assigned / INVEOR soft PLC | |
| | 1 | = | Intermediate circuit voltage | |
| | 2 | = | Grid voltage | |
| | 3 | = | Motor voltage | |
| | 4 | = | Motor current | |
| | 5 | = | Actual frequency | |
| | 6 | = | Speed measured externally by speed sensor (if available) | |
| | 7 | = | Current angle or position (if available) | |
| | 8 | = | IGBT temperature | |
| | 9 | = | Inner temperature | |
| | 10 | = | Analogue input 1 | |
| | 11 | = | Analogue input 2 | |
| | 12 | = | Target frequency | |
| | 13 | = | Motor rating | |
| | 14 | = | Torque | |
| | 15 | = | Field bus | |
| | 16 | = | PID target value (V 03.60 and higher) | |
| | 17 | = | PID actual value (V 03.60 and higher) | |
| | 18 | = | Target frequency value after ramp (V 03.74 and higher) | |
| | 19 | = | Actual speed value (V 03.74 and higher) | |
| | 20 | = | Actual frequency value sum (V 03.74 and higher) | |
| | 21 | = | Torque sum (V 03.74 and higher) | |
| | 22 | = | Target frequency value sum after ramp (V 03.74 and higher) | |
| | 23 | = | Target frequency value sum (V 03.74 and higher) | |
| | 24 | = | Actual speed value sum (V 03.74 and higher) | |

| 4.101 | AO1 standard Low | | Unit: | |
|---|-------------------|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.100 | Parameter manual: | Transfer status: | min.: - 10000 | Own value (to be entered!) |
| | | 2 | max.:+ 10000 | |
| | P. xy | | def.: 0 | |
| Describes which area is to be broken down into the 0-10 V output voltage or the 0-20 mA output current. | | | | |

| 4.102 | AO1 standard High | | Unit: | |
|---|---|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.100 | Parameter manual: | Transfer status: | min.: - 10000 | Own value (to be entered!) |
| | | 2 | max.:+ 10000 | |
| | P. xy | | def.: 0 | |
| | Describes which area is to be broken down into the 0-10 V output voltage or the 0-20 mA output current. | | | |

5.3.8 Digital outputs

For digital outputs 1 and 2 (DOx display DO1 / DO2)

| 4.150 / 4.170 | DOx function | | Unit: integer | |
|---|---|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.151 / 4.171 4.152 / 4.172 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 51 | |
| | P. xy | | def.: 0 | |
| | Selection of the process variable to which the output should switch. 0 = Not assigned / INVEOR soft PLC 1 = Intermediate circuit voltage 2 = Grid voltage 3 = Motor voltage 4 = Motor current 5 = Actual frequency value 6 = - 7 = - 8 = IGBT temperature 9 = Inner temperature 10 = Error (NO) 11 = Error inverted (NC) 12 = Limit steps enable | | | |
| Table continues on next page | | | | |

| 4.150 / 4.170 | DOx function | | Unit: integer | |
|--|---|------------------|---|----------------------------|
| Relationship to parameter: 4.151 / 4.171 4.152 / 4.172 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 51 | |
| | P. xy | | def.: 0 | |
| | Selection of the process variable to which the output should switch. Continuation of table | | | |
| | 13 | = | Digital input 1 | |
| | 14 | = | Digital input 2 | |
| | 15 | = | Digital input 3 | |
| | 16 | = | Digital input 4 | |
| | 17 | = | Ready for operation (mains supply on, no HW enable, motor stationary) | |
| | 18 | = | Ready (mains supply on, HW enable set, motor stationary) | |
| | 19 | = | Operation (mains supply on, HW enable set, motor running) | |
| | 20 | = | Ready for operation + Ready | |
| | 21 | = | Ready for operation + Ready + Operation | |
| | 22 | = | Ready + Operation | |
| | 23 | = | Motor rating | |
| | 24 | = | Torque | |
| | 25 | = | Field bus | |
| | 26 | = | Analogue input 1 (V 03.60 and higher) | |
| | 27 | = | Analogue input 2 (V 03.60 and higher) | |
| | 28 | = | PID target value (V 03.60 and higher) | |
| | 29 | = | PID actual value (V 03.60 and higher) | |
| | 30 | = | STO channel 1 (V 03.70 and higher) | |
| | 31 | = | STO channel 2 (V 03.70 and higher) | |
| | 32 | = | Target frequency value after ramp (V 03.70 and higher) | |
| | 33 | = | Target frequency value (V 03.70 and higher) | |
| | 34 | = | Actual speed value (V 03.70 and higher) | |
| | 35 | = | Actual frequency value sum (V 03.70 and higher) | |
| | 36 | = | Torque sum (V 03.70 and higher) | |
| | 37 | = | Target frequency value after ramp sum (V 03.70 and higher) | |
| | 38 | = | Target frequency value sum (V 03.70 and higher) | |
| | 39 | = | Actual speed value sum (V 03.70 and higher) | |
| | 50 | = | Motor current limit enabled (V 03.70 and higher) | |
| | 51 | = | Nominal-actual comparison (para. 6.070 – 6.071) (V 03.70 and higher) | |

| 4.151 / 4.171 | DOx on | | Unit: | |
|--|--|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.150 / 4.170 | Parameter manual: | Transfer status: | min.: - 32767 | Own value (to be entered!) |
| | P. xy | 2 | max.: 32767 | |
| | | | def.: 0 | |
| | If the set process variable exceeds the switch-on limit, the output is set to 1. | | | |

| 4.152 / 4.172 | DOx off | | Unit: | |
|--|---|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.150 / 4.170 | Parameter manual: | Transfer status: | min.: - 32767 | Own value (to be entered!) |
| | | 2 | max.: 32767 | |
| | P. xy | | def.: 0 | |
| | If the set process variable exceeds the switch-off limit, the output is again set to 0. | | | |

5.3.9 Relay

For relays 1 and 2 (rel. x display rel. 1/ rel. 2)

| 4.190 / 4.210 | Rel.x function | | Unit: integer | |
|---|--|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.191 / 4.211 4.192 / 4.212 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 51 | |
| | | | def.: 0 | |
| | Selection of the process variable to which the output should switch. 0 = Not assigned / INVEOR soft PLC 1 = Intermediate circuit voltage 2 = Grid voltage 3 = Motor voltage 4 = Motor current 5 = Actual frequency value 6 = - 7 = - 8 = IGBT temperature 9 = Inner temperature 10 = Error (NO) 11 = Error inverted (NC) 12 = Limit steps enable Table continues on next page | | | |

| 4.190 / 4.210 | Rel.x function | | Unit: integer | |
|--|-------------------|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.191 / 4.211 4.192 / 4.212 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 51 | |
| | P. xy | | def.: 0 | |
| Selection of the process variable to which the output should switch. | | | | |
| Continuation of table | | | | |
| 13 = Digital input 1 | | | | |
| 14 = Digital input 2 | | | | |
| 15 = Digital input 3 | | | | |
| 16 = Digital input 4 | | | | |
| 17 = Ready for operation (mains supply on, no HW enable, motor stationary) | | | | |
| 18 = Ready (mains supply on, HW enable set, motor stationary) | | | | |
| 19 = Operation (mains supply on, HW enable set, motor running) | | | | |
| 20 = Ready for operation + Ready | | | | |
| 21 = Ready for operation + Ready + Operation | | | | |
| 22 = Ready + Operation | | | | |
| 23 = Motor rating | | | | |
| 24 = Torque | | | | |
| 25 = Field bus | | | | |
| 26 = Analogue input 1 (V 03.60 and higher) | | | | |
| 27 = Analogue input 2 (V 03.60 and higher) | | | | |
| 28 = PID target value (V 03.60 and higher) | | | | |
| 29 = PID actual value (V 03.60 and higher) | | | | |
| 30 = STO channel 1 (V 03.70 and higher) | | | | |
| 31 = STO channel 2 (V 03.70 and higher) | | | | |
| 32 = Target frequency value after ramp (V 03.70 and higher) | | | | |
| 33 = Target frequency value (V 03.70 and higher) | | | | |
| 34 = Actual speed value (V 03.70 and higher) | | | | |
| 35 = Actual frequency value sum (V 03.70 and higher) | | | | |
| 36 = Torque sum (V 03.70 and higher) | | | | |
| 37 = Target frequency value after ramp sum (V 03.70 and higher) | | | | |
| 38 = Target frequency value sum (V 03.70 and higher) | | | | |
| 39 = Actual speed value sum (V 03.70 and higher) | | | | |
| 50 = Motor current limit enabled (V 03.70 and higher) | | | | |
| 51 = Nominal-actual comparison (para. 6.070 – 6.071) (V 03.70 and higher) | | | | |

| 4.191 / 4.211 | Rel.x on | | Unit: | |
|--|-------------------|------------------|--|-------------------------------|
| Relationship to parameter: 4.190 / 4.210 | Parameter manual: | Transfer status: | min.: - 32767 | Own value (to be entered!) |
| | P. xy | 2 | max.: 32767 | |
| | | | def.: 0 | |
| | | | If the set process variable exceeds the switch-on limit, the output is set to 1. | |

| 4.192 / 4.212 | Rel.x off | | Unit: | |
|--|-------------------|------------------|---|----------------------------|
| Relationship to parameter: 4.190 / 4.210 | Parameter manual: | Transfer status: | min: - 32767 | Own value (to be entered!) |
| | P. xy | 2 | max: 32767 | |
| | | | def.: 0 | |
| | | | If the set process variable exceeds the switch-off limit, the output is again set to 0. | |

| 4.193/ 4.213 | Rel.x on delay | | Unit: s | |
|--|-------------------|--|-------------|----------------------------|
| Relationship to parameter: 4.194 / 4.214 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 10000 | |
| | | | def.: 0 | |
| | | Specifies the length of the switch-on delay. | | |

| 4.194/ 4.214 | Rel.x off delay | | Unit: | |
|---|---|------------------|-------------|-------------------------------|
| Relationship to parameter: 4.193 / 4.213 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 10000 | |
| | | | def.: 0 | |
| | Specifies the length of the switch-off delay. | | | |

5.3.10 Virtual output

The virtual output can be parameterised like a relay and is available as an option with the following parameters:

1.131 Software enable / 1.150 Direction of rotation / 1.054 Ramp selection /
5.090 Parameter set change / 5.010 + 5.011 External error 1 + 2

| 4.230 | VO function | | Unit: integer | |
|--|----------------------|------------------|---------------|----------------------------|
| Relationship to parameter: 1.054 1.131 1.150 4.231 4.232 5.010 / 5.011 5.010 / 5.011 5.090 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 51 | |
| | | | def.: 0 | |
| | (V 03.70 and higher) | | | |
| Selection of the process variable to which the output should switch. | | | | |
| 0 = Not assigned / INVEOR soft PLC | | | | |
| 1 = Intermediate circuit voltage | | | | |
| 2 = Grid voltage | | | | |
| 3 = Motor voltage | | | | |
| 4 = Motor current | | | | |
| 5 = Actual frequency value | | | | |
| 6 = - | | | | |
| 7 = - | | | | |
| 8 = IGBT temperature | | | | |
| 9 = Inner temperature | | | | |
| 10 = Error (NO) | | | | |
| 11 = Error inverted (NC) | | | | |
| 12 = Limit steps enable | | | | |
| 13 = Digital input 1 | | | | |
| 14 = Digital input 2 | | | | |
| 15 = Digital input 3 | | | | |
| 16 = Digital input 4 | | | | |
| 17 = Ready for operation (mains supply on, no HW enable, motor stationary) | | | | |
| 18 = Ready (mains supply on, HW enable set, motor stationary) | | | | |
| 19 = Operation (mains supply on, HW enable set, motor running) | | | | |
| 20 = Ready for operation + Ready | | | | |
| 21 = Ready for operation + Ready + Operation | | | | |
| 22 = Ready + Operation | | | | |
| 23 = Motor rating | | | | |
| 24 = Torque | | | | |
| 25 = Fieldbus (V 03.84 and higher) | | | | |
| Table continues on next page | | | | |

Table continues on next page

| 4.230 | VO function | | Unit: integer | |
|---|--|------------------|---|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 51 | |
| | P. xy | | def.: 0 | |
| 1.054 1.131 1.150 4.231 4.232 5.010 / 5.011 5.090 | Selection of the process variable to which the output should switch. | | | |
| | Continuation of table | | | |
| | 26 | = | Analogue input 1 | |
| | 27 | = | Analogue input 2 | |
| | 28 | = | PID target value | |
| | 29 | = | PID actual value | |
| | 30 | = | STO channel 1 | |
| | 31 | = | STO channel 2 | |
| | 32 | = | Nominal frequency value after ramp | |
| | 33 | = | Nominal frequency value | |
| | 34 | = | Actual speed value | |
| | 35 | = | Actual frequency value sum | |
| | 36 | = | Torque sum | |
| | 37 | = | Nominal frequency value after ramp sum | |
| | 38 | = | Nominal frequency value sum | |
| | 39 | = | Actual speed value sum | |
| | 50 | = | Motor current limit enabled | |
| | 51 | = | Nominal-actual comparison (para. 6.070 – 6.071) | |
| | 52 | = | Fieldbus (V 03.84 and higher) | |

| 4.231 | VO-On | | Unit: | |
|--|--|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.230 | Parameter manual: | Transfer status: | min.: - 32767 | Own value (to be entered!) |
| | | 2 | max.: 32767 | |
| | P. xy | | def.: 0 | |
| | If the set process variable exceeds the switch-on limit, the output is set to 1. | | | |

| 4.232 | VO-Off | | Unit: | |
|--|---|---------------------------|---------------|-------------------------------|
| Relationship to parameter: 4.230 | Parameter manual: P. xy | Transfer status: 2 | min.: - 32767 | Own value (to be entered!) |
| | | | max.: 32767 | |
| | | | def.: 0 | |
| | If the set process variable exceeds the switch-off limit, the output is again set to 0. | | | |

| 4.233 | VO-On delay | | Unit: s | |
|---|-------------------|------------------|--|----------------------------|
| Relationship to parameter: 4.234 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 10000 | |
| | | | def.: 0 | |
| | | | Specifies the length of the switch-on delay. | |

| 4.234 | VO-Off delay | | Unit: | |
|---|-------------------|---|-------------|-------------------------------|
| Relationship to parameter: 4.233 | Parameter manual: | Transfer status: 2 | min.: 0 | Own value (to be entered!) |
| | | | max.: 10000 | |
| | | | def.: 0 | |
| | P. xy | Specifies the length of the switch-off delay. | | |

5.3.11 External fault

| 5.010 / 5.011 | External fault 1/2 | | Unit: integer | |
|--|---|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.110 / 4.113 4.230 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 7 | |
| | P. xy | | def.: 0 | |
| | Selection of source via which an external fault can be reported. 0 = Not assigned / INVEOR soft PLC 1 = Digital input 1 2 = Digital input 2 3 = Digital input 3 4 = Digital input 4 5 = Virtual output (parameter 4.230) (V 03.70 and higher) 6 = Analogue input 1 (must be selected in parameter 4.030) (V 03.70 and higher) 7 = Analogue input 2 (must be selected in parameter 4.060) (V 03.70 and higher) If there is a high signal at the selected digital input, the drive controller switches with fault no. 23 / 24 of external fault ½. Parameters 4.110 to 4.113 Dix inverted can be used to invert the logic of the digital input. | | | |

5.3.12 Motor current limit

This function limits the motor current to a parameterised maximum value after a parameterised current-time zone has been reached.

This motor current limit is monitored at application level and thereby limits with relatively low dynamics. This has to be taken into consideration when selecting this function.

The maximum value is determined using the "motor current limit as %" parameter (5.070). This is stated as a percentage and relates to the nominal motor current specified in the "motor current" type plate data (33.031).

The maximum current-time zone is calculated from the product of the "motor current limit in s" parameter (5.071) and the fixed overcurrent of 50% of the required motor current limit.

Continues on next page

Continuation

As soon as this current-time zone is exceeded, the motor current is restricted to the limit value by reducing the speed. If the output current of the drive controller exceeds the motor current (parameter 33.031) multiplied by the set limit as % (parameter 5.070) for the set time (parameter 5.071), the speed of the motor is reduced until the output current is below the set limit. This reduction is undertaken by a PI controller that operates depending on the current difference. The entire function can be deactivated by setting the “motor current limit as %” parameter (5.070) to zero.

| 5.070 | Motor current limit as % | | Unit: % | |
|---|--------------------------------------|------------------|-----------|----------------------------|
| Relationship to parameter: 5.071 33.031 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 250 | |
| | | | def.: 0 | |
| | 0 = disable See description 5.3.1 | | | |

| 5.071 | Motor current limit S | | Unit: s | |
|---|-----------------------|------------------|-----------|----------------------------|
| Relationship to parameter: 5.070 33.031 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 1 | |
| | See description 5.3.1 | | | |

| 5.075 | Gearbox factor | | Unit: | |
|--|---|------------------|------------|----------------------------|
| Relationship to parameter: 33.034 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1000 | |
| | P. xy | | def.: 1 | |
| | A gearbox factor can be set here. The mechanical speed display can be adjusted using the gearbox factor. | | | |

5.3.13 Stall detection

| 5.080 | Stall detection | | Unit: integer | |
|--|-------------------|------------------|---------------|----------------------------|
| Relationship to parameter: 5.081 34.110 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | | | def.: 0 | |
| | P. xy | | | |
| This parameter can be used to activate stall detection. 0 = disable 1 = enable This function only works reliably if the motor data has been entered correctly and the slip compensation has not been deactivated. | | | | |

| 5.081 | Blocking time | | Unit: s | |
|---|--|------------------|----------|----------------------------|
| Relationship to parameter: 5.080 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 50 | |
| | P. xy | | def.: 2 | |
| | Indicates the time after which a blockage is detected. | | | |

| 5.082 | Start-up error active | | Unit: integer | |
|---|---|-----------------------|---------------|-------------------------------|
| Relationship to parameter: 4.233 | Parameter manual: | Transfer status: 2 | min.: 0 | Own value (to be entered!) |
| | | | max.: 1 | |
| | P. xy | | def.: 1 | |
| | (V 03.70 and higher) Start-up error is defined as follows: Actual value reaches 10 % of rated motor frequency after 30 seconds (if nominal frequency < 10 %, the error is not generated). If the acceleration time is parameterised as > 30 seconds, half the acceleration time is used in place of the 30 seconds. 0 = Function disabled 1 = Function enabled | | | |

| 5.083 | Deactivation error log 11 | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 10 | |
| | P. xy | | def.: 0 | |
| | (V 03.80 and higher) If supplied with external 24 V, the logging of error no. 11 "Time out power" can be suppressed here. The error counter is not affected. 0 = Function disabled 1 = Function enabled | | | |

| 5.090 | Parameter set change | | Unit: integer | |
|---|----------------------|------------------|---------------|-------------------------------|
| Relationship to parameter: 4.030 / 4.060 4.230 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 12 | |
| | | | def.: 0 | |
| Selection of the active data set. | | | | |
| 0 = Not used | | | | |
| 1 = Data set 1 active | | | | |
| 2 = Data set 2 active | | | | |
| 3 = Digital input 1 | | | | |
| 4 = Digital input 2 | | | | |
| 5 = Digital input 3 | | | | |
| 6 = Digital input 4 | | | | |
| 7 = INVEOR soft PLC | | | | |
| 8 = Virtual output (parameter 4.230) (V 03.70 and higher) | | | | |
| 9 = Analogue input 1 (must be selected in parameter 4.030) (V 03.70 and higher) | | | | |
| 10 = Analogue input 2 (must be selected in parameter 4.060) (V 03.70 and higher) | | | | |
| 11 = Foil keypad key I for data set 1, key II for data set 2 (V 03.70 and higher) | | | | |
| 12 = Foil keypad key I for data set 1, key II for data set 2 storing (V 03.70 and higher) | | | | |
| The 2nd data set is only displayed in the PC software if this parameter is <> 0. The values of the data set currently selected are always displayed in the MMI. | | | | |

| 5.200 | Turning MMI* display | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 1 | |
| | | | def.: 0 | |
| | (V 03.80 and higher) Only for MMI in cover. Here the user can define whether the screen / key assignment is turned 180°. 0 = Function disabled 1 = Function enabled | | | |

| 5.201 | Save MMI* display | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 1 | Own value (to be entered!) |
| | P. xy | 2 | max.: 5 | |
| | | | def.: 1 | |
| | (V 03.80 and higher) The status screen displayed in the MMI can be selected here. 1 = status 01: Target / actual frequency / motor current 2 = status 02: Speed / motor current / process value 1 3 = status 03: Speed / motor current / process value 2 4 = status 04: Speed / PID target value / PID actual value 5 = status 05: Customer PLC output variable 1 / 2 / 3 | | | |

| 5.202 | MMI password | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter-HB: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | S. xy | 2 | max.: 9999 | |
| | | | def.: 0 | |
| | (V 03.88 and higher) A password can be allocated here, which is requested when expert mode is selected in the MMI. 0: Password request deactivated The password can be individually set in both data sets. | | | |

* Man-machine interface

| 5.210 | MMI option language | | Unit: integer | |
|----------------------------|--|------------------|---------------|-------------------------------|
| Relationship to parameter: | Parameter-HB: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | S. xy | 2 | max.: 1 | |
| | | | def.: 0 | |
| | (V 03.88 and higher) This parameter can be used to select the language which the MMI option displays. 0 = local language (factory setting is German) 1 = English This setting does not affect the language choice for the MMI handheld controller. | | | |

5.3.14 Field bus

| 6.060 | Fieldbus address | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 0 | max.: 127 | |
| | | | def.: 0 | |
| | For this address to be used, the address coding switches in the device must be set to 00. A change to the fieldbus address is only undertaken once INVEOR is restarted (V 03.80 and higher) Profibus devices are automatically set to the "Default 125" address with address coding setting "00" and parameter "0". | | | |

| 6.061 | Field bus baud rate | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 8 | |
| | | | def.: 2 | |
| | Only for CanOpen: 0 = 1 MBit, 2 = 500 kBit, 3 = 250 kBit, 4 = 125 kBit, 6 = 50 kBit, 7 = 20 kBit, 8 = 10 kBit | | | |

| 6.062 | Bus time-out | | Unit in s | |
|----------------------------|---|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 5 | |
| | Bus timeout, if no fieldbus telegram is received after the set time has expired, the INVEOR shuts down with the "Bus timeout" error. The function is only activated once a telegram has been successfully received. 0 = Monitoring disabled | | | |

**IMPORTANT INFORMATION**

Changing a parameter value via the fieldbus includes direct EEPROM write access.

| 6.070 / 6.071 | Target / nominal value deviation | | Unit: % | |
|---|---|------------------|--------------------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 % / 0 sec. | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 % / 32767 sec. | |
| | | | Def.: 0 % / 0 sec. | |
| 4.150 / 4.170 4.190 / 4.210 4.230 | <p>A target / actual value comparison can be undertaken with this function. The result is output via the field bus status word or a digital output. Parameter 6.070 can be used to define the tolerance range of the target value. Parameter 6.071 can be used to set the time for which the actual value has to be outside the tolerance range before the output is reset. Example: Operating mode = PID control PID target value = 50 % 6.070 = 10 % 6.071 = 1 sec. As soon as the actual value is between 40 % and 60 %, the output is set. If the actual value is outside 40 % to 60 % for 1 sec., the output is reset.</p> | | | |

4.150 / 4.170
4.190 / 4.210
4.230

5.4 Performance parameters

5.4.1 Motor data

| 33.001 | Type of motor | | Unit: integer | |
|--|--|------------------|---------------|----------------------------|
| Relationship to parameter: 33.010 | Parameter manual: | Transfer status: | min.: 1 | Own value (to be entered!) |
| | P. xy | 1 | max.: 2 | |
| | | | def.: 1 | |
| | Selection of type of motor. 1 = asynchronous motor 2 = synchronous motor The parameters are shown depending on the type of motor selected. The type of control (parameter 34.010) must also be selected. | | | |

| 33.015 | R optimisation | | Unit: % | |
|----------------------------|--|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 200 | |
| | | | def.: 100 | |
| | If necessary, this parameter can be used to optimise the start-up behaviour. | | | |

| 33.016 | Motor phases monitoring | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 1 | |
| | | | def.: 1 | |
| | (V 03.72 and higher) The "Motor connection interrupted" error monitoring (error -45) can be disabled with this parameter. 0 = Monitoring disabled 1 = Monitoring enabled | | | |

| 33.031 | Motor current | | Unit: A | |
|---|---|------------------|-----------|----------------------------|
| Relationship to parameter: 5.070 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 1 | max.: 150 | |
| | P. xy | | def.: 0 | |
| | This is used to set the nominal motor current $I_{M,N}$ for either the star or triangle connection. | | | |

| 33.032 | Motor rating | | Unit: W | |
|----------------------------|--|------------------|-------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 1 | max.: 55000 | |
| | P. xy | | def.: 0 | |
| | A performance value [W] $P_{M,N}$ has to be set here that corresponds to the nominal motor rating. | | | |

| 33.034 | Motor speed | | Unit: rpm | |
|--|--|------------------|------------|----------------------------|
| Relationship to parameter: 34.120 5.075 | Parameter manual: | Transfer status: | min: 0 | Own value (to be entered!) |
| | | 1 | max: 10000 | |
| | P. xy | | def.: 0 | |
| | The value from the motor's type plate data has to be entered here for the nominal motor rotation speed $n_{M,N}$. | | | |

| 33.035 | Motor frequency | | Unit: Hz | |
|----------------------------|---|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 10 | Own value (to be entered!) |
| | P. xy | 1 | max.: 400 | |
| | | | def.: 0 | |
| | This is where the nominal motor frequency $f_{M,N}$ is set. | | | |

| 33.050 | Stator resistance | | Unit: Ohm | |
|----------------------------|--|------------------|-------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 100 | |
| | | | def.: 0.001 | |
| | The stator resistance can be optimised here, if the automatically determined value (motor identification) is insufficient. | | | |

| 33.105 | Leakage inductance | | Unit: H | |
|----------------------------|---|------------------|---------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 1 | |
| | | | def.: 0 | |
| | Only for asynchronous motors. Here the leakage inductance can be optimised if the automatically calculated value (of motor identification) isn't sufficient. | | | |

| 33.110 | Motor voltage | | Unit: V | |
|----------------------------|--|------------------|------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 1500 | |
| | | | def.: 0 | |
| | Only for asynchronous motors. This is used to set the nominal motor voltage $U_{M,N}$ for either the star or triangle connection. | | | |

| 33.111 | Motor cos phi | | Unit: 1 | |
|----------------------------|-------------------|------------------|--|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0.5 | Own value (to be entered!) |
| | P. xy | 1 | max.: 1 | |
| | | | def.: 0 | |
| | | | Only for asynchronous motors. The value from the motor's type plate data has to be entered here for the power factor cos phi. | |

| 33.200 | Stator inductance | | Unit: H | |
|----------------------------|---|------------------|---------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 1 | |
| | | | def.: 0 | |
| | For synchronous motors only. The stator inductance can be optimised here if the automatically determined value (motor identification) is insufficient. | | | |

| 33.201 | Nominal flux | | Unit: mVs | |
|----------------------------|--|------------------|-------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 1 | max.: 10000 | |
| | | | def.: 0 | |
| | For synchronous motors only. The nominal flux can be optimised here if the automatically determined value (motor identification) is insufficient. | | | |

5.4.2 I^2t

| 33.010 | I²t fact. motor | | Unit: % | |
|--|--|------------------|------------|----------------------------|
| Relationship to parameter: 33.031 33.011 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 1000 | |
| | | | def.: 100 | |
| | The percentage current threshold (in relation to motor current 33.031) at the start of integration can be set here. 0 % = disable We recommend using winding protection contacts in heat-sensitive applications! | | | |

| 33.011 | I²t time | | Unit: s | |
|--|--|------------------|------------|----------------------------|
| Relationship to parameter: 33.010 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1200 | |
| | P. xy | | def.: 30 | |
| | Time after which the drive controller switches off with I²T. | | | |

| 33.138 | Holding current time | | Unit: s | |
|---|---|------------------|------------|-------------------------------|
| Relationship to parameter: 33.010 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 3600 | |
| | | | def.: 2 | |
| | Only for asynchronous motors. This is the time during which the drive is held at continuous current after the brake ramp has been completed. | | | |

5.4.3 Switching frequency

The internal switching frequency can be changed in order to control the power element. A high setting reduces noise in the motor but results in increased EMC emissions and losses in the drive controller.

| 34.030 | Switching frequency | | Unit: Hz | |
|--|---------------------|------------------|--|----------------------------|
| Relationship to parameter: 33.010 | Parameter manual: | Transfer status: | min.: 1 | Own value (to be entered!) |
| | P. xy | 2 | max.: 4 | |
| | | | def.: 2 | |
| | | | Selection of the switching frequency for the drive controller: 1 = 16 kHz 2 = 8 kHz 4 = 4 kHz | |

5.4.4 Controller data

| 34.010 | Control method | | Unit: integer | |
|---|---|------------------|---------------|----------------------------|
| Relationship to parameter: 33.001 34.011 | Parameter manual: | Transfer status: | min.: 100 | Own value (to be entered!) |
| | P. xy | 2 | max.: 201 | |
| | | | def.: 100 | |
| | Selection of the control method: 100 = open-loop asynchronous motor 200 = open-loop synchronous motor | | | |

| 34.020 | Flying restart | | Unit: | |
|---|---|------------------|---------|----------------------------|
| Relationship to parameter: 34.021 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 1 | |
| | This parameter can be used to activate the flying restart. 0 = disable 1 = enable | | | |

| 34.021 | Catch time | | Unit: ms | |
|----------------------------|---|------------------|--------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 10 000 | |
| | P. xy | | def.: 100 | |
| | The catch time can be optimised here, if the automatically determined results (of the motor identification) are insufficient. | | | |

| 34.090 | Speed controller K_p | | Unit: mA / rad / s | |
|----------------------------|---|------------------|--------------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 10000 | |
| | P. xy | | def.: 150 | |
| | For asynchronous motors: The control boost of the speed controller can be optimised here, if the automatically determined results (of the motor identification) are insufficient. For synchronous motors: The control boost of the speed controller can be set here. | | | |

| 34.091 | Speed controller T _n | | Unit: s | |
|----------------------------|--|------------------|----------|-------------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 10 | |
| | P. xy | | def.: 4 | |
| | For asynchronous motors: The reset time of the speed controller can be optimised here, if the automatically determined results (of the motor identification) are insufficient. For synchronous motors: The reset time of the speed controller must be optimised here, we would recommend a value between 0.1 s and 0.5 s. | | | |

| 34.110 | Slip trimmer | | Unit: | |
|----------------------------|---|------------------|-----------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1.5 | |
| | P. xy | | def.: 1 | |
| 5.080 33.034 | <p>Only for asynchronous motors.</p> <p>This parameter can be used to optimise or deactivate slippage compensation.</p> <p>0 = disable (performance as on the grid)</p> <p>1 = compensation for slippage.</p> <p>Example: 4 pole asynchronous motor at 1410 rpm, target frequency 50 Hz</p> <p>Motor idling</p> <p>0 = approx. 1500 rpm</p> <p>1 = 1500 rpm</p> <p>Motor at nominal point</p> <p>0 = 1410 rpm</p> <p>1 = 1500 rpm</p> <p>50 Hz is always displayed as the actual frequency.</p> <p>Deactivating slip compensation may result in stall detection no longer working reliably.</p> | | | |

| 34.130 | Voltage control reserve | | Unit: | |
|----------------------------|---|------------------|------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 1 | |
| | | | def.: 0.95 | |
| | Only for asynchronous motors. This parameter can be used to adjust voltage output. | | | |

5.4.5 Quadratic characteristic curve

| 34.120 | Quadratic characteristic curve | | Unit: integer | |
|---|--|------------------|---------------|----------------------------|
| Relationship to parameter: 34.121 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 1 | |
| | | | def.: 0 | |
| | Only for asynchronous motors. The quadratic characteristic curve function can be activated here. 0 = disable 1 = enable | | | |

| 34.121 | Flux adjustment | | Unit: % | |
|--|---|------------------|-----------|----------------------------|
| Relationship to parameter: 34.120 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | P. xy | 2 | max.: 100 | |
| | | | def.: 50 | |
| | Only for asynchronous motors. The percentage by which the flux is to be reduced can be set here. An overvoltage shutdown can occur if there are any major changes in operation. | | | |

5.4.6 Synchronous motor controller data

| 34.225 | Field weakening | | Unit: integer | |
|----------------------------|---|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 0 | |
| | For synchronous motors only. 0 = disable, the motor cannot be run in the field weakening. 1 = enable, the motor can be placed in the field weakening until the drive controller has reached its current limit or the maximum permissible electromotive force. | | | |

| 34.226 | Starting current | | Unit: % | |
|--|---|------------------|------------|----------------------------|
| Relationship to parameter: 34.227 | Parameter manual: | Transfer status: | min.: 5 | Own value (to be entered!) |
| | | 2 | max.: 1000 | |
| | P. xy | | def.: 25 | |
| | For synchronous motors only. Here the current which was stamped in the motor before starting the control can be adjusted. Value as % of nominal motor current. | | | |

| 34.227 | Init time | | Unit: s | |
|---|---|------------------|------------|----------------------------|
| Relationship to parameter: 34.226 | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 100 | |
| | P. xy | | def.: 0.25 | |
| | For synchronous motors only. Here the time during which the start up current 34.226 is stamped can be set. | | | |

| 34.228 – 34.230 | Start-up procedure | | Unit: integer | |
|---|--------------------|------------------|---------------|----------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: | min.: 0 | Own value (to be entered!) |
| | | 2 | max.: 1 | |
| | P. xy | | def.: 0 | |
| <p>For synchronous motors only.</p> <p>By changing the start-up procedure to “Controlled”, higher starting torques can be achieved.</p> <p>0 = regulated, the drive controller directly to the control after the stamping phase.</p> <p>1 = controlled, after the stamping phase the rotation field is increased by the control with start ramp 34.229 up to start frequency 34.230, then switched to the controller.</p> | | | | |

| 36.020 | Deact grid monitoring | | Unit: integer | |
|----------------------------|--|---------------------------|---------------|-------------------------------|
| Relationship to parameter: | Parameter manual: | Transfer status: 2 | min.: 0 | Own value (to be entered!) |
| | | | max.: 1 | |
| | | | def.: 0 | |
| | (V 03.84 and higher) Grid monitoring can be deactivated here. 0: deactivated 1: activated | | | |

6. Error detection and troubleshooting

| | | |
|-----|---|-----|
| 6.1 | List of the LED flash codes for error recognition | 150 |
| 6.2 | List of errors and system errors | 151 |

This chapter contains the following:

- a list of the LED flash codes for error recognition
- a description of error recognition using PC tools
- a list of errors and system errors
- notes on error detection with the MMI

DANGER!



Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.

If damaged parts or components need replacing, only ever replace with original parts.























Danger due to electrical shock and discharge.

Wait two minutes (discharge time of the capacitors) after shut-down.





6.1 List of the LED flash codes for error recognition

When an error occurs, the LEDs on the drive controller display a flashing code that allows the errors to be diagnosed.

The following table contains an overview:

| Red LED | Green LED | State |
|---|---|--|
|  |  | Boot loader active (flashing in turn) |
|  |  | Ready for operation (activate En_HW for operation) |
|  |  | Operation / ready |
|  |  | Warning |
|  |  | Error |
|  |  | Identification of motor data |
|  |  | Initialisation |
|  |  | Firmware update |
|  |  | Bus error operation |
|  |  | Bus error ready for operation |

Tab. 17: LED flash codes

| Key | | | |
|---|--------------|---|----------------------|
|  | LED off |  | LED on |
|  | LED flashing |  | LED flashing quickly |

6.2 List of errors and system errors

The driver controller shuts down if an error occurs. Consult the flash code table / PC tool for the corresponding error numbers.



IMPORTANT INFORMATION

Error messages can only be acknowledged once the error has been remedied.

Error messages can be acknowledged as follows:

- digital input (can be programmed)
- using MMI (handheld controller)
- [Automatic acknowledgement function](#) (Parameter 1.181)
- switch device off and on again

via fieldbus (CANOpen, Profibus DP, EtherCAT)

The following section contains a list of possible error messages. Please contact the KOSTAL service department if you encounter errors that are not listed here.

| No. | Error name | Description of error | Possible causes/remedy |
|-----|-----------------------------------|---|---|
| 1 | Undervoltage 24 V application | Supply voltage for the application is less than 15 V | 24 V supply overload |
| 2 | Overvoltage 24 V application | Supply voltage for the application is greater than 31 V | Internal 24 V supply is not OK or external supply is not OK |
| 6 | Customer PLC version error | The version of the customer PLC doesn't match the device firmware | Check the version numbers of the customer PLC and device firmware |
| 8 | Communication application<->power | Internal communication between the application plate and the power-conducting plate is not OK | EMC interference |
| 10 | Parameter distributor | The internal distribution of parameters during initialisation failed | Parameter set is incomplete |

| No. | Error name | Description of error | Possible causes/remedy |
|-----|--|--|---|
| 11 | Time-out power | The power part does not respond | Operation with 24 V without mains feed-in |
| 13 | Cable break at analogue in1 (4–20 mA / 2–10 V) | Current or voltage is less than the lower limit of analogue input 1 (monitoring for this error is activated automatically by setting parameter 4.021 to 20 %). | Cable break, faulty external sensor |
| 14 | Cable break at analogue in 2 (4–40 mA / 2–10 V) | Current or voltage is less than the lower limit of analogue input 2 (monitoring for this error is activated automatically by setting parameter 4.021 to 20 %) | Cable break, faulty external sensor |
| 15 | Stall detection | The drive shaft of the motor is stalled. 5.080 | Remove the blockage |
| 16 | PID dry run | No PID actual value despite maximum speed | PID actual value sensor defective. Extend dry run time parameter 3.072 |
| 17 | Start-up error | Motor not starting up or starting up incorrectly. 5.082 | Check motor connections/check motor and controller parameters; if necessary, disable error (5.082). |
| 18 | Excess temperature for frequency converter application | Inner temperature too high | Insufficient cooling, low motor speed and high torque, switching frequency too high. |
| 21 | Bus time-out | No response from bus sharing unit or MMI/PC | Check bus wiring |
| 22 | Acknowledgement error | The number of maximum automatic acknowledgements (1.182) was exceeded | Check error history and remedy error |

| No. | Error name | Description of error | Possible causes/remedy |
|-----|--------------------------------------|---|--|
| 23 | External fault 1 | The parameterised fault input is active. 5.010 | Correct the external fault |
| 24 | External fault 2 | The parameterised fault input is active. 5.011 | Correct the external fault |
| 25 | Motor detection | Motor identification error | Check INVEOR/motor and PC / MMI / INVEOR connections / restart motor identification |
| 26 | STO inputs plausibility | The statuses of the two STO inputs have not been identical for more than 2 sec. | Incorrect activation of the STO inputs. Check corresponding external wiring. |
| 32 | Trip IGBT | Protection of the IGBT module against overcurrent has been triggered | Short circuit in the motor or motor feed line / controller settings |
| 33 | Overvoltage of intermediate circuit | The maximum intermediate circuit voltage has been exceeded | Feedback by motor in generator mode / mains voltage too high / faulty setting for rotation speed controller / brake resistor not connected or defective / ramp times too short |
| 34 | Undervoltage of intermediate circuit | The minimum intermediate circuit voltage has not been reached | Mains voltage too low, mains connection defective / check wiring |
| 35 | Excess motor temperature | Motor PTC has been triggered | Overload of the motor (e.g. high torque at low motor speed) / ambient temperature too high |

| No. | Error name | Description of error | Possible causes/remedy |
|-----|--|--|---|
| 36 | Power failure | The grid voltage has dropped briefly | Grid fluctuation / grid voltage interrupted |
| 38 | Excess IGBT module temperature | Excess IGBT module temperature | Insufficient cooling, low motor speed and high torque, switching frequency too high |
| 39 | Overcurrent | Maximum output current of drive controller exceeded | Motor stalled / check motor connection / incorrect speed controller setting / check motor parameters / ramp times too short / brake not open |
| 40 | Excess frequency converter temperature | Inner temperature too high | Insufficient cooling / low motor speed and high torque / switching frequency too high permanent overload / reduce ambient temperature / check fan |
| 42 | I ² t motor protection shut-off | The internal I ² t motor protection (can be parameterised) has been triggered | Permanent overload |
| 43 | Ground leak | Ground leak during a motor phase | Insulation fault |
| 45 | Motor connection disrupted | No motor current in spite of control through frequency converter | No motor connected or not completely connected. Check phases or motor connections and connect correctly when necessary. ★ |

| No. | Error name | Description of error | Possible causes/remedy |
|-----|-----------------------------|--|--|
| 46 | Motor parameters | Plausibility check for motor parameters failed | Parameter set not OK |
| 47 | Drive controller parameters | Plausibility check for drive controller parameters failed | Parameter set not OK, motor type 33.001 and control method 34.010 not plausible. |
| 48 | Type plate data | No motor data entered | Please enter the motor data according to the type plate |
| 49 | Power class restriction | Max. overload of the drive controller exceeded for more than 60 sec. | Check application / reduce load / use larger drive controller. |
| 53 | Motor tipped | Only for synchronous motors, field orientation lost | Load too high. Optimise controller parameters. |

Tab. 18: Error detection

* In exceptional cases, the error may be displayed erroneously when idling (very low motor current) synchronous motors.
Set parameter 33.016 accordingly when the phases or motor connections are connected correctly.

** Should the error occur again, depending on frequency, it can only be acknowledged after the following times:

- 1 -3 acknowledgements permitted = 1 s waiting time
- 4 -5 acknowledgements permitted = 5 s waiting time
- > 5 acknowledgements permitted = 30 s waiting time

The number of acknowledgements is deleted after 120 s without any errors!

7. Disassembly and disposal

| | | |
|-----|--------------------------------------|-----|
| 7.1 | Drive controller disassembly | 157 |
| 7.2 | Information on correct disposal..... | 157 |

This chapter contains the following:

- a description of how to disassemble the drive controller
- information on correct disposal

7.1 Drive controller disassembly

DANGER!



Risk of death due to electrical shock!

Death or serious injury!

De-energise drive controller and secure it against being restarted.



Danger due to electrical shock and discharge.

Wait two minutes (discharge time of the capacitors) after shut-down

1. Open drive controller cover.
2. Release cables at terminals.
3. Remove all cables.
4. Remove connection screws for drive controller / adapter plate.
5. Remove drive controller.

7.2 Information on correct disposal

Dispose of drive controller, packaging and replaced parts in accordance with the regulations of the country in which the drive controller has been installed.

The drive controller may not be disposed of with household waste.

8. Technical data

| | | |
|-------|---|-----|
| 8.1 | General data | 159 |
| 8.1.1 | General technical data for 400V devices | 159 |
| 8.1.2 | General technical data for 230 V devices | 160 |
| 8.1.3 | Spezifikation der Schnittstellen | 161 |
| 8.2 | Derating of output power..... | 162 |
| 8.2.1 | Derating due to increased ambient temperature | 162 |
| 8.2.2 | Derating due to installation altitude | 164 |
| 8.2.3 | Derating due to switching frequency | 165 |

8.1 General data

8.1.1 General technical data for 400V devices

| Size | | A | | | | B | | | C | | D | | | | |
|--------------------------|---|--|------|-----|-----|-----------------|-----|-----|-----------------|------|-----------------|------|------|------|-----|
| Electrical data | Recommended motor rating ¹⁾ [kW] | 0,55 | 0,75 | 1,1 | 1,5 | 2,2 | 3,0 | 4,0 | 5,5 | 7,5 | 11,0 | 15,0 | 18,5 | 22,0 | |
| | Grid voltage | 3 x 200 VAC -10 %...480 VAC +10 % 280 VDC -10 %...680 VDC +10 % ⁴⁾ | | | | | | | | | | | | | |
| | Grid frequency | 50/60 Hz ± 6 % | | | | | | | | | | | | | |
| | Mains configurations | TN / TT | | | | | | | | | | | | | |
| | Line current [A] | 1,4 | 1,9 | 2,6 | 3,3 | 4,6 | 6,2 | 7,9 | 10,8 | 14,8 | 23,2 | 28,2 | 33,2 | 39,8 | |
| | Rated current output eff. [IN at 8 kHz] | 1,7 | 2,3 | 3,1 | 4,0 | 5,6 | 7,5 | 9,5 | 13,0 | 17,8 | 28,0 | 34,0 | 40,0 | 48,0 | |
| | Min. brake resistance [Ω] | 100 | | | | 50 | | | 50 | | 30 | | | | |
| | Overload for 60 sec. in % | 150 | | | | | | | | | | | | | 130 |
| | Switching frequency | 4 kHz, 8 kHz, 16 kHz, (factory setting 8 kHz) | | | | | | | | | | | | | |
| | Output frequency | 0 Hz - 400 Hz | | | | | | | | | | | | | |
| | Mains cycles of operation / restart | Unlimited | | | | | | | | | 2 min. | | | | |
| | DIN EN 61800-5 touch current | < 3,5 mA ²⁾ | | | | | | | | | | | | | |
| Functions | Protective function | Overvoltage and undervoltage, I ² t restriction, short circuit, ground leak, motor and drive controller temperature, stall prevention, blocking detection, PID dry run protection | | | | | | | | | | | | | |
| | Software functions | Process control (PID controller), fixed frequencies, data record changeover, flying restart, motor current limit | | | | | | | | | | | | | |
| | Soft-PLC | IEC61131-3, FBD, ST, AWL | | | | | | | | | | | | | |
| Mechanical data | Housing | Two-part aluminium die-cast casing | | | | | | | | | | | | | |
| | Dimensions [L x W x H] mm | 233 x 153 x 120 | | | | 270 x 189 x 140 | | | 307 x 223 x 181 | | 414 x 294 x 232 | | | | |
| | Weight including adapter plate | 3,9 kg | | | | 5,0 kg | | | 8,7 kg | | 21,0 kg | | | | |
| | Protection class | | | | | IP 65 | | | | | IP 55 | | | | |
| | Cooling | | | | | Passive cooling | | | | | Active cooling | | | | |
| Environmental conditions | Ambient temperature | - 25 °C (non-condensing) to + 50 °C (without derating) | | | | | | | | | | | | | |
| | Storage temperature | -25 °C...+85 °C | | | | | | | | | | | | | |
| | Altitude of the installation location | Up to 1000 m above sea level / over 1000 m with reduced performance (1 % per 100 m) / above 2000 m see operating manual chapter 8.2.2 | | | | | | | | | | | | | |
| | Relative air humidity | ≤ 96 %, condensation not permitted. | | | | | | | | | | | | | |
| | Vibration resistance (DIN EN 60068-2-6) | 50 m/s ² ; 5...200 Hz ³⁾ | | | | | | | | | | | | | |
| | Shock resistance (DIN EN 60068-2-27) | 300 m/s ² | | | | | | | | | | | | | |
| | EMC (DIN-EN-61800-3) | C2 | | | | | | | | | | | | | |

Technical data for 400 V devices INVEOR M (subject to technical changes)

¹⁾ Recommended motor rating (4-pole asynchr. motor) is given based on the 400 VAC supply voltage.

²⁾ With 1LA7 asynchronous motor, motor-mounted

³⁾ Combined vibration test, part 4, severity 2 in accordance with FN942017

⁴⁾ In compliance with the overvoltage category

8.1.2 General technical data for 230 V devices

| Size | | A | | | |
|--------------------------|---|--|------|------|-----|
| Electrical data | Recommended motor rating ¹⁾ [kW] | 0,37 | 0,55 | 0,75 | 1,1 |
| | Grid voltage | 1 x 100 VAC -15 %...230 VAC +10 % 140 VDC -15 %...320 VDC +10 % ⁴⁾ | | | |
| | Grid frequency | 50/60 Hz ± 6 % | | | |
| | Mains configurations | TN / TT | | | |
| | Line current [A] | 4,5 | 5,6 | 6,9 | 9,2 |
| | Rated current output eff. [IN at 8 kHz] | 2,3 | 3,2 | 3,9 | 5,2 |
| | Min. brake resistance [Ω] | 50 | | | |
| | Overload for 60 sec. in % | 150 | | | |
| | Switching frequency | 4 kHz, 8 kHz, 16 kHz, (factory setting 8 kHz) | | | |
| | Output frequency | 0 Hz – 400 Hz | | | |
| | Mains cycles of operation / restart | Every 2 min. | | | |
| | DIN EN 61800-5 touch current | < 10 mA ²⁾ | | | |
| | | | | | |
| Functions | Protective function | Overvoltage and undervoltage, i ² t restriction, short circuit, ground leak, motor and drive controller temperature, stall prevention, blocking detection, PID dry run protection | | | |
| | Software functions | Process control (PID controller), fixed frequencies, data record changeover, flying restart, motor current limit | | | |
| | Soft-PLC | IEC61131-3, FBD, ST, AWL | | | |
| Mechanical data | Housing | Two-part aluminium die-cast casing | | | |
| | Dimensions [L x W x H] mm | 233 x 153 x 120 | | | |
| | Weight including adapter plate | 3,9 kg | | | |
| | Protection class | IP 65 | | | |
| | Cooling | Passive cooling | | | |
| Environmental conditions | Ambient temperature | -10 °C (non-condensing) to +40 °C (50 °C with derating) | | | |
| | Storage temperature | -25 °C...+85 °C | | | |
| | Altitude of the installation location | Up to 1000 m above sea level / over 1000 m with reduced performance (1 % per 100 m) / above 2000 m see chapter 8.2.2 | | | |
| | Relative air humidity | ≤ 96 %, condensation not permitted. | | | |
| | Vibration resistance (DIN EN 60068-2-6) | 50 m/s ² ; 5...200 Hz ³⁾ | | | |
| | Shock resistance (DIN EN 60068-2-27) | 300 m/s ² | | | |
| | EMC (DIN-EN-61800-3) | C1 | | | |

Technical data for 230 V devices INVEOR M (subject to technical changes)

¹⁾ Recommended motor rating (4-pole asynchr. motor) is given based on the 230 VAC supply voltage.

²⁾ With 1LA7 asynchronous motor, motor-mounted

³⁾ Combined vibration test, part 4, severity 2 in accordance with FN942017

⁴⁾ In compliance with the overvoltage category

8.1.3 Spezifikation der Schnittstellen

| Designation | Function |
|------------------------------------|--|
| Digital inputs 1 – 4 | <ul style="list-style-type: none"> - Switching level low < 2 V / high > 18 V - I_{max} (at 24 V) = 3 mA - R_{in} = 8.6 kOhm |
| Hardware approval for input | <ul style="list-style-type: none"> - Switching level low < 3 V / high > 18 V - I_{max} (at 24 V) = 8 mA |
| Analogue inputs 1, 2 | <ul style="list-style-type: none"> - In +/- 10 V or 0 – 20 mA - In 2 – 10 V or 4 – 20 mA - 10-bit resolution - Tolerance +/- 2 % <p>Voltage input:</p> <ul style="list-style-type: none"> - R_{in} = 10 kOhm <p>Current input:</p> <ul style="list-style-type: none"> - Working resistance = 500 Ohm |
| Digital outputs 1, 2 | <ul style="list-style-type: none"> - Short-circuit proof - I_{max} = 20 mA |
| Relays 1, 2 | <p>1 changeover contact (NO/NC)</p> <p>Maximum switching power *</p> <ul style="list-style-type: none"> - at ohmic load (cos φ = 1): 5 A at ~ 230 V or = 30 V - at inductive load (cos φ = 0.4 and L/R = 7 ms): 2 A at ~ 230 V or = 30 V <p>Maximum reaction time: 7 ms ± 0.5 ms</p> <p>Electric life: 100 000 switching cycles</p> |
| Analogue output 1 (current) | <ul style="list-style-type: none"> - Short-circuit proof - I_{out} = 0.. 20 mA - Working resistance = 500 Ohm - Tolerance +/- 2 % |
| Analogue output 1 (voltage) | <ul style="list-style-type: none"> - Short-circuit proof - U_{out} = 0..10 V - I_{max} = 10 mA - Tolerance +/- 2 % |
| Power supply 24 V | <ul style="list-style-type: none"> - Auxiliary voltage U = 24 V DC - SELV - Short-circuit proof - I_{max} = 100 mA - external feeding of 24 V possible |
| Power supply 10 V | <ul style="list-style-type: none"> - Auxiliary voltage U = 10 V DC - Short-circuit proof - I_{max} = 30 mA |

Tab. 19: Specification of interfaces

* in terms of the UL 508C standard, the maximum allowed is 2 A!

8.2 Derating of output power

Drive controllers of the INVEOR series have two integrated PTC resistors as standard which monitor both the heat sink temperature and the inner temperature. As soon as a permissible IGBT temperature of 95 °C or a permissible inner temperature of 85 °C is exceeded, the drive controller shuts down.

With the exception of the 22 kW controller (size D 130%), all INVEOR type drive controllers are designed for an overload of 150% for 60sec (every 10min).

Reductions in the ability to handle overload and/or its duration should be taken into account in the following circumstances:

- A switching frequency permanently set too high >8 kHz (load-dependent).
- A permanently increased heat sink temperature, caused by a blocked air flow or a thermal blockage (dirty cooling ribs).
- Depending on the type of assembly, permanently excessive ambient temperature.

The respective max. output values can be determined from the following characteristic curves.

8.2.1 Derating due to increased ambient temperature

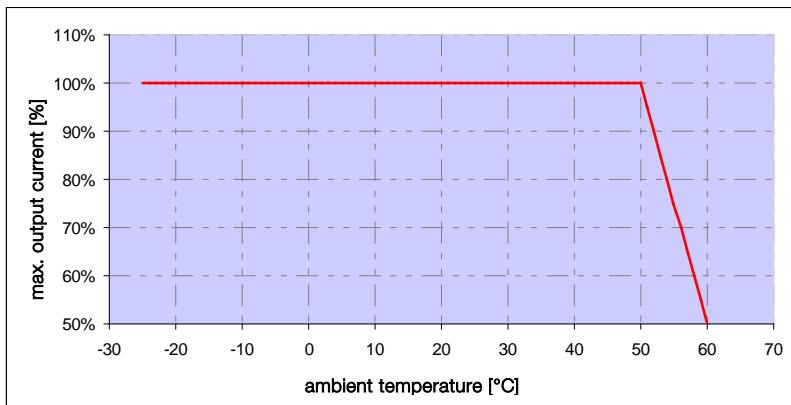


Fig. 43: Derating for drive controller fitted on motor (all sizes)

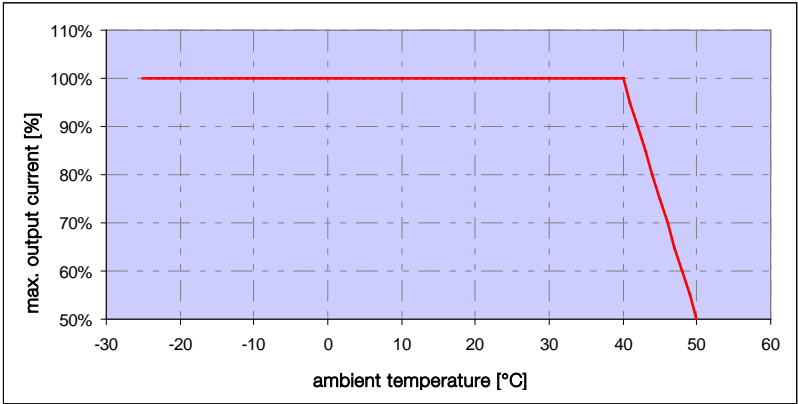


Fig. 44: Derating for drive controller fitted on wall (sizes A - C)

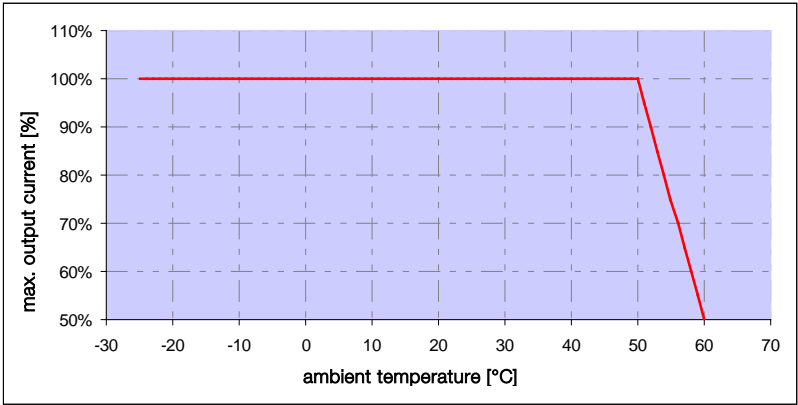


Fig. 45: Derating for drive controller fitted on wall (size D with fan option)

8.2.2 Derating due to installation altitude

The following applies to all INVEOR drive controllers:

- No reduction in performance is needed in S1 mode up to 1000m above sea level.
- A reduction in performance of 1% every 100 m is needed from 1000m \geq 2000m. Overvoltage category 3 is observed!
- Overvoltage category 2 should be observed from 2000 m \geq 4000 m because of the lower air pressure!

In order to observe the overvoltage category:

- use external overvoltage protection in the INVEOR's mains cable.
- reduce the input voltage.

Please contact the KOSTAL Service department.

The respective max. output values can be determined from the following characteristic curves.

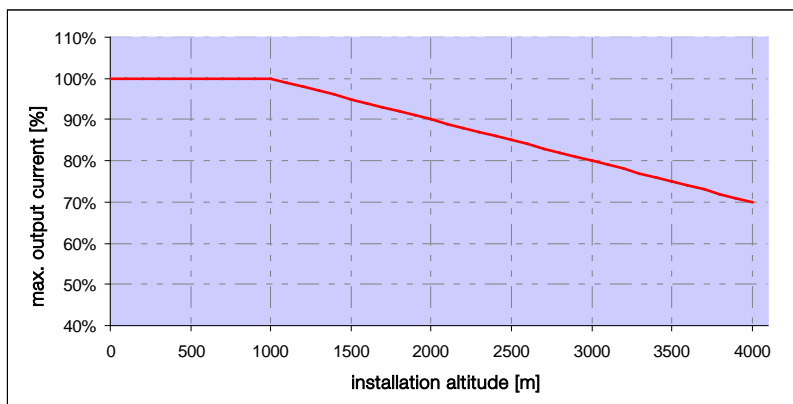


Fig. 46: Derating of maximum output current as a result of installation altitude

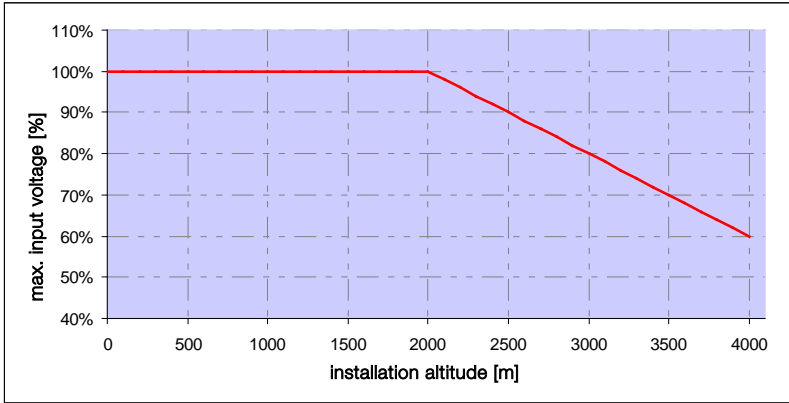


Fig. 47: Derating of maximum input voltage as a result of installation altitude

8.2.3 Derating due to switching frequency

The following diagram shows the output current, depending on switching frequency. To limit the thermal losses in the drive controller, the output current must be reduced.

Note: The switching frequency is not reduced automatically!

The max. output values can be determined from the following characteristic curve.

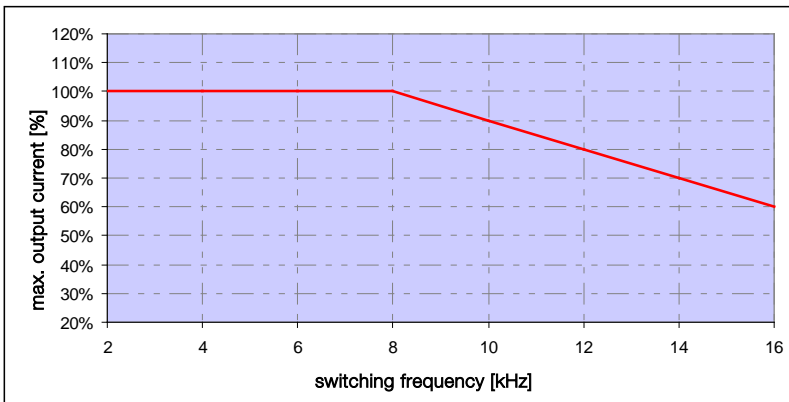


Fig. 48: Derating of maximum output current as a result of switching frequency

9. Optional accessories

| | | |
|-------|--|-----|
| 9.1 | Adapter plates | 167 |
| 9.1.1 | Motor adapter plates | 167 |
| 9.1.2 | Motor adapter plates (specific) | 170 |
| 9.1.3 | Wand adapter plates (standard) | 171 |
| 9.2 | Foil keypad | 174 |
| 9.3 | MMI handheld controller including a 3 m RJ9 connection cable with M12 plug | 178 |
| 9.4 | PC communication cable USB on M12/RS485 plug (converter integrated) | 178 |

This chapter contains brief descriptions of the following optional accessories

- adapter plates
- MMI handheld controller including connection cable RJ9 on M12 plug
- Brake resistors

9.1 Adapter plates

9.1.1 Motor adapter plates

A standard motor adapter plate (with an integrated terminal board for size A up to C) is available for each INVEOR size.

Download the 3D files (.stp) for INVEOR and adapter plates from

<https://www.kostal-industrie-elektrik.com/en-gb/downloads/download-drives>.

| INVEOR size | A | B | C | D |
|-------------|------------------------------|------------------------------|------------------------------|------------------------------|
| Output [kW] | 0.55 to 1.5 | 2.2 to 4.0 | 5.5 to 7.5 | 11.0 to 22.0 |
| Designation | ADP MA MOT 0000 A00 000 1 | ADP MB MOT 0000 A00 000 1 | ADP MC MOT 0000 A00 000 1 | ADP MD MOT 0000 A00 000 1 |
| Part no. | 10108906 | 10026184 | 10025632 | 10098202 |

The customer needs to drill the four holes for mounting the standard adapter plate on the motor. Below are technical drawings showing the possible locations of the holes for each of the respective sizes.



INFORMATION

The following applies to size D INVEOR drive controllers:

An additional support is not necessarily needed in industrial use.

In the event of more stringent vibration requirements, it may be necessary for an additional support to be provided on the B side of the motor.

For help with project planning, please contact the KOSTAL Sales department.



INFORMATION

The system integrator is responsible for whether the connection between the motor and adapter plate satisfies the mechanical requirements of the application.

Because the motor does not form part of the scope of supply of the drive controller, the system integrator must ensure the following when assembling the drive controller on the motor.

- Actual dimensions of the attachment interface
- Blind hole depth, diameter and thread type of attachment points



IMPORTANT INFORMATION

KOSTAL Industrie Elektrik GmbH assumes no liability for the connection between the motor and INVEOR!

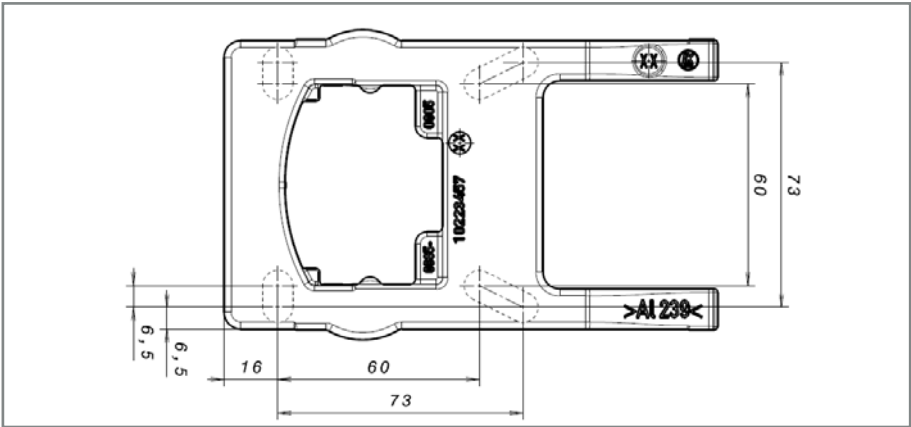


Fig. 49: Hole pattern for size A standard adapter plate

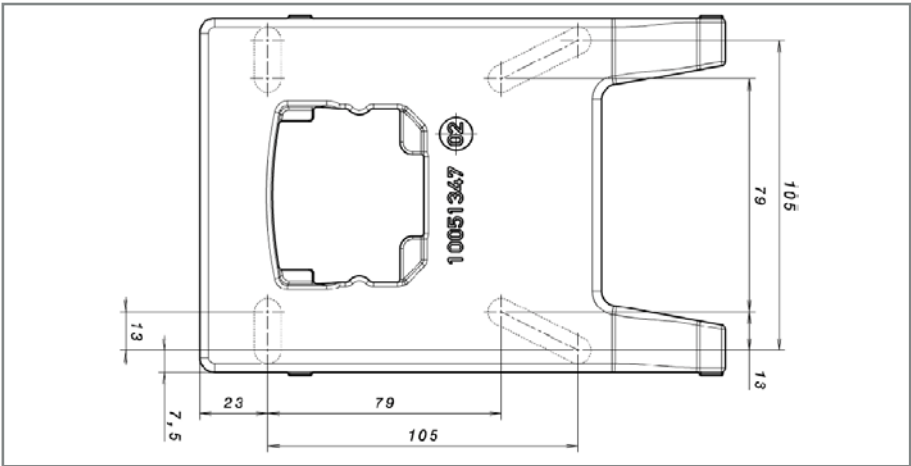


Fig. 50: Hole pattern for size B standard adapter plate

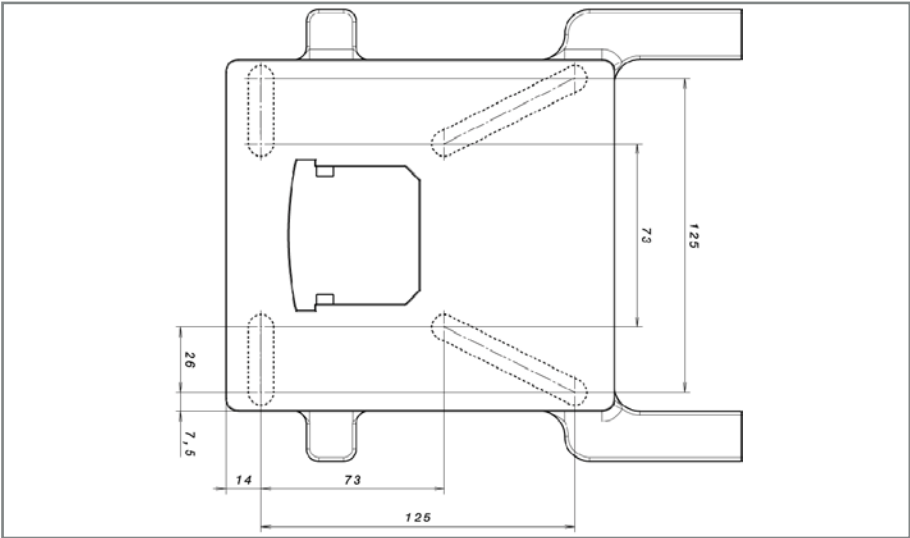


Fig. 51: Hole pattern for size C standard adapter plate

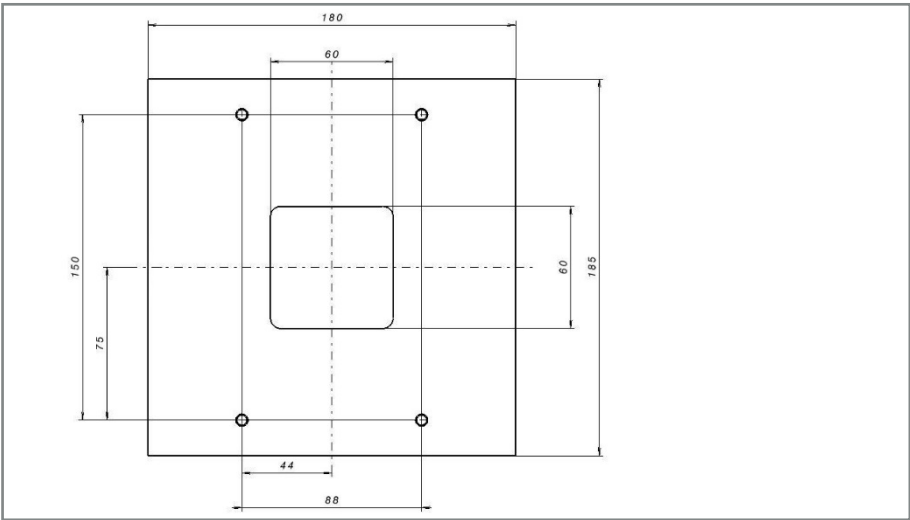


Fig. 52: Hole pattern for size D standard adapter plate

When using cylindrical head screws (cf. DIN 912 / DIN 6912) or flat head screws (cf. DIN EN ISO 7380), the hole pattern must be drilled on the INVEOR mounting frame in compliance with the applicable drawing. The drill-hole centres should be on the respective centre lines of the slots illustrated.

If the mounting frame is to be attached to a connection box that has no square hole pattern, then the drawing's diagonal centre lines are decisive.

If the mounting holes are outside the positions indicated, countersunk screws must be used to avoid fouling the attachment of the INVEOR.

If the existing flat seals are in a good condition, they should be reused.

9.1.2 Motor adapter plates (specific)

In addition to the standard motor adapter plates (with integrated terminal boards for sizes A to C), there are also specific versions available for various motor suppliers (on request).



INFORMATION

The system integrator is responsible for whether the connection between the motor and adapter plate satisfies the mechanical requirements of the application.

Because the motor does not form part of the scope of supply of the drive controller, the system integrator must ensure the following when assembling the drive controller on the motor.

- Actual dimensions of the attachment interface
- Blind hole depth, diameter and thread type of attachment points

9.1.3 Wand adapter plates (standard)

A standard wall adapter plate (with an integrated terminal board for sizes A to C) is available for each INVEOR size.

Download the 3D files for INVEOR and adapter plates from

<https://www.kostal-industrie-elektrik.com/en-gb/downloads/download-drives>.

Four holes for mounting the adapter plate, as well as an EMC screw connection, are already present.

| INVEOR size | A | B | C | D |
|-------------|------------------------------|------------------------------|------------------------------|------------------------------|
| Output [kW] | 0.55 to 1.5 | 2.2 to 4.0 | 5.5 to 7.5 | 11.0 to 22.0 |
| Designation | ADP MA WDM 0000 A00 000 1 | ADP MB WDM 0000 A00 000 1 | ADP MC WDM 0000 A00 000 1 | ADP MD WDM 0000 A00 000 1 |
| Part no. | 10023107 | 10026185 | 10025932 | 10098170 |

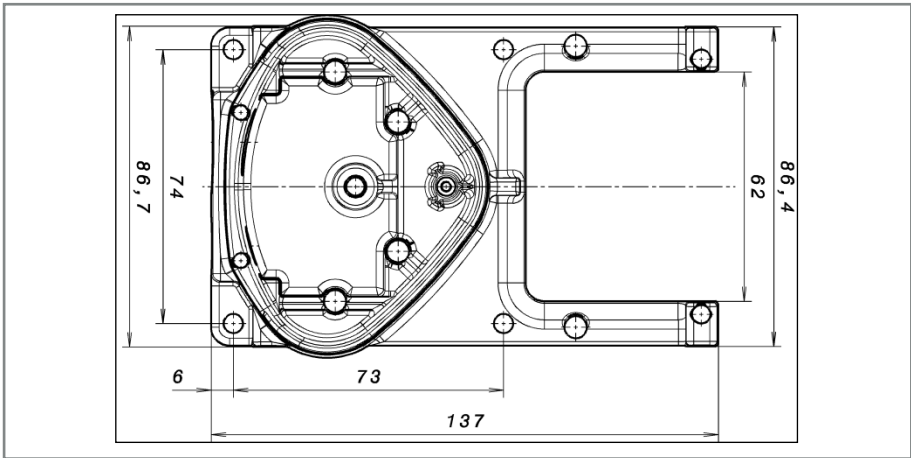




Fig. 53: Hole pattern for size A standard wall adapter plate



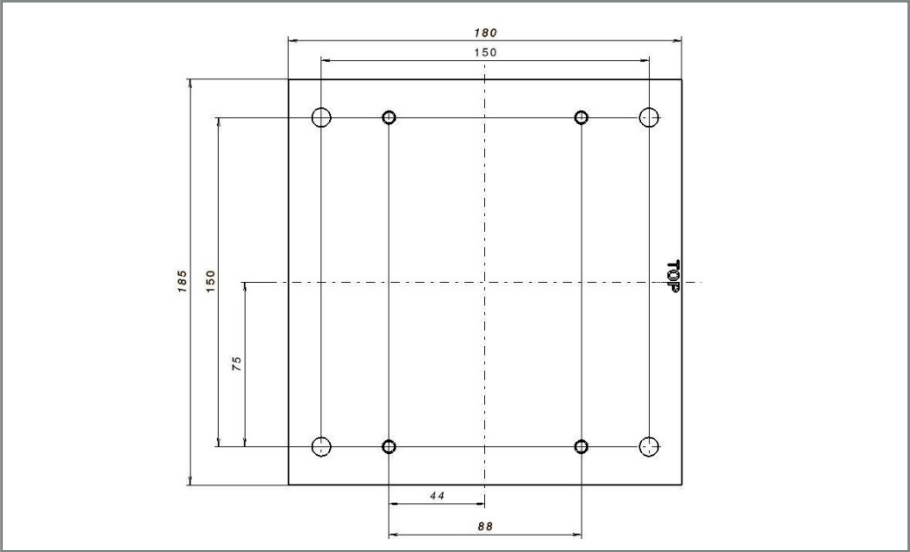


Fig. 56: Hole pattern for size D standard wall adapter plate

9.2 Foil keypad

As an option, the devices of the INVEOR family are also available as a variant with an integrated foil keypad. This keypad can be used to operate the drive controller locally.


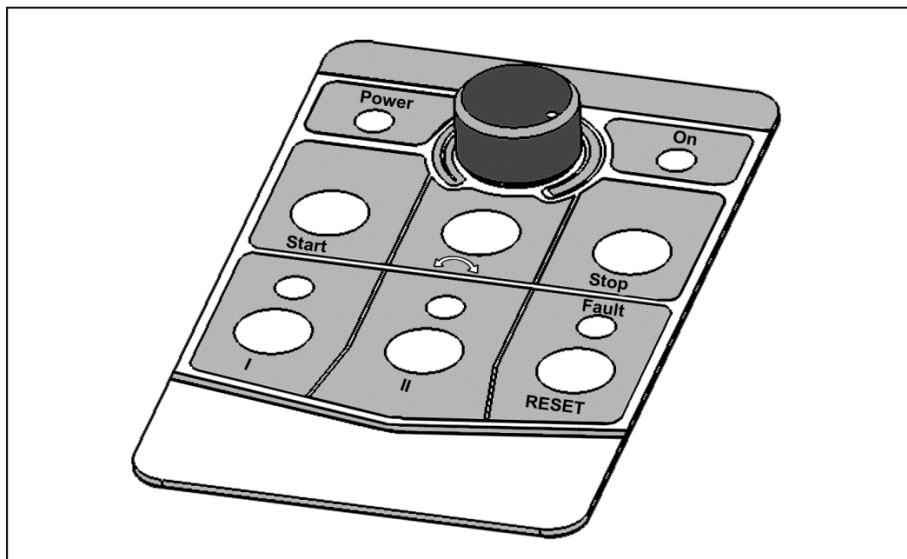


Fig. 57: Standard foil keypad

The following functionalities can be realised using the integrated foil keypad:

- **Target value specification:** A target value (parameter 1.130) can be specified using the potentiometer integrated in the foil keypad (select internal potentiometer).
- **Target value approval:** The start and stop keys integrated in the foil keypad (select foil keypad) can be used to approve the drive software (parameter 1.131).

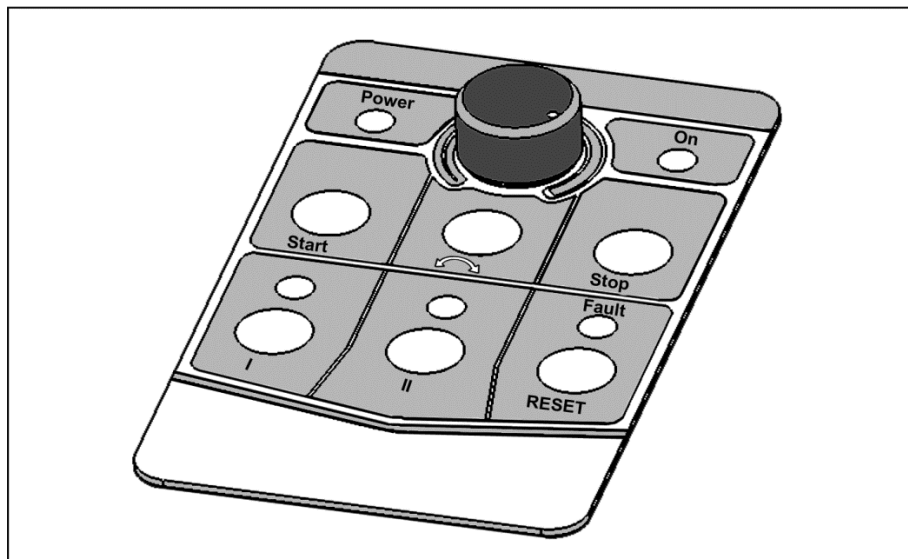


- **Direction of rotation V1:** The direction of rotation (parameter 1.150) can be changed using the key integrated in the foil keypad (select foil keypad, direction of rotation key). The direction of rotation can only be changed when the motor is running.

Direction of rotation V2: The direction of rotation (parameter 1.150) can be changed using keys I and II integrated in the foil keypad (select foil keypad, key I clockwise/key II anti-clockwise via stop).

The direction of rotation can only be changed when the motor is stationary.


The integrated LEDs indicate the current direction of rotation.

Direction of rotation V3: The direction of rotation (parameter 1.150) can be changed using keys I and II integrated in the foil keypad (select foil keypad, key I clockwise/key II anti-clockwise always). The direction of rotation can be changed when the motor is running and stationary. The integrated LEDs indicate the current direction of rotation.

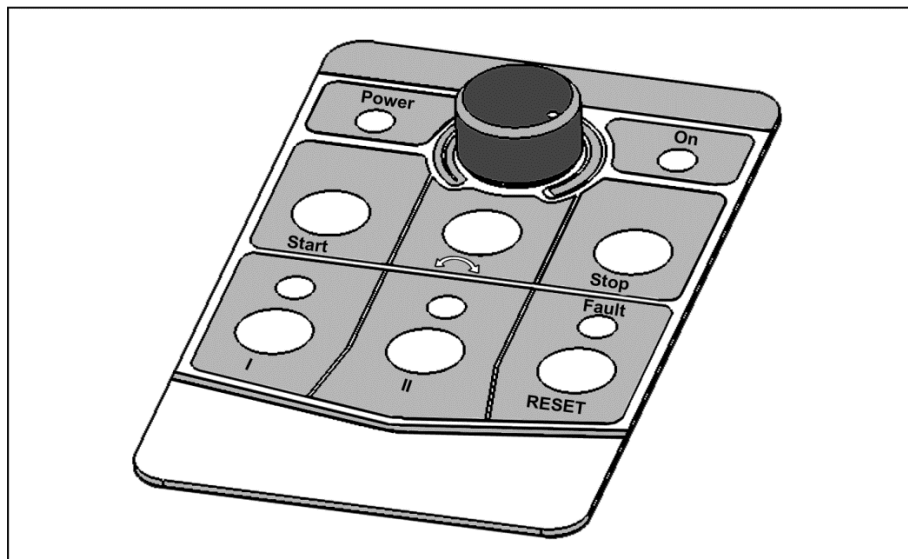

- **Acknowledgement function:** An error can be acknowledged (parameter 1.180) using the reset key integrated in the foil keypad (select foil keypad).
- **Motor potentiometer:** A motor potentiometer (parameter 2.150) can be realised using the configurable keys I and II integrated in the foil keypad (MOP digit.inp.). This function can be used to increase or decrease the target value. The integrated LEDs indicate when the minimum/maximum target value is reached.

To activate this function, the target value specification (parameter 1.130) must be set to motor potentiometer!

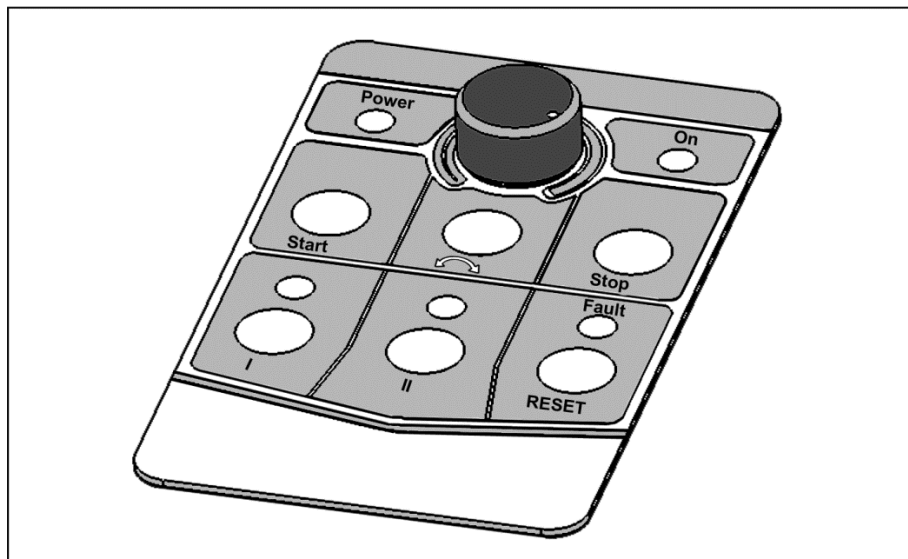

- **Fixed frequency:** Two fixed frequencies (parameter 2.050) can be realised using the configurable keys I and II integrated in the foil keypad (MOP digit.inp.). This function can be used to increase or decrease the target value.
The integrated LEDs indicate the target value currently selected.

The LEDs integrated in the foil keypad provide a general indication of the drive controllers.

| | |
|------------|---|
| Power LED: | Lights up as soon as there is a voltage supply. |
| On LED: | Lights up during operation. |
| Fault LED: | Lights up when there is an error. Flashes as soon as an error can be acknowledged. |



INFORMATION

To set parameters for these functions, you need PC software version 01.17 or higher.

9.3 MMI handheld controller including a 3 m RJ9 connection cable with M12 plug



IMPORTANT INFORMATION

The MMI handheld controller (part. no. 10004768) may only ever be used with an INVEOR!

The MMI handheld controller is connected to the integrated INVEOR M12 interface. This operating unit allows the user to write (program) and/or to visualise all the parameters of the INVEOR. Up to 8 complete data sets can be stored in an MMI and copied to other INVEORs. Complete commissioning is possible as an alternative to the free INVEORpc software. External signals are not needed.

9.4 PC communication cable USB on M12/RS485 plug (converter integrated)

As an alternative to the MMI handheld controller, an INVEOR can also be put into operation using the PC communication cable (part no. 10023950) and the INVEORpc software. The INVEORpc software is available free of charge from the KOSTAL homepage at <https://www.kostal-industrie-elektrik.com/en-gb/downloads/download-drives>.

10. Approvals, standards and guidelines

| | | |
|--------|---|-----|
| 10.1 | EMC limit classes | 180 |
| 10.2 | Classification acc. to IEC/EN 61800-3 | 180 |
| 10.3 | Standards and guidelines | 181 |
| 10.4 | UL approval | 182 |
| 10.4.1 | UL Specification (English version)..... | 182 |
| 10.4.2 | Homologation CL (Version en française)..... | 184 |

This chapter contains information about electromagnetic compatibility (EMC), and applicable guidelines, norms and standards.

For binding information about the relevant drive controller approvals, please refer to the relevant type plate!

10.1 EMC limit classes

Please note that EMC limit classes are only reached if the standard switching frequency of 8 kHz is complied with.

Depending on the installation material used and/or extreme ambient conditions, it might be necessary to use additional sheath wave filters (ferrite rings). If mounting on a wall, the shielded motor cable must not exceed a maximum length of 3m!

Wiring suitable for EMC also requires that EMC screw connections be used on both sides (drive controller and motor).



IMPORTANT INFORMATION

In a residential environment, this product can cause high-frequency disturbances that may require interference suppression measures.

10.2 Classification acc. to IEC/EN 61800-3

The generic standard defines test procedures and severity levels for every environment in the drive controller category; these have to be complied with.

Definition of environment

First environment (residential, commercial and industrial area):

All “areas” that are directly supplied by a public low-voltage connection, such as:

- residential area, e.g. houses, apartments etc.
- retail area, e.g. shops, supermarkets
- public institutions, e.g. theatres, stations
- outside areas, e.g. petrol stations and parking areas
- light industry, e.g. workshops, laboratories, small businesses

Second environment (industry):

Industrial environments with their own supply network that is separated from the public low-voltage supply by a transformer.

10.3 Standards and guidelines

The following specifically apply:

- Directive on Electromagnetic Compatibility
(Directive 2014/30/EU)
- Low Voltage Directive
(Directive 2014/35/EU)

10.4 UL approval

10.4.1 UL Specification (English version)

Maximum Ambient Temperature:

| Electronic | Adapter | Ambient | Suffix |
|-------------------|------------|---------|------------------------------------|
| INV M A IV02 PW02 | ADP MA WDM | 45° C | - |
| INV M A IV02 PW03 | ADP MA WDM | 45° C | - |
| INV M A IV02 PW04 | ADP MA WDM | 45° C | - |
| INV M A IV02 PW05 | ADP MA WDM | 40° C | - |
| INV M A IV02 PW90 | ADP MA WDM | - * | - |
| INV M A IV01 PW03 | ADP MA WDM | 40° C | - |
| INV M A IV01 PW04 | ADP MA WDM | 40° C | - |
| INV M A IV01 PW05 | ADP MA WDM | 40° C | - |
| INV M A IV01 PW06 | ADP MA WDM | 40° C | - |
| INV M B IV01 PW07 | ADP MB WDM | 45° C | - |
| INV M B IV01 PW08 | ADP MB WDM | 40° C | - |
| INV M B IV01 PW09 | ADP MB WDM | 35° C | - |
| INV M C IV01 PW10 | ADP MC WDM | 40° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW11 | ADP MC WDM | 35° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW96 | ADP MC WDM | 35° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW97 | ADP MC WDM | 20° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW10 | ADP MC WDM | 55° C | GH04, GH96, GH5x |
| INV M C IV01 PW11 | ADP MC WDM | 50° C | GH04, GH96, GH5x |
| INV M C IV01 PW96 | ADP MC WDM | 50° C | GH04, GH96, GH5x |
| INV M C IV01 PW10 | ADP MC WDM | 50° C | GH05, GH97, GH6x |
| INV M C IV01 PW11 | ADP MC WDM | 45° C | GH05, GH97, GH6x |
| INV M C IV01 PW96 | ADP MC WDM | 45° C | GH05, GH97, GH6x |
| INV M D IV01 PW12 | ADP MD WDM | 55° C | - |
| INV M D IV01 PW13 | ADP MD WDM | 50° C | - |
| INV M D IV01 PW14 | ADP MD WDM | 40° C | - |
| INV M D IV01 PW15 | ADP MD WDM | 35° C | - |

* depends on external cooling

Required Markings

Enclosure intended for use with field-installed conduit hubs, fittings or closure plates UL approved in accordance to UL514B and CSA certified in accordance to C22.2 No. 18, environmental Type 1 or higher.

Internal Overload Protection Operates within 60 seconds when reaching 150 % of the Motor Full Load Current

Short circuit current rating (SCCR)

Suitable for use on a circuit capable of delivering not more than 200 kA rms symmetrical amperes, 230 Volts for INV Mx IV02 or 480 Volts for INV Mx IV01, maximum when protected by fuses.

“Warning” – Use fuses rated 600 V/50 A for INV MA IV02 only.

“Warning” – Use fuses rated 600 V/10 A for INV MA IV01 only.

“Warning” – Use fuses rated 600 V/30 A for INV MB IV01 only.

“Warning” – Use fuses rated 600 V/30 A for INV MC IV01 only.

“Warning” – Use fuses rated 600 V/70 A for INV MD IV01 only.

CAUTION: Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the Manufacturer Instructions, National Electrical Code and any additional local codes.

All wiring terminals marked to indicate proper connections for the power supply, load and control circuitry.

The tightening, torque to connect the motor terminals, is 26.55 lb/in (size A to C) and 5.31 lb/in to connect the PTC (in all sizes).

Instruction for operator and servicing instructions on how to mount and connect the products using the intended motor connection adapter, please see chapter 3.3 and 9.1 in the operating manual.

CAUTION: Use 75° C copper wires only.

Drives do not provide over temperature sensing.

CAUTION: For Mx IV01 used in Canada: TRANSIENT SURGE SUPPRESSION SHALL BE INSTALLED ON THE LINE SIDE OF THIS EQUIPMENT AND SHALL BE RATED 277 V (PHASE TO GROUND), 480 V (PHASE TO PHASE), SUITABLE FOR OVERVOLTAGE CATEGORY III, AND SHALL PROVIDE PROTECTION FOR A RATED IMPULSE WITHSTAND VOLTAGE PEAK OF 2.5 kV

The Type of branch circuit protection devices used for BREAKDOWN OF COMPONENT TEST is Nonrenewable Cartridge Fuse, Class _RK5.

As RK5 is the worst Case Type, any other Type can be used.

10.4.2 Homologation CL (Version en française)

Température ambiante maximale:

| Électronique | Adaptateur | Ambiente | Suffixe |
|-------------------|------------|----------|---------------------------------------|
| INV M A IV02 PW02 | ADP MA WDM | 45° C | - |
| INV M A IV02 PW03 | ADP MA WDM | 45° C | - |
| INV M A IV02 PW04 | ADP MA WDM | 45° C | - |
| INV M A IV02 PW05 | ADP MA WDM | 40° C | - |
| INV M A IV02 PW90 | ADP MA WDM | - * | - |
| INV M A IV01 PW03 | ADP MA WDM | 40° C | - |
| INV M A IV01 PW04 | ADP MA WDM | 40° C | - |
| INV M A IV01 PW05 | ADP MA WDM | 40° C | - |
| INV M A IV01 PW06 | ADP MA WDM | 40° C | - |
| INV M B IV01 PW07 | ADP MB WDM | 45° C | - |
| INV M B IV01 PW08 | ADP MB WDM | 40° C | - |
| INV M B IV01 PW09 | ADP MB WDM | 35° C | - |
| INV M C IV01 PW10 | ADP MC WDM | 40° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW11 | ADP MC WDM | 35° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW96 | ADP MC WDM | 35° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW97 | ADP MC WDM | 20° C | GH01, GH02, GH07, GH93, GH95, GH4x |
| INV M C IV01 PW10 | ADP MC WDM | 55° C | GH04, GH96, GH5x |
| INV M C IV01 PW11 | ADP MC WDM | 50° C | GH04, GH96, GH5x |
| INV M C IV01 PW96 | ADP MC WDM | 50° C | GH04, GH96, GH5x |
| INV M C IV01 PW10 | ADP MC WDM | 50° C | GH05, GH97, GH6x |
| INV M C IV01 PW11 | ADP MC WDM | 45° C | GH05, GH97, GH6x |
| INV M C IV01 PW96 | ADP MC WDM | 45° C | GH05, GH97, GH6x |
| INV M D IV01 PW12 | ADP MD WDM | 55° C | - |
| INV M D IV01 PW13 | ADP MD WDM | 50° C | - |
| INV M D IV01 PW14 | ADP MD WDM | 40° C | - |
| INV M D IV01 PW15 | ADP MD WDM | 35° C | - |

* dépend du refroidissement externe

Mentions requises

Boîtier prévu pour une utilisation avec entrées de conduit fileté installées sur le terrain, raccords ou plaques d'obturation approuvées UL conformément à UL514B et certifiées CSA conformément à C22.2 No. 18, étiquetage environnemental de type 1 ou plus.

La protection interne contre les surcharges se met en marche en l'espace de 60 secondes une fois 150 % du courant nominal du moteur atteints

Short circuit current rating (SCCR)

Convient pour une utilisation sur un circuit capable de livrer pas plus de 200 kA ampères symétriques rms, 230 volts pour INV Mx IV02 ou 480 volts pour INV Mx IV01 maximum en cas de protection par fusibles.

- « Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/50 A pour INV MA IV02 uniquement.
- « Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/10 A pour INV MA IV01 uniquement.
- « Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/30 A pour INV MB IV01 uniquement.
- « Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/30 A pour INV MC IV01 uniquement.
- « Avertissement » – Utiliser des fusibles d'une valeur nominale de 600 V/70 A pour INV MD IV01 uniquement.

La protection intégrée contre les courts-circuits à semi-conducteur n'assure pas la protection du circuit de dérivation. Le circuit de dérivation doit être protégé conformément aux instructions du fabricant, au code national d'électricité et à tout autre code local additionnel.

Toutes les bornes de câblage avec repères pour les connexions correctes pour l'alimentation électrique, la charge et les circuits de commande.

Le couple de serrage pour la connexion des bornes du moteur est de 26,55 lb/in (taille A à C) et de 5,31 lb/in pour la connexion CTP (toutes les tailles).

Pour les instructions destinées à l'opérateur et les instructions de service relatives au montage et à la connexion des produits à l'aide de l'adaptateur de connexion du moteur prévu à cet effet, voir les chapitres 3.3 et 9.1 contenus dans le Manuel d'utilisation.

Utiliser uniquement des câbles en cuivre 75° C.

Les entraînements ne permettent pas la détection de surtempérature.

Concernant le Mx IV01 utilisé au Canada : LA SUPPRESSION DE TENSION TRANSITOIRE DOIT ÊTRE INSTALLÉE CÔTÉ LIGNE DE CET ÉQUIPEMENT ET AVOIR UNE VALEUR NOMINALE DE 277 V (PHASE-TERRE), 480 V (PHASE-PHASE), EN COMPATIBILITÉ AVEC LA CATÉGORIE DE SURTENSION III, ET DOIT OFFRIR UNE PROTECTION CONTRE UN PIC DE TENSION ASSIGNÉE DE TENUE AUX CHOCS DE 2,5 kV

Le fusible cartouche à usage unique de classe RK5 est le type de dispositifs de protection des circuits de dérivation utilisé pour l'ESSAI DE PANNE DES COMPOSANTS.

RK5 étant le type employé dans les scénarios catastrophes, n'importe quel autre type peut être utilisé.

11. Quickstart guide

| | | |
|------|--|-----|
| 11.1 | Quickstart guide..... | 187 |
| 11.2 | Quickstart guide for synchronous motors..... | 188 |

11.1 Quickstart guide

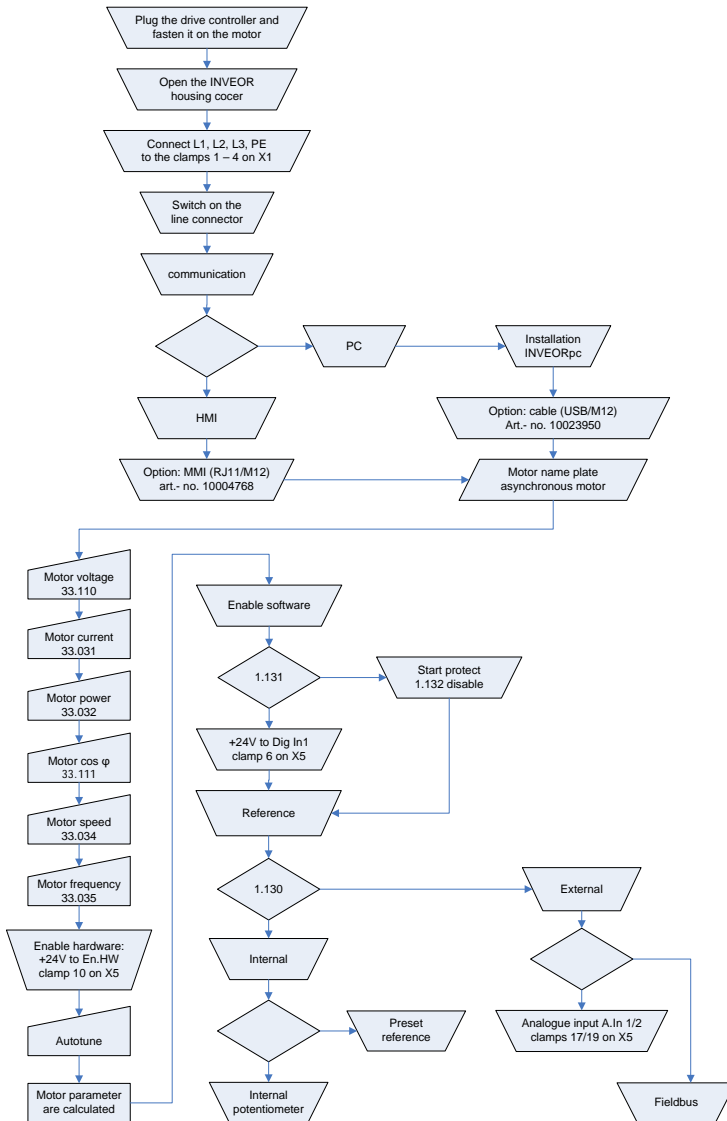


Fig. 58: Block diagram for quick start ASM

11.2 Quickstart guide for synchronous motors

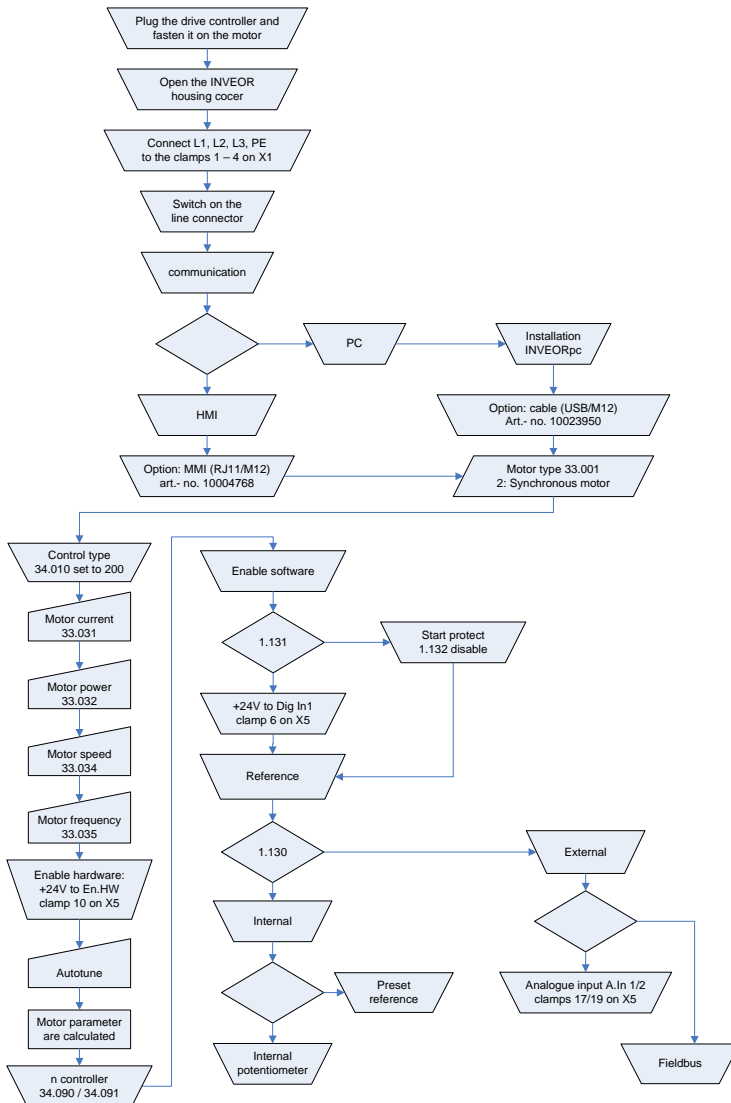


Fig. 59: Block diagram for quick start

12. Index

A

| | |
|--|----------|
| Acknowledge function | 107 |
| Ambient conditions | 31 |
| Ambient temperature | 162 |
| Analogue input | 59, 117 |
| Analogue output | 59, 121 |
| Application parameters | 100 |
| Automatic acknowledgement function | 107, 108 |

B

| | |
|----------------------|----|
| Block diagram | 90 |
| Brake chopper | 57 |
| Brake resistor | 57 |

C

| | |
|--|---------|
| Cable screw connections | 31, 58 |
| Cable shoes | 36, 69 |
| Catch time | 143 |
| CE marking | 15 |
| Commissioning | 86, 186 |
| Commissioning steps | 91 |
| Communication | 88 |
| Connection diagram | 64 |
| Control connections | 57 |
| Control connections of the basic application board | 63 |
| Control method | 142 |
| Control terminals (sizes A – D) | 37 |
| Controller data | 142 |
| Convection | 65 |

D

Derating 162

Digital input..... 60, 63, 120

Digital output 61, 63, 122

E

Electrical connection 51

EMC limit classes 179

EMC screw connections 180

EMC standard..... 179

Enable software 104

Energy-saving function 97

Error detection..... 148, 155

Excess temperature..... 152, 153, 154

External fault..... 130

F

Factory setting 99

Fan..... 31

FI protection switch 19

Field bus 135

Field weakening..... 146

Fieldbus address 135

Fixed frequency 98

Flying restart..... 143

Foil keypad 174

Frequency 59

Frequency setting mode..... 95

G

Gearbox factor 131

General technical data for 230 V devices 160

General technical data for 400V devices 159

Grid connection 51

Ground protection 36

I

I^2t limit 141

Information about commissioning 19

Installation..... 32, 65, 171

Installation altitude..... 31, 164

Instructions concerning operation 20

L

Label on the drive controller 13

Leakage inductance..... 139

LED flash codes..... 150

Legal notice 2

M

| | |
|--|----------|
| Mains activations | 21 |
| Maximum frequency | 100 |
| Mechanical installation of size D | 45, 71 |
| Mechanical installation of sizes A - C | 40, 66 |
| Minimum frequency | 100 |
| MMI | 88, 178 |
| Model description | 25 |
| Motor | 27 |
| Motor adapter plates | 167 |
| Motor cos phi | 140 |
| Motor current | 138 |
| Motor current limit | 130 |
| Motor frequency | 139 |
| Motor phases monitoring | 138 |
| Motor potentiometer | 110 |
| Motor rating | 138 |
| Motor speed | 139 |
| Motor voltage | 137, 140 |

O

| | |
|----------------------------|----------|
| Operating mode | 103 |
| Optional accessories | 166 |
| Overcurrent | 154 |
| Overload | 151, 153 |
| Overvoltage | 151, 153 |

P

| | |
|--|---------|
| Parameter set | 151 |
| Parameter set change..... | 133 |
| Parameterisation..... | 8, 91 |
| Parameters | 94 |
| PC cable | 178 |
| Performance parameters | 137 |
| PID inverted | 96, 113 |
| PID process control | 96 |
| PID process controller | 112 |
| Power connection for size D..... | 54 |
| Power connection for sizes A - C | 51 |
| Power connections (size D)..... | 39 |
| Power connections (sizes A – C)..... | 38 |

Q

| | |
|-------------------------------------|-----|
| Quadratic characteristic curve..... | 145 |
| Quickstart guide | 186 |

R

| | |
|--------------------------|-------------|
| Ramp | 100, 102 |
| Relay | 61, 62, 124 |
| Repairs..... | 23 |
| Rotation direction | 106 |
| Rotation speed | 139 |

S

Safety instructions 16, 30

Set bus time-out 136

Set field bus baud rate..... 135

Short circuit current rating (SCCR) 183, 185

Slip..... 144

SM start-up procedure 147

Speed controller..... 143

Stall detection..... 132

Standards 181

Star connection variant..... 35

Start protection..... 105

Stator inductance 137, 140, 141

Stator resistance..... 139

Switching frequency 142, 165

Synchronous motor controller data 146

System error 151

T

Target value source 103

Technical data 158

Transport & storage 18

Triangle connection variant..... 34

U

UL 182

Undervoltage 151, 153

W

Wall adapter plates..... 171

Wiring instructions 37

Notes



KOSTAL

KOSTAL Industrie Elektrik GmbH
Lange Eck 11
58099 Hagen
Germany

Service-Hotline: +49 2331 8040-848

TVT AMERICA llc

125 Industrial Park Drive Hollister, MO 65672

Ph/Fx: 866 285 5055
Mail: info@tvtagerica.com
Web: www.tvtagerica.com
Skype: tvtagerica

www.tvtagerica.com